
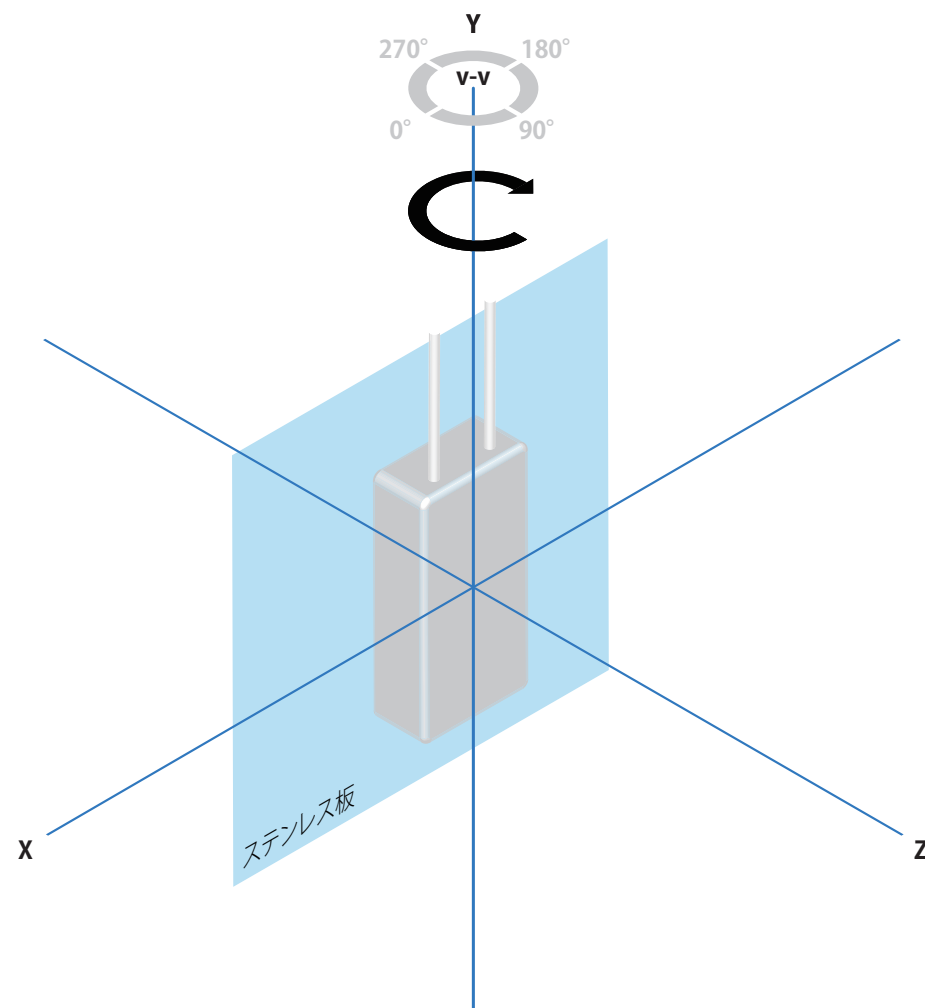


FMSP800W-H2.5M-WPMIMO (ステンレス板上)

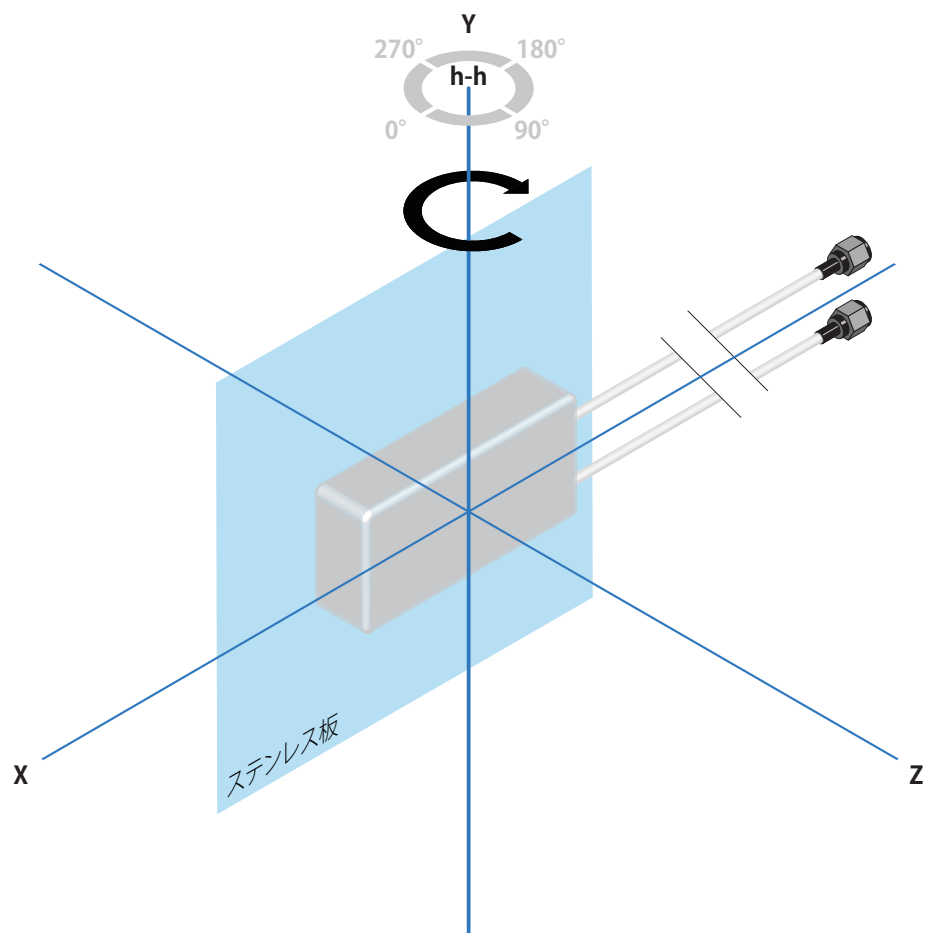


m815MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-10.23	-26.47	-10.13	-14.24	-8.95	-7.82
	-9.67	-26.24	-9.58	-13.62	-8.69	-7.48
	-8.95	-25.87	-8.86	-14.58	-8.41	-7.47
	-8.19	-25.32	-8.11	-14.40	-8.09	-7.18
	-7.36	-24.44	-7.27	-15.63	-7.80	-7.14
30	-6.64	-23.45	-6.55	-15.32	-7.50	-6.83
	-5.90	-22.37	-5.81	-16.47	-7.16	-6.68
	-5.49	-21.36	-5.38	-15.83	-6.85	-6.33
	-5.10	-20.22	-4.96	-16.27	-6.54	-6.10
	-5.03	-19.14	-4.87	-15.29	-6.28	-5.76
60	-5.04	-18.11	-4.83	-15.07	-6.02	-5.51
	-5.45	-17.09	-5.16	-14.06	-5.78	-5.18
	-5.74	-16.18	-5.37	-13.44	-5.58	-4.92
	-6.48	-15.26	-5.94	-12.57	-5.40	-4.64
	-6.72	-14.46	-6.04	-12.02	-5.22	-4.40
90	-7.51	-13.73	-6.58	-11.48	-5.14	-4.23
	-7.77	-13.02	-6.63	-11.24	-5.05	-4.11
	-8.78	-12.33	-7.19	-11.41	-5.03	-4.13
	-9.29	-11.73	-7.33	-11.67	-5.08	-4.22
	-10.08	-11.19	-7.59	-12.21	-5.15	-4.37
120	-9.75	-10.66	-7.17	-12.57	-5.26	-4.52
	-9.38	-10.22	-6.77	-13.73	-5.43	-4.83
	-8.26	-9.82	-5.96	-15.02	-5.60	-5.13
	-8.12	-9.40	-5.70	-17.33	-5.89	-5.59
	-8.22	-9.13	-5.64	-18.94	-6.18	-5.95
150	-9.56	-8.82	-6.17	-19.18	-6.51	-6.28
	-11.18	-8.54	-6.65	-17.19	-6.91	-6.52
	-13.80	-8.35	-7.26	-15.03	-7.37	-6.68
	-15.61	-8.17	-7.45	-13.04	-7.83	-6.69
	-15.81	-8.01	-7.35	-11.48	-8.32	-6.61
180	-14.94	-7.92	-7.13	-10.34	-8.83	-6.51
	-14.58	-7.86	-7.02	-9.47	-9.36	-6.41
	-14.99	-7.83	-7.07	-8.86	-9.93	-6.35
	-16.16	-7.82	-7.22	-8.45	-10.44	-6.32
	-17.96	-7.86	-7.45	-8.21	-10.88	-6.33
210	-19.27	-7.92	-7.62	-7.96	-11.32	-6.31
	-18.00	-8.02	-7.61	-7.82	-11.74	-6.34
	-15.41	-8.16	-7.41	-30.44	-11.79	-11.73
	-13.93	-8.29	-7.24	-31.46	-11.89	-11.84
	-12.64	-8.45	-7.05	-30.25	-11.83	-11.77
240	-10.87	-8.62	-6.59	-25.22	-11.67	-11.48
	-9.52	-8.91	-6.20	-20.75	-11.28	-10.81
	-8.02	-9.11	-5.52	-17.82	-11.00	-10.18
	-6.93	-9.36	-4.97	-15.56	-10.67	-9.45
	-5.78	-9.59	-4.27	-14.24	-10.22	-8.77
270	-5.32	-9.90	-4.02	-13.38	-9.82	-8.24
	-5.07	-10.22	-3.92	-12.79	-9.36	-7.74
	-5.91	-10.65	-4.65	-12.52	-9.01	-7.41
	-7.16	-10.97	-5.65	-12.41	-8.71	-7.17
	-10.01	-11.34	-7.61	-12.59	-8.46	-7.04
300	-13.90	-11.84	-9.74	-13.03	-8.18	-6.95
	-21.03	-12.25	-11.71	-14.21	-7.96	-7.04
	-20.46	-12.74	-12.06	-15.84	-7.77	-7.14
	-16.52	-13.23	-11.56	-17.35	-7.66	-7.21
	-16.15	-13.74	-11.77	-17.72	-7.64	-7.24
330	-18.86	-14.32	-13.01	-17.51	-7.58	-7.16
	-24.13	-14.95	-14.45	-17.44	-7.67	-7.23
	-21.43	-15.60	-14.59	-16.63	-7.74	-7.21
	-15.23	-16.30	-12.72	-15.68	-7.82	-7.16
	-11.60	-17.02	-10.51	-14.21	-8.01	-7.08
	-9.68	-17.89	-9.07	-13.34	-8.08	-6.95
	-8.46	-18.70	-8.07	-12.54	-8.26	-6.89
	-7.86	-19.62	-7.58	-12.09	-8.40	-6.85
	-7.66	-20.70	-7.44	-11.63	-8.55	-6.82
	-7.75	-21.70	-7.58	-11.37	-8.77	-6.86
	-8.36	-22.90	-8.21	-10.93	-8.86	-6.76
	-9.08	-24.17	-8.95	-10.75	-8.92	-6.73
	-10.41	-25.28	-10.27	-10.29	-8.98	-6.58
	-11.74	-26.56	-11.60	-10.28	-9.03	-6.60
	-13.69	-27.78	-13.52	-10.09	-9.05	-6.52
	-15.00	-28.83	-14.82	-10.27	-9.01	-6.59
	-16.50	-29.84	-16.31	-10.12	-8.90	-6.46

ピーク値	-5.03	-7.82	-3.92	-7.82	-5.03	-4.11
平均値	-9.15	-11.73	-7.24	-12.81	-7.74	-6.56

平均化

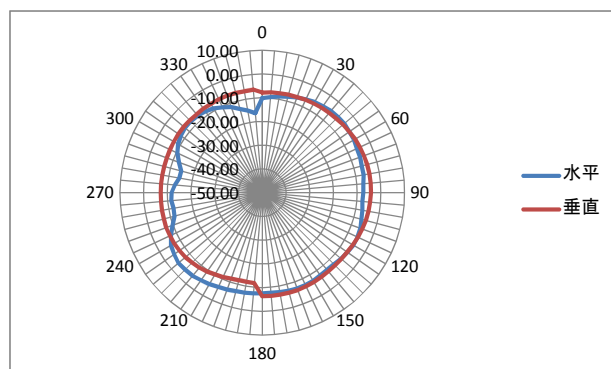


ピーク値	水平平均	垂直平均	平均化利得
-3.92	-7.24	-6.56	-6.56 dBi

m830MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-10.25	-6.98	-5.31	-6.98	-6.72	-3.84
	-9.37	-6.99	-5.01	-7.07	-6.39	-3.71
	-8.18	-6.99	-4.54	-7.18	-6.08	-3.58
	-7.13	-7.07	-4.09	-7.36	-5.79	-3.49
	-5.82	-7.27	-3.47	-7.51	-5.45	-3.35
30	-4.87	-7.43	-2.96	-7.76	-5.18	-3.27
	-3.91	-7.71	-2.40	-7.94	-4.87	-3.13
	-3.37	-8.02	-2.09	-8.52	-4.59	-3.11
	-2.91	-8.43	-1.84	-9.14	-4.34	-3.10
	-2.98	-8.79	-1.97	-10.28	-4.11	-3.17
60	-3.13	-9.37	-2.20	-11.56	-3.84	-3.16
	-3.74	-9.87	-2.79	-13.58	-3.62	-3.20
	-4.32	-10.51	-3.38	-16.21	-3.43	-3.21
	-5.35	-11.09	-4.32	-20.68	-3.27	-3.19
	-5.99	-11.86	-4.99	-26.01	-3.12	-3.10
90	-7.16	-12.59	-6.06	-22.34	-3.04	-2.99
	-7.71	-13.31	-6.65	-18.47	-2.98	-2.86
	-8.70	-14.11	-7.60	-16.42	-2.93	-2.74
	-8.77	-14.89	-7.82	-15.28	-2.91	-2.67
	-8.94	-15.57	-8.08	-13.57	-2.96	-2.60
120	-8.18	-16.21	-7.55	-11.20	-3.03	-2.42
	-7.60	-16.59	-7.08	-9.12	-3.15	-2.17
	-6.66	-16.74	-6.25	-7.81	-3.26	-1.95
	-6.56	-16.71	-6.16	-7.46	-3.44	-1.99
	-6.73	-16.49	-6.29	-7.56	-3.67	-2.18
150	-8.13	-16.14	-7.49	-8.23	-3.88	-2.52
	-10.39	-15.70	-9.27	-9.04	-4.19	-2.96
	-14.36	-15.23	-11.77	-10.09	-4.51	-3.45
	-17.93	-14.80	-13.08	-11.50	-4.86	-4.01
	-15.79	-14.38	-12.02	-13.54	-5.25	-4.65
180	-13.05	-13.96	-10.47	-16.39	-5.62	-5.27
	-11.95	-13.65	-9.71	-20.53	-5.98	-5.83
	-11.83	-13.38	-9.53	-27.61	-6.38	-6.35
	-12.84	-13.12	-9.97	-33.58	-6.78	-6.77
	-14.01	-12.96	-10.45	-26.90	-7.15	-7.10
210	-14.97	-12.86	-10.78	-24.81	-7.40	-7.32
	-14.45	-12.82	-10.55	-24.57	-7.75	-7.66
	-11.47	-12.83	-9.09	-7.33	-7.99	-4.64
	-10.35	-12.84	-8.41	-7.31	-8.15	-4.70
	-9.37	-13.03	-7.81	-7.38	-8.31	-4.81
240	-7.86	-13.19	-6.74	-7.73	-8.34	-5.01
	-6.75	-13.55	-5.93	-8.16	-8.36	-5.25
	-5.42	-13.90	-4.85	-8.85	-8.27	-5.54
	-4.63	-14.32	-4.19	-9.82	-8.21	-5.93
	-3.90	-14.83	-3.56	-11.34	-8.09	-6.40
270	-3.87	-15.48	-3.58	-13.01	-7.91	-6.74
	-4.09	-16.19	-3.83	-15.38	-7.70	-7.02
	-5.38	-17.07	-5.09	-17.14	-7.53	-7.08
	-7.19	-18.19	-6.86	-16.83	-7.34	-6.88
	-11.11	-19.51	-10.52	-14.60	-7.18	-6.46
300	-16.46	-21.11	-15.18	-12.35	-7.00	-5.89
	-20.04	-23.13	-18.31	-10.88	-6.84	-5.40
	-16.10	-25.17	-15.59	-9.95	-6.72	-5.03
	-13.98	-26.92	-13.77	-9.69	-6.69	-4.92
	-15.14	-26.71	-14.85	-9.66	-6.62	-4.87
330	-19.75	-24.49	-18.49	-10.01	-6.55	-4.94
	-40.22	-22.03	-21.96	-10.34	-6.57	-5.05
	-19.65	-19.77	-16.70	-10.70	-6.58	-5.16
	-14.16	-18.00	-12.66	-11.06	-6.57	-5.25
	-10.86	-16.30	-9.77	-11.68	-6.59	-5.42
	-9.12	-14.89	-8.10	-12.42	-6.66	-5.64
	-7.79	-13.78	-6.81	-12.96	-6.74	-5.81
	-6.99	-12.80	-5.98	-13.46	-6.80	-5.95
	-6.66	-12.08	-5.56	-13.16	-6.78	-5.88
	-6.62	-11.29	-5.35	-13.57	-6.78	-5.95
	-7.18	-10.61	-5.56	-12.80	-6.79	-5.81
	-7.92	-10.10	-5.86	-12.93	-6.70	-5.77
	-9.36	-9.62	-6.48	-11.73	-6.65	-5.48
	-10.88	-9.30	-7.01	-12.02	-6.59	-5.50
	-12.85	-8.97	-7.48	-11.26	-6.46	-5.22
	-13.72	-8.72	-7.53	-11.95	-6.32	-5.27
	-13.93	-8.57	-7.46	-11.71	-6.17	-5.10

ピーク値	-2.91	-6.98	-1.84	-6.98	-2.91	-1.95
平均値	-7.72	-11.92	-6.32	-10.76	-5.51	-4.38

平均化

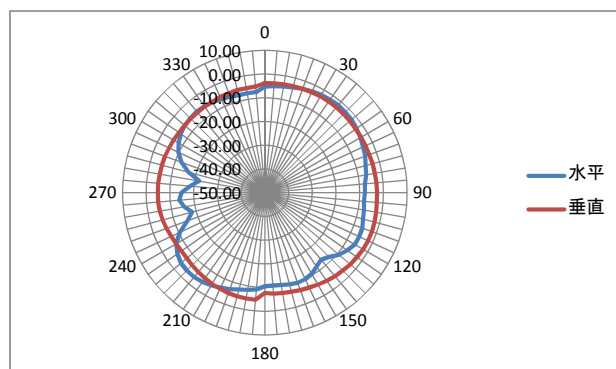


ピーク値	水平平均	垂直平均	平均化利得
-1.84	-6.32	-4.38	-4.38 dBi

m845MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-10.13	-6.74	-5.10	-6.86	-7.45	-4.13
	-9.01	-6.78	-4.74	-7.12	-7.02	-4.06
	-7.66	-6.89	-4.25	-7.09	-6.64	-3.85
	-6.54	-7.06	-3.78	-7.00	-6.33	-3.64
	-5.34	-7.36	-3.22	-6.78	-5.94	-3.33
30	-4.54	-7.52	-2.77	-6.74	-5.62	-3.14
	-3.67	-7.84	-2.26	-6.80	-5.27	-2.96
	-3.26	-8.19	-2.05	-7.13	-4.92	-2.88
	-2.88	-8.50	-1.83	-7.82	-4.60	-2.91
	-2.95	-8.95	-1.98	-8.80	-4.32	-3.00
60	-3.15	-9.39	-2.22	-9.76	-4.04	-3.01
	-3.75	-9.92	-2.81	-10.69	-3.80	-2.99
	-4.38	-10.53	-3.43	-11.42	-3.56	-2.90
	-5.36	-11.11	-4.33	-12.83	-3.36	-2.89
	-6.11	-11.80	-5.07	-14.42	-3.18	-2.86
90	-7.26	-12.57	-6.14	-14.90	-3.10	-2.82
	-7.93	-13.38	-6.84	-13.19	-2.98	-2.58
	-9.24	-14.30	-8.07	-11.38	-2.88	-2.31
	-9.82	-15.44	-8.76	-10.71	-2.88	-2.22
	-10.01	-16.88	-9.19	-10.90	-2.89	-2.26
120	-8.69	-18.18	-8.23	-11.09	-2.95	-2.33
	-7.54	-20.09	-7.30	-10.68	-3.02	-2.34
	-6.49	-22.43	-6.38	-9.56	-3.19	-2.29
	-6.52	-25.21	-6.46	-9.09	-3.31	-2.29
	-6.98	-30.05	-6.96	-9.18	-3.57	-2.52
150	-8.54	-39.80	-8.54	-9.87	-3.83	-2.86
	-11.21	-34.25	-11.19	-10.47	-4.12	-3.22
	-15.54	-27.63	-15.28	-11.31	-4.50	-3.68
	-20.10	-23.62	-18.50	-12.21	-4.84	-4.11
	-17.02	-20.91	-15.53	-13.92	-5.31	-4.75
180	-13.77	-19.08	-12.65	-16.59	-5.73	-5.39
	-12.39	-17.63	-11.25	-20.92	-6.22	-6.07
	-11.84	-16.44	-10.55	-28.92	-6.70	-6.67
	-12.41	-15.37	-10.63	-30.59	-7.21	-7.19
	-13.12	-14.64	-10.81	-24.08	-7.72	-7.62
210	-14.22	-13.89	-11.04	-21.39	-8.24	-8.04
	-14.17	-13.40	-10.76	-20.34	-8.75	-8.45
	-10.99	-13.00	-8.87	-8.17	-9.09	-5.60
	-9.78	-12.67	-7.98	-8.46	-9.49	-5.94
	-8.78	-12.46	-7.23	-8.81	-9.76	-6.25
240	-7.51	-12.37	-6.29	-9.13	-9.94	-6.51
	-6.57	-12.38	-5.56	-9.52	-10.04	-6.76
	-5.62	-12.51	-4.81	-10.13	-10.01	-7.06
	-5.07	-12.80	-4.39	-10.80	-9.91	-7.32
	-4.60	-13.16	-4.03	-11.92	-9.75	-7.69
270	-4.62	-13.62	-4.10	-13.39	-9.45	-7.98
	-4.90	-14.35	-4.43	-15.33	-9.17	-8.23
	-6.09	-15.21	-5.59	-16.88	-8.91	-8.26
	-7.81	-16.31	-7.23	-15.91	-8.59	-7.85
	-11.63	-17.97	-10.72	-14.58	-8.36	-7.43
300	-16.90	-19.83	-15.11	-12.95	-8.11	-6.88
	-22.81	-22.65	-19.72	-11.95	-7.91	-6.47
	-18.83	-27.33	-18.26	-10.86	-7.74	-6.01
	-16.00	-43.81	-15.99	-10.34	-7.62	-5.76
	-17.28	-33.75	-17.18	-10.22	-7.52	-5.65
330	-22.61	-25.46	-20.79	-10.42	-7.49	-5.70
	-32.98	-21.18	-20.90	-10.27	-7.47	-5.64
	-16.75	-18.48	-14.52	-9.65	-7.49	-5.43
	-12.15	-16.58	-10.81	-9.23	-7.58	-5.32
	-9.26	-14.96	-8.22	-8.89	-7.64	-5.21
	-7.94	-13.79	-6.93	-9.30	-7.68	-5.40
	-7.13	-12.70	-6.07	-9.75	-7.79	-5.65
	-6.90	-11.91	-5.71	-11.16	-7.90	-6.22
	-7.08	-11.23	-5.67	-11.92	-7.94	-6.48
	-7.52	-10.65	-5.80	-13.83	-7.99	-6.98
	-8.38	-10.18	-6.18	-13.84	-7.97	-6.97
	-9.38	-9.90	-6.62	-14.88	-7.93	-7.13
	-10.82	-9.55	-7.13	-13.40	-7.91	-6.82
	-12.18	-9.35	-7.53	-13.57	-7.75	-6.74
	-13.64	-9.25	-7.90	-11.97	-7.64	-6.28
	-13.47	-9.13	-7.77	-12.06	-7.46	-6.17
	-12.71	-9.17	-7.58	-11.09	-7.22	-5.73

ピーク値	-2.88	-6.74	-1.83	-6.74	-2.88	-2.22
平均値	-7.85	-12.09	-6.46	-10.59	-5.98	-4.69

平均化

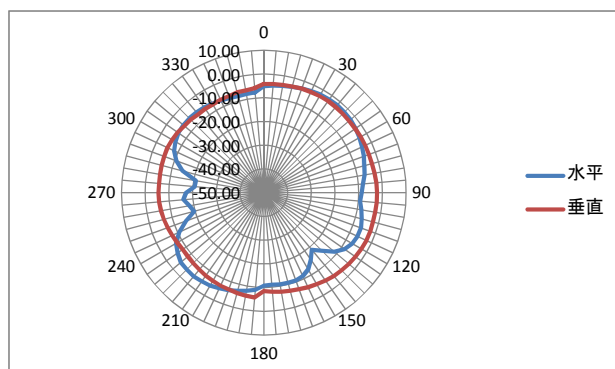


ピーク値	水平平均	垂直平均	平均化利得
-1.83	-6.46	-4.69	-4.69 dBi

m860MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-9.49	-5.06	-3.72	-6.23	-7.86	-3.96
	-8.49	-5.08	-3.45	-5.89	-7.47	-3.60
	-7.27	-5.10	-3.04	-5.52	-7.06	-3.21
	-6.22	-5.18	-2.66	-5.26	-6.66	-2.89
	-4.97	-5.31	-2.13	-5.06	-6.22	-2.59
30	-4.22	-5.47	-1.79	-5.09	-5.85	-2.44
	-3.36	-5.72	-1.37	-5.25	-5.48	-2.35
	-3.02	-5.98	-1.24	-5.56	-5.07	-2.30
	-2.72	-6.33	-1.15	-5.78	-4.77	-2.23
	-2.83	-6.73	-1.35	-6.18	-4.42	-2.20
60	-3.12	-7.06	-1.65	-6.68	-4.10	-2.19
	-3.71	-7.59	-2.22	-7.90	-3.82	-2.38
	-4.58	-8.18	-3.00	-9.79	-3.57	-2.64
	-5.69	-8.75	-3.94	-13.17	-3.33	-2.90
	-6.83	-9.46	-4.94	-18.41	-3.14	-3.01
90	-8.15	-10.17	-6.03	-23.77	-2.98	-2.95
	-8.71	-10.96	-6.68	-21.96	-2.85	-2.80
	-9.70	-11.92	-7.66	-18.58	-2.77	-2.66
	-9.83	-13.00	-8.12	-15.48	-2.73	-2.51
	-10.24	-14.17	-8.77	-12.55	-2.72	-2.29
120	-8.85	-15.52	-8.00	-10.67	-2.77	-2.11
	-7.67	-17.13	-7.20	-9.84	-2.83	-2.04
	-6.14	-19.04	-5.92	-9.38	-2.94	-2.05
	-5.89	-21.30	-5.77	-9.02	-3.12	-2.13
	-6.09	-24.21	-6.02	-8.40	-3.32	-2.14
150	-7.50	-27.18	-7.46	-8.35	-3.57	-2.32
	-10.00	-28.23	-9.94	-8.46	-3.82	-2.54
	-14.61	-26.19	-14.32	-9.12	-4.19	-2.98
	-22.21	-23.30	-19.71	-9.74	-4.54	-3.39
	-18.75	-20.80	-16.64	-10.77	-4.91	-3.90
180	-13.85	-18.89	-12.67	-12.14	-5.33	-4.51
	-11.90	-17.47	-10.84	-14.39	-5.76	-5.20
	-11.02	-16.16	-9.86	-17.92	-6.18	-5.90
	-11.27	-15.13	-9.78	-23.63	-6.63	-6.54
	-11.81	-14.34	-9.88	-31.05	-7.08	-7.07
210	-12.55	-13.67	-10.06	-26.58	-7.46	-7.41
	-12.50	-13.08	-9.77	-22.80	-7.93	-7.79
	-12.80	-12.70	-9.74	-7.10	-8.23	-4.62
	-11.53	-12.40	-8.93	-6.99	-8.59	-4.71
	-10.32	-12.16	-8.13	-6.84	-8.87	-4.73
240	-8.93	-12.20	-7.25	-6.63	-9.13	-4.69
	-7.82	-12.12	-6.45	-6.60	-9.28	-4.73
	-6.76	-12.29	-5.69	-6.78	-9.43	-4.90
	-5.94	-12.54	-5.08	-7.34	-9.43	-5.25
	-5.09	-12.98	-4.43	-8.58	-9.38	-5.95
270	-4.78	-13.54	-4.24	-10.47	-9.35	-6.86
	-4.75	-14.33	-4.30	-12.82	-9.21	-7.64
	-5.77	-15.25	-5.31	-14.55	-9.04	-7.96
	-7.46	-16.54	-6.96	-14.10	-8.88	-7.74
	-11.19	-18.18	-10.40	-12.25	-8.67	-7.09
300	-15.76	-20.44	-14.49	-10.27	-8.50	-6.29
	-15.33	-23.79	-14.75	-9.03	-8.26	-5.62
	-12.17	-29.29	-12.08	-8.70	-8.14	-5.40
	-10.46	-44.16	-10.45	-9.27	-8.01	-5.58
	-11.56	-29.68	-11.50	-9.77	-7.89	-5.71
330	-15.64	-23.86	-15.03	-9.67	-7.85	-5.65
	-33.43	-20.12	-19.92	-9.32	-7.82	-5.49
	-16.93	-17.77	-14.32	-9.27	-7.76	-5.44
	-11.40	-15.76	-10.04	-10.00	-7.80	-5.75
	-8.47	-14.11	-7.42	-11.05	-7.82	-6.13
	-7.20	-12.90	-6.17	-12.15	-7.91	-6.52
	-6.58	-11.98	-5.48	-12.36	-7.97	-6.63
	-6.62	-11.10	-5.30	-12.30	-8.09	-6.69
	-7.08	-10.38	-5.41	-12.03	-8.15	-6.66
	-7.85	-9.77	-5.69	-12.46	-8.23	-6.84
	-8.89	-9.23	-6.05	-12.32	-8.26	-6.82
	-10.31	-8.85	-6.51	-13.18	-8.26	-7.05
	-12.11	-8.50	-6.93	-12.49	-8.22	-6.84
	-13.91	-8.18	-7.15	-13.08	-8.15	-6.94
	-15.06	-8.00	-7.22	-11.96	-8.01	-6.54
	-14.44	-7.79	-6.94	-12.14	-7.89	-6.51
	-13.05	-7.68	-6.58	-11.12	-7.69	-6.06

ピーク値	-2.72	-5.06	-1.15	-5.06	-2.72	-2.04
平均値	-7.79	-10.56	-5.95	-9.34	-5.92	-4.29

平均化

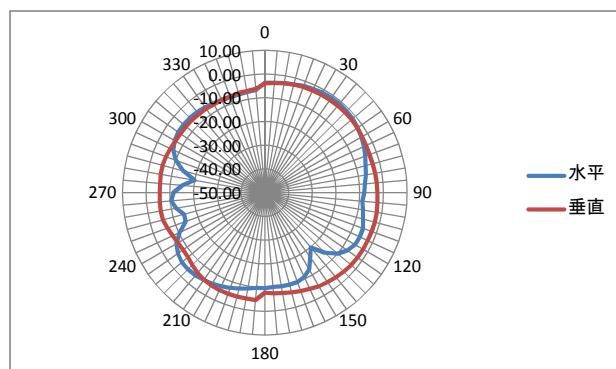


ピーク値	水平平均	垂直平均	平均化利得
-1.15	-5.95	-4.29	-4.29 dBi

m875MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-10.62	-4.97	-3.92	-7.33	-7.74	-4.52
	-9.48	-5.10	-3.75	-7.27	-7.28	-4.26
	-8.06	-5.31	-3.46	-7.12	-6.88	-3.99
	-6.90	-5.54	-3.16	-6.78	-6.46	-3.61
	-5.50	-5.76	-2.62	-6.29	-6.08	-3.17
30	-4.53	-6.03	-2.20	-5.77	-5.60	-2.67
	-3.43	-6.32	-1.63	-5.25	-5.18	-2.20
	-2.79	-6.66	-1.30	-4.97	-4.75	-1.85
	-2.15	-6.98	-0.91	-4.99	-4.38	-1.66
	-1.98	-7.38	-0.88	-5.49	-4.01	-1.68
60	-2.04	-7.77	-1.01	-5.99	-3.67	-1.66
	-2.55	-8.29	-1.52	-6.76	-3.32	-1.70
	-3.46	-8.72	-2.32	-7.48	-3.03	-1.69
	-4.75	-9.18	-3.41	-8.94	-2.77	-1.83
	-6.59	-9.63	-4.84	-11.17	-2.54	-1.99
90	-8.82	-10.16	-6.43	-14.33	-2.37	-2.10
	-10.60	-10.69	-7.63	-15.60	-2.19	-2.00
	-12.82	-11.28	-8.97	-13.98	-2.07	-1.80
	-13.44	-11.89	-9.59	-12.90	-2.00	-1.66
	-13.92	-12.59	-10.20	-11.91	-1.98	-1.56
120	-11.56	-13.30	-9.33	-10.31	-1.99	-1.40
	-9.66	-14.19	-8.35	-8.96	-2.03	-1.23
	-7.54	-15.12	-6.84	-8.06	-2.12	-1.14
	-6.76	-16.19	-6.29	-8.12	-2.25	-1.25
	-6.77	-17.41	-6.41	-8.12	-2.41	-1.38
150	-8.06	-18.96	-7.72	-8.45	-2.62	-1.61
	-10.68	-20.86	-10.29	-8.61	-2.83	-1.81
	-14.19	-23.22	-13.68	-9.28	-3.11	-2.17
	-14.79	-26.72	-14.52	-10.26	-3.38	-2.57
	-12.04	-30.14	-11.98	-11.52	-3.68	-3.02
180	-9.88	-30.21	-9.84	-12.97	-3.99	-3.47
	-8.97	-26.85	-8.89	-14.56	-4.34	-3.95
	-8.87	-24.00	-8.74	-16.58	-4.69	-4.42
	-9.52	-21.41	-9.24	-19.35	-5.01	-4.86
	-10.68	-19.57	-10.15	-23.25	-5.34	-5.27
210	-11.99	-18.19	-11.05	-28.38	-5.70	-5.67
	-12.91	-17.06	-11.50	-35.32	-6.12	-6.12
	-12.59	-16.15	-11.00	-6.99	-6.43	-3.69
	-11.75	-15.50	-10.22	-7.11	-6.73	-3.91
	-10.46	-14.96	-9.14	-7.38	-7.08	-4.22
240	-8.56	-14.64	-7.60	-7.68	-7.36	-4.51
	-6.96	-14.49	-6.25	-8.15	-7.58	-4.85
	-5.44	-14.55	-4.94	-8.90	-7.68	-5.23
	-4.30	-14.73	-3.92	-10.09	-7.82	-5.80
	-3.58	-15.12	-3.29	-11.95	-7.86	-6.43
270	-3.33	-15.80	-3.09	-14.09	-7.87	-6.94
	-3.70	-16.75	-3.49	-17.15	-7.87	-7.38
	-5.01	-18.07	-4.80	-19.89	-7.75	-7.50
	-7.21	-19.86	-6.98	-19.38	-7.66	-7.38
	-11.19	-22.61	-10.89	-15.36	-7.50	-6.85
300	-15.25	-25.94	-14.89	-11.97	-7.43	-6.12
	-14.03	-29.52	-13.91	-10.25	-7.31	-5.52
	-12.18	-26.45	-12.02	-8.95	-7.17	-4.96
	-11.83	-22.30	-11.45	-8.59	-7.07	-4.75
	-15.02	-19.13	-13.60	-8.44	-7.03	-4.67
330	-22.40	-16.54	-15.54	-8.85	-6.99	-4.81
	-19.18	-14.68	-13.36	-9.16	-7.00	-4.94
	-12.11	-13.18	-9.60	-9.17	-7.02	-4.95
	-9.36	-11.96	-7.46	-9.10	-7.08	-4.96
	-7.54	-10.93	-5.90	-9.26	-7.19	-5.09
	-7.04	-10.04	-5.27	-9.94	-7.28	-5.40
	-6.55	-9.40	-4.73	-11.25	-7.37	-5.88
	-6.67	-8.74	-4.57	-13.59	-7.57	-6.60
	-6.99	-8.34	-4.60	-15.35	-7.67	-6.98
	-7.71	-7.94	-4.81	-18.09	-7.78	-7.40
	-8.79	-7.74	-5.22	-17.06	-7.86	-7.37
	-10.07	-7.51	-5.59	-17.25	-7.96	-7.47
	-11.55	-7.38	-5.97	-14.23	-8.03	-7.10
	-12.94	-7.39	-6.33	-13.70	-8.01	-6.97
	-14.02	-7.39	-6.54	-11.59	-7.98	-6.41
	-14.18	-7.39	-6.57	-11.35	-7.84	-6.24
	-13.76	-7.49	-6.57	-10.18	-7.70	-5.76

ピーク値	-1.98	-4.97	-0.88	-4.97	-1.98	-1.14
平均値	-7.44	-10.54	-5.71	-9.52	-5.10	-3.76

平均化

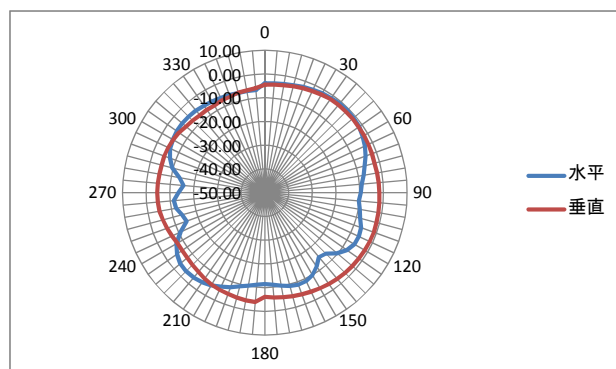


ピーク値	水平平均	垂直平均	平均化利得
-0.88	-5.71	-3.76	-3.76 dBi

m890MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-11.85	-8.11	-6.58	-10.72	-10.68	-7.69
	-10.74	-8.09	-6.20	-10.11	-10.39	-7.24
	-9.55	-8.19	-5.80	-9.46	-10.07	-6.74
	-8.63	-8.23	-5.42	-8.74	-9.73	-6.20
	-7.60	-8.38	-4.96	-8.24	-9.36	-5.76
30	-6.95	-8.47	-4.63	-8.09	-9.00	-5.51
	-6.13	-8.70	-4.22	-8.19	-8.58	-5.37
	-5.64	-8.90	-3.96	-8.54	-8.16	-5.34
	-5.14	-9.09	-3.67	-8.69	-7.79	-5.20
	-4.88	-9.37	-3.55	-8.99	-7.35	-5.08
60	-4.87	-9.63	-3.62	-9.10	-6.96	-4.89
	-5.10	-9.92	-3.86	-9.67	-6.62	-4.87
	-5.94	-10.27	-4.57	-10.63	-6.30	-4.93
	-7.00	-10.57	-5.42	-12.67	-5.94	-5.10
	-8.92	-10.93	-6.80	-15.51	-5.64	-5.21
90	-11.43	-11.33	-8.36	-19.23	-5.38	-5.21
	-14.75	-11.72	-9.96	-21.18	-5.24	-5.13
	-19.71	-12.11	-11.42	-19.65	-5.04	-4.90
	-28.21	-12.61	-12.50	-18.05	-4.96	-4.75
	-30.08	-13.20	-13.11	-16.82	-4.89	-4.62
120	-18.40	-13.67	-12.41	-15.60	-4.87	-4.52
	-13.77	-14.33	-11.03	-14.50	-4.88	-4.43
	-10.70	-14.97	-9.32	-13.54	-5.01	-4.44
	-9.39	-15.65	-8.47	-12.93	-5.12	-4.46
	-9.14	-16.45	-8.40	-12.14	-5.29	-4.48
150	-9.91	-17.37	-9.20	-11.71	-5.52	-4.58
	-12.40	-18.24	-11.40	-11.27	-5.74	-4.67
	-16.28	-19.14	-14.47	-11.75	-6.04	-5.01
	-25.59	-20.02	-18.95	-12.77	-6.32	-5.43
	-22.43	-20.74	-18.49	-14.54	-6.68	-6.02
180	-15.91	-21.07	-14.76	-16.59	-7.04	-6.59
	-13.61	-21.10	-12.90	-18.94	-7.47	-7.17
	-12.17	-20.73	-11.60	-21.13	-7.83	-7.64
	-12.28	-20.14	-11.62	-23.27	-8.25	-8.12
	-12.78	-19.52	-11.94	-25.06	-8.68	-8.58
210	-14.15	-18.82	-12.88	-26.50	-8.99	-8.91
	-15.76	-18.18	-13.79	-27.06	-9.34	-9.26
	-15.43	-17.70	-13.41	-13.30	-9.70	-8.12
	-14.77	-17.20	-12.81	-12.84	-10.00	-8.18
	-13.30	-16.94	-11.74	-12.63	-10.21	-8.24
240	-11.90	-16.73	-10.67	-12.18	-10.28	-8.12
	-10.34	-16.63	-9.42	-12.18	-10.37	-8.17
	-9.12	-16.69	-8.42	-12.21	-10.44	-8.23
	-8.02	-16.95	-7.50	-12.92	-10.36	-8.44
	-7.62	-17.32	-7.17	-14.12	-10.25	-8.75
270	-7.47	-17.80	-7.08	-16.05	-10.12	-9.13
	-8.13	-18.63	-7.76	-18.66	-9.99	-9.44
	-9.42	-19.63	-9.03	-21.08	-9.75	-9.44
	-11.41	-20.93	-10.95	-19.92	-9.57	-9.18
	-14.45	-22.90	-13.87	-17.75	-9.35	-8.76
300	-16.65	-24.94	-16.05	-15.65	-9.28	-8.38
	-15.88	-27.64	-15.60	-15.24	-9.07	-8.13
	-15.50	-29.33	-15.32	-15.46	-9.03	-8.14
	-15.63	-26.97	-15.32	-16.84	-8.94	-8.29
	-19.11	-24.52	-18.01	-17.51	-8.92	-8.36
330	-26.37	-21.96	-20.61	-16.35	-8.93	-8.21
	-26.24	-19.73	-18.86	-13.98	-8.90	-7.73
	-16.75	-18.03	-14.33	-13.09	-8.96	-7.54
	-13.29	-16.70	-11.66	-13.10	-9.10	-7.64
	-10.72	-15.52	-9.47	-14.27	-9.14	-7.97
	-9.71	-14.64	-8.50	-16.38	-9.28	-8.51
	-8.94	-13.79	-7.71	-17.96	-9.42	-8.85
	-8.90	-13.12	-7.51	-20.20	-9.55	-9.20
	-9.13	-12.52	-7.49	-20.19	-9.72	-9.34
	-9.84	-12.03	-7.79	-21.75	-9.91	-9.63
	-10.78	-11.65	-8.18	-19.38	-10.04	-9.56
	-12.09	-11.39	-8.72	-19.30	-10.15	-9.65
	-13.42	-11.11	-9.10	-17.70	-10.28	-9.56
	-14.56	-10.95	-9.38	-17.49	-10.39	-9.61
	-15.17	-10.73	-9.40	-16.37	-10.39	-9.41
	-14.92	-10.69	-9.30	-15.75	-10.50	-9.37
	-14.05	-10.62	-8.99	-14.26	-10.43	-8.93

ピーク値 -4.87 -8.09 **-3.55** -8.09 -4.87 **-4.43**
 平均値 -10.38 -13.03 **-8.49** -13.32 -7.92 **-6.82**

平均化

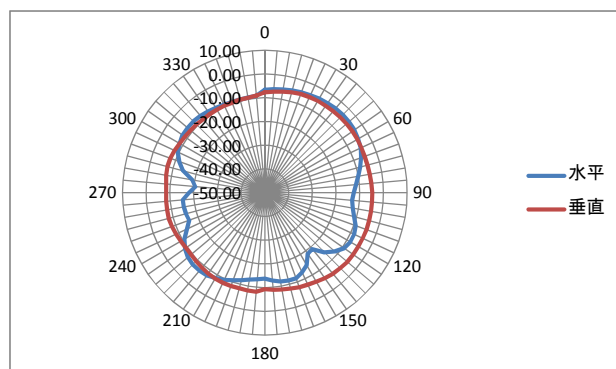


ピーク値 水平平均 垂直平均 平均化利得
 -3.55 -8.49 -6.82 -6.82 dBi

m900MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-11.85	-8.60	-6.91	-10.85	-11.26	-8.04
	-10.85	-8.81	-6.70	-10.15	-10.89	-7.49
	-9.74	-8.94	-6.31	-9.90	-10.49	-7.18
	-8.86	-9.15	-5.99	-9.62	-10.16	-6.87
	-7.97	-9.35	-5.59	-9.53	-9.75	-6.63
	-7.24	-9.62	-5.26	-9.47	-9.35	-6.40
30	-6.56	-9.91	-4.91	-9.20	-8.89	-6.03
	-6.05	-10.20	-4.63	-8.92	-8.51	-5.70
	-5.63	-10.47	-4.39	-8.60	-8.12	-5.34
	-5.46	-10.72	-4.33	-8.75	-7.74	-5.21
	-5.59	-10.98	-4.49	-9.13	-7.38	-5.16
	-6.02	-11.28	-4.89	-10.18	-7.00	-5.30
60	-7.04	-11.54	-5.72	-11.61	-6.72	-5.50
	-8.28	-11.81	-6.68	-14.05	-6.39	-5.71
	-10.42	-12.11	-8.17	-17.23	-6.20	-5.87
	-13.00	-12.31	-9.63	-22.42	-5.97	-5.87
	-16.33	-12.64	-11.09	-27.87	-5.77	-5.75
	-20.11	-12.96	-12.19	-24.05	-5.62	-5.56
90	-20.65	-13.26	-12.53	-19.15	-5.52	-5.34
	-17.98	-13.61	-12.26	-15.66	-5.46	-5.07
	-13.66	-13.97	-10.80	-13.31	-5.48	-4.81
	-10.80	-14.46	-9.25	-12.10	-5.46	-4.61
	-8.66	-14.90	-7.73	-11.23	-5.54	-4.50
	-7.90	-15.43	-7.19	-10.92	-5.57	-4.45
120	-8.09	-16.10	-7.45	-10.60	-5.71	-4.49
	-9.48	-16.74	-8.73	-10.99	-5.87	-4.71
	-12.44	-17.63	-11.29	-11.58	-6.09	-5.01
	-16.40	-18.70	-14.39	-12.61	-6.29	-5.38
	-18.46	-19.85	-16.09	-13.69	-6.54	-5.77
	-15.82	-21.31	-14.74	-14.83	-6.81	-6.17
150	-12.89	-23.27	-12.51	-16.37	-7.08	-6.60
	-11.81	-25.61	-11.63	-18.26	-7.37	-7.03
	-11.19	-28.75	-11.11	-20.62	-7.68	-7.47
	-11.81	-32.99	-11.78	-22.64	-8.07	-7.92
	-12.84	-37.16	-12.83	-23.44	-8.38	-8.24
	-15.04	-33.25	-14.98	-23.08	-8.77	-8.61
180	-17.69	-29.33	-17.40	-23.20	-9.15	-8.98
	-18.68	-26.61	-18.03	-14.62	-9.42	-8.27
	-16.25	-24.75	-15.67	-14.18	-9.82	-8.47
	-14.49	-23.38	-13.96	-13.80	-10.10	-8.55
	-13.11	-22.55	-12.64	-13.34	-10.43	-8.63
	-11.99	-21.97	-11.57	-13.11	-10.60	-8.67
210	-10.74	-21.63	-10.40	-13.21	-10.84	-8.85
	-9.46	-21.60	-9.20	-14.06	-10.98	-9.24
	-8.51	-21.90	-8.32	-15.84	-11.07	-9.82
	-7.88	-22.35	-7.72	-19.18	-11.08	-10.46
	-7.92	-23.32	-7.80	-24.30	-11.13	-10.92
	-8.55	-24.73	-8.44	-28.82	-11.07	-11.00
240	-10.05	-26.98	-9.96	-24.26	-11.05	-10.85
	-12.97	-30.58	-12.90	-19.65	-10.98	-10.42
	-16.07	-37.84	-16.05	-15.55	-10.80	-9.55
	-16.77	-37.21	-16.73	-13.08	-10.81	-8.78
	-15.64	-29.55	-15.46	-11.78	-10.70	-8.20
	-15.26	-24.77	-14.80	-11.94	-10.74	-8.29
270	-18.19	-21.86	-16.64	-12.84	-10.69	-8.62
	-27.19	-19.65	-18.94	-14.06	-10.72	-9.07
	-25.99	-17.85	-17.23	-14.66	-10.69	-9.23
	-16.67	-16.34	-13.49	-14.65	-10.73	-9.25
	-13.43	-15.20	-11.21	-15.27	-10.78	-9.46
	-11.30	-14.17	-9.49	-16.59	-10.91	-9.87
300	-10.66	-13.32	-8.78	-19.50	-11.01	-10.44
	-10.20	-12.71	-8.26	-22.78	-11.12	-10.84
	-10.48	-12.19	-8.24	-27.33	-11.25	-11.14
	-10.73	-11.77	-8.21	-28.33	-11.40	-11.32
	-11.40	-11.29	-8.33	-29.33	-11.45	-11.38
	-12.23	-11.11	-8.62	-22.70	-11.50	-11.19
330	-13.46	-10.91	-8.99	-20.56	-11.56	-11.04
	-14.99	-10.82	-9.41	-17.21	-11.49	-10.46
	-16.88	-10.85	-9.88	-16.51	-11.48	-10.29
	-18.83	-10.80	-10.17	-15.55	-11.46	-10.03
	-19.82	-10.89	-10.36	-15.83	-11.31	-10.00
	-18.66	-10.94	-10.26	-15.24	-11.19	-9.75

ピーク値 -5.46 -8.60 **-4.33** -8.60 -5.46 **-4.45**
 平均値 -10.77 -13.77 **-9.01** -13.57 -8.53 **-7.35**

平均化

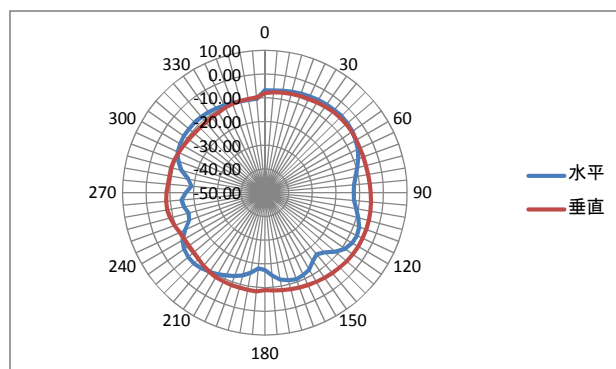


ピーク値 水平平均 垂直平均 平均化利得
 -4.33 -9.01 -7.35 -7.35 dBi

m915MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-10.96	-7.35	-5.78	-11.91	-9.58	-7.58
	-9.44	-7.63	-5.43	-11.72	-9.29	-7.33
	-7.97	-7.92	-4.94	-11.22	-8.83	-6.85
	-6.92	-8.18	-4.49	-10.40	-8.32	-6.23
	-5.86	-8.38	-3.93	-9.45	-7.90	-5.59
30	-5.19	-8.61	-3.56	-8.71	-7.43	-5.01
	-4.37	-8.75	-3.02	-8.26	-7.02	-4.59
	-3.80	-8.87	-2.63	-8.21	-6.46	-4.24
	-3.35	-9.00	-2.31	-8.15	-6.09	-3.98
	-2.99	-9.10	-2.04	-8.10	-5.63	-3.68
60	-2.88	-9.22	-1.97	-7.58	-5.21	-3.23
	-3.13	-9.34	-2.20	-7.35	-4.78	-2.87
	-3.92	-9.48	-2.86	-7.45	-4.43	-2.67
	-5.07	-9.70	-3.79	-8.77	-4.10	-2.82
	-7.16	-9.92	-5.31	-11.26	-3.81	-3.09
90	-9.92	-10.20	-7.05	-15.99	-3.55	-3.31
	-13.47	-10.51	-8.73	-24.60	-3.34	-3.31
	-17.71	-10.83	-10.02	-25.88	-3.18	-3.16
	-19.36	-11.24	-10.62	-21.03	-3.04	-2.97
	-17.28	-11.65	-10.60	-17.32	-2.96	-2.80
120	-12.92	-12.16	-9.51	-13.88	-2.91	-2.58
	-9.80	-12.68	-7.99	-11.75	-2.88	-2.35
	-7.38	-13.24	-6.38	-10.91	-2.95	-2.31
	-6.12	-13.95	-5.46	-11.09	-3.03	-2.40
	-5.93	-14.70	-5.39	-11.00	-3.12	-2.46
150	-6.73	-15.77	-6.22	-10.75	-3.30	-2.58
	-8.87	-16.81	-8.22	-10.35	-3.47	-2.66
	-11.60	-18.05	-10.71	-10.80	-3.67	-2.90
	-14.01	-19.80	-12.99	-11.77	-3.92	-3.26
	-13.06	-21.82	-12.52	-13.18	-4.24	-3.72
180	-11.17	-24.09	-10.95	-14.74	-4.51	-4.12
	-10.36	-27.16	-10.27	-16.19	-4.93	-4.62
	-10.27	-29.45	-10.22	-17.83	-5.29	-5.05
	-11.07	-28.06	-10.98	-19.38	-5.62	-5.44
	-12.53	-25.12	-12.30	-20.95	-6.00	-5.87
210	-14.92	-22.60	-14.24	-22.30	-6.35	-6.24
	-17.67	-20.68	-15.91	-23.47	-6.77	-6.68
	-13.99	-19.14	-12.83	-10.27	-7.12	-5.41
	-12.14	-17.86	-11.11	-11.73	-7.52	-6.12
	-10.41	-17.06	-9.56	-11.64	-7.82	-6.31
240	-8.97	-16.36	-8.24	-11.45	-8.11	-6.46
	-7.74	-15.93	-7.13	-12.21	-8.27	-6.80
	-6.81	-15.68	-6.28	-13.21	-8.53	-7.26
	-5.97	-15.68	-5.53	-16.02	-8.61	-7.88
	-5.64	-15.84	-5.24	-20.19	-8.61	-8.32
270	-5.49	-16.31	-5.14	-29.32	-8.67	-8.63
	-6.15	-16.99	-5.80	-28.10	-8.60	-8.55
	-7.44	-17.99	-7.08	-24.18	-8.62	-8.50
	-9.82	-19.45	-9.38	-20.68	-8.50	-8.24
	-13.79	-21.50	-13.11	-18.24	-8.35	-7.92
300	-16.50	-23.74	-15.74	-15.45	-8.30	-7.54
	-14.92	-24.49	-14.47	-14.73	-8.20	-7.33
	-14.17	-22.75	-13.61	-13.56	-8.14	-7.04
	-14.55	-19.89	-13.44	-13.18	-8.15	-6.97
	-19.15	-17.26	-15.09	-12.11	-8.11	-6.65
330	-30.43	-15.23	-15.10	-11.62	-8.11	-6.51
	-20.25	-13.39	-12.57	-11.23	-8.22	-6.46
	-13.84	-12.07	-9.85	-11.83	-8.35	-6.74
	-11.28	-10.90	-8.07	-13.01	-8.37	-7.09
	-9.40	-9.97	-6.66	-15.13	-8.53	-7.67
	-8.81	-9.31	-6.04	-17.90	-8.77	-8.27
	-8.20	-8.72	-5.44	-20.68	-8.87	-8.59
	-8.35	-8.38	-5.36	-24.15	-9.11	-8.98
	-8.47	-8.12	-5.28	-20.17	-9.29	-8.95
	-9.24	-7.96	-5.55	-18.41	-9.50	-8.97
	-10.28	-7.91	-5.92	-15.35	-9.64	-8.61
	-12.17	-7.96	-6.56	-14.34	-9.75	-8.45
	-14.55	-8.07	-7.19	-13.23	-9.77	-8.15
	-17.77	-8.25	-7.79	-12.64	-9.81	-7.98
	-20.42	-8.48	-8.21	-11.71	-9.78	-7.63
	-18.70	-8.74	-8.32	-11.04	-9.70	-7.31
	-15.68	-9.10	-8.24	-10.27	-9.60	-6.91

ピーク値	-2.88	-7.35	-1.97	-7.35	-2.88	-2.31
平均値	-8.51	-11.47	-6.73	-12.35	-6.17	-5.23

平均化

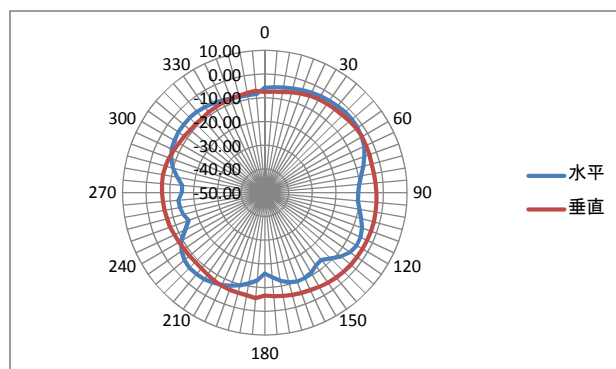


ピーク値	水平平均	垂直平均	平均化利得
-1.97	-6.73	-5.23	-5.23 dBi

m945MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-17.05	-13.56	-11.95	-16.98	-16.48	-13.71
	-15.78	-13.80	-11.67	-16.84	-16.02	-13.40
	-14.38	-14.01	-11.18	-16.72	-15.58	-13.10
	-13.41	-14.18	-10.77	-16.30	-15.16	-12.68
	-12.20	-14.34	-10.13	-15.77	-14.73	-12.21
30	-11.57	-14.50	-9.78	-15.24	-14.27	-11.72
	-10.83	-14.55	-9.30	-14.79	-13.75	-11.22
	-10.55	-14.64	-9.12	-14.67	-13.43	-10.99
	-10.19	-14.70	-8.87	-14.49	-13.08	-10.72
	-10.16	-14.77	-8.87	-14.32	-12.66	-10.40
60	-10.30	-14.86	-9.00	-13.78	-12.33	-9.99
	-10.77	-14.95	-9.36	-13.56	-11.95	-9.67
	-11.55	-15.07	-9.95	-13.71	-11.68	-9.57
	-12.88	-15.20	-10.88	-14.81	-11.30	-9.70
	-15.06	-15.39	-12.21	-16.56	-11.03	-9.96
90	-17.96	-15.58	-13.60	-19.09	-10.82	-10.22
	-21.77	-15.88	-14.89	-22.01	-10.66	-10.35
	-26.23	-16.17	-15.76	-26.12	-10.44	-10.32
	-25.48	-16.48	-15.96	-28.69	-10.35	-10.29
	-21.36	-16.89	-15.56	-23.70	-10.19	-10.00
120	-16.87	-17.22	-14.03	-20.73	-10.16	-9.79
	-14.14	-17.65	-12.54	-20.07	-10.19	-9.76
	-12.21	-18.25	-11.25	-20.06	-10.18	-9.75
	-11.73	-18.84	-10.95	-19.93	-10.30	-9.85
	-12.24	-19.47	-11.49	-19.02	-10.36	-9.80
150	-13.97	-20.42	-13.08	-18.45	-10.53	-9.88
	-17.22	-21.28	-15.78	-18.06	-10.73	-9.99
	-22.31	-22.38	-19.33	-18.23	-10.93	-10.19
	-26.83	-23.91	-22.12	-19.25	-11.27	-10.62
	-21.58	-25.45	-20.08	-21.71	-11.49	-11.09
180	-17.48	-27.27	-17.05	-26.91	-11.93	-11.80
	-16.03	-30.10	-15.86	-40.88	-12.18	-12.17
	-15.45	-33.94	-15.39	-31.56	-12.73	-12.67
	-16.29	-38.74	-16.26	-26.10	-13.22	-13.00
	-17.78	-39.96	-17.75	-23.61	-13.58	-13.17
210	-20.92	-35.01	-20.75	-22.64	-14.28	-13.69
	-25.05	-31.28	-24.12	-22.28	-14.69	-13.99
	-17.93	-28.79	-17.59	-15.15	-15.24	-12.18
	-18.21	-26.77	-17.64	-14.87	-15.78	-12.29
	-17.05	-25.64	-16.49	-14.77	-16.37	-12.48
240	-16.35	-24.63	-15.75	-14.84	-16.77	-12.69
	-15.53	-23.87	-14.93	-15.15	-17.24	-13.06
	-15.18	-23.49	-14.59	-15.71	-17.58	-13.54
	-14.52	-23.18	-13.97	-16.63	-17.87	-14.20
	-13.88	-23.20	-13.40	-18.01	-18.00	-14.99
270	-13.23	-23.44	-12.83	-20.16	-18.15	-16.03
	-13.00	-24.08	-12.67	-22.55	-18.17	-16.82
	-13.55	-24.98	-13.24	-23.78	-18.08	-17.05
	-15.10	-26.59	-14.80	-22.61	-18.06	-16.75
	-17.73	-29.02	-17.42	-21.54	-17.92	-16.35
300	-22.93	-31.87	-22.41	-19.58	-17.80	-15.59
	-29.13	-33.38	-27.74	-18.06	-17.70	-14.86
	-24.58	-31.05	-23.70	-17.03	-17.63	-14.31
	-21.32	-27.10	-20.30	-17.28	-17.65	-14.45
	-20.18	-23.95	-18.66	-17.73	-17.60	-14.65
330	-22.22	-21.68	-18.93	-17.93	-17.55	-14.73
	-28.59	-19.67	-19.15	-17.86	-17.51	-14.67
	-31.36	-18.28	-18.07	-18.50	-17.59	-15.01
	-22.66	-16.98	-15.94	-20.46	-17.55	-15.76
	-19.49	-16.02	-14.41	-23.71	-17.57	-16.63
	-17.74	-15.32	-13.35	-29.16	-17.64	-17.35
	-17.24	-14.70	-12.78	-31.28	-17.64	-17.45
	-17.01	-14.33	-12.46	-33.22	-17.62	-17.50
	-17.13	-14.05	-12.31	-26.94	-17.59	-17.11
	-17.51	-13.87	-12.31	-24.72	-17.52	-16.76
	-18.31	-13.83	-12.51	-21.24	-17.44	-15.93
	-19.73	-13.87	-12.87	-19.99	-17.37	-15.47
	-21.53	-13.99	-13.28	-18.33	-17.24	-14.74
	-23.80	-14.09	-13.65	-17.56	-17.09	-14.31
	-23.96	-14.33	-13.88	-16.52	-16.92	-13.70
	-22.54	-14.60	-13.96	-16.08	-16.71	-13.38
	-19.73	-14.84	-13.62	-15.66	-16.52	-13.06

ピーク値	-10.16	-13.56	-8.87	-13.56	-10.16	-9.57
平均値	-15.50	-17.33	-13.31	-17.94	-13.78	-12.37

平均化

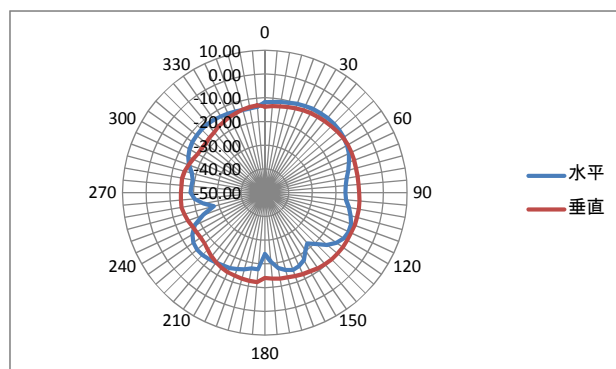


ピーク値	水平平均	垂直平均	平均化利得
-8.87	-13.31	-12.37	-12.37 dBi

m960MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-19.45	-14.99	-13.66	-20.72	-20.56	-17.63
	-18.01	-15.08	-13.29	-20.51	-20.18	-17.33
	-16.73	-15.15	-12.86	-20.45	-19.86	-17.14
	-15.61	-15.17	-12.38	-20.11	-19.50	-16.79
	-14.64	-15.23	-11.91	-19.89	-19.08	-16.45
30	-13.76	-15.25	-11.43	-19.25	-18.64	-15.92
	-13.07	-15.31	-11.03	-18.46	-18.14	-15.29
	-12.60	-15.31	-10.74	-17.45	-17.64	-14.53
	-12.35	-15.41	-10.61	-16.49	-17.18	-13.81
	-12.25	-15.51	-10.57	-15.75	-16.67	-13.17
60	-12.49	-15.66	-10.78	-15.20	-16.14	-12.64
	-12.64	-15.85	-10.94	-14.99	-15.67	-12.31
	-13.41	-16.12	-11.54	-14.99	-15.17	-12.07
	-14.07	-16.40	-12.07	-15.72	-14.71	-12.18
	-15.97	-16.78	-13.35	-17.19	-14.35	-12.53
90	-18.00	-17.23	-14.59	-20.15	-13.85	-12.94
	-21.63	-17.68	-16.21	-24.44	-13.50	-13.17
	-25.69	-18.34	-17.61	-29.24	-13.12	-13.02
	-31.04	-18.96	-18.70	-32.25	-12.85	-12.80
	-47.66	-19.63	-19.62	-30.96	-12.72	-12.65
120	-30.28	-20.31	-19.90	-26.55	-12.40	-12.24
	-23.47	-21.05	-19.09	-24.16	-12.37	-12.09
	-18.99	-21.98	-17.22	-23.61	-12.25	-11.94
	-16.63	-23.02	-15.73	-23.83	-12.29	-11.99
	-15.60	-24.22	-15.04	-22.67	-12.27	-11.89
150	-15.28	-25.52	-14.88	-21.45	-12.38	-11.87
	-16.85	-27.19	-16.47	-20.67	-12.52	-11.90
	-18.68	-29.18	-18.31	-20.64	-12.64	-12.00
	-24.08	-31.86	-23.41	-21.03	-12.83	-12.22
	-30.10	-34.90	-28.86	-22.13	-13.08	-12.57
180	-32.81	-39.21	-31.92	-23.87	-13.42	-13.04
	-27.63	-40.09	-27.39	-26.66	-13.79	-13.57
	-24.21	-35.45	-23.89	-30.21	-14.16	-14.05
	-25.01	-32.02	-24.22	-32.57	-14.57	-14.50
	-25.72	-29.56	-24.22	-32.82	-14.98	-14.91
210	-30.16	-27.70	-25.75	-31.67	-15.48	-15.38
	-34.74	-26.20	-25.63	-31.93	-15.99	-15.88
	-20.66	-25.16	-19.34	-16.25	-16.46	-13.34
	-20.65	-24.18	-19.05	-16.02	-17.04	-13.49
	-20.09	-23.52	-18.46	-16.11	-17.61	-13.79
240	-20.12	-23.10	-18.35	-16.19	-18.15	-14.05
	-19.20	-22.74	-17.61	-16.75	-18.67	-14.59
	-18.49	-22.67	-17.09	-17.40	-19.20	-15.19
	-16.93	-22.78	-15.92	-18.65	-19.66	-16.11
	-16.34	-23.06	-15.50	-20.35	-20.12	-17.23
270	-15.75	-23.62	-15.09	-22.38	-20.52	-18.34
	-16.51	-24.50	-15.87	-23.92	-20.80	-19.07
	-17.95	-25.92	-17.30	-24.29	-21.14	-19.42
	-21.08	-28.10	-20.29	-23.10	-21.22	-19.05
	-26.83	-31.31	-25.51	-22.00	-21.27	-18.61
300	-31.43	-37.95	-30.55	-20.76	-21.34	-18.03
	-26.63	-43.36	-26.54	-21.21	-21.26	-18.23
	-25.59	-32.98	-24.86	-22.18	-21.22	-18.67
	-25.90	-27.88	-23.77	-25.05	-21.14	-19.66
	-30.40	-24.72	-23.68	-26.90	-21.05	-20.05
330	-36.65	-22.28	-22.13	-27.11	-21.01	-20.05
	-27.45	-20.43	-19.64	-24.69	-20.97	-19.43
	-22.46	-19.03	-17.40	-24.22	-20.83	-19.19
	-20.50	-18.00	-16.06	-24.14	-20.77	-19.13
	-19.12	-17.08	-14.97	-24.68	-20.72	-19.25
	-18.91	-16.42	-14.48	-26.20	-20.60	-19.55
	-19.05	-15.91	-14.19	-24.63	-20.50	-19.08
	-19.69	-15.53	-14.12	-24.11	-20.38	-18.85
	-20.77	-15.29	-14.21	-21.83	-20.25	-17.96
	-22.57	-15.15	-14.43	-20.53	-20.22	-17.36
	-25.20	-15.12	-14.71	-18.73	-20.06	-16.33
	-28.82	-15.17	-14.99	-17.58	-20.00	-15.61
	-32.05	-15.24	-15.15	-16.63	-19.89	-14.95
	-27.66	-15.41	-15.16	-16.08	-19.74	-14.53
	-24.03	-15.58	-15.00	-15.98	-19.65	-14.43
	-21.10	-15.75	-14.64	-15.81	-19.60	-14.29
	-19.21	-15.93	-14.26	-15.83	-19.45	-14.26

ピーク値	-12.25	-14.99	-10.57	-14.99	-12.25	-11.87
平均値	-18.28	-18.59	-15.42	-19.70	-16.27	-14.64

平均化

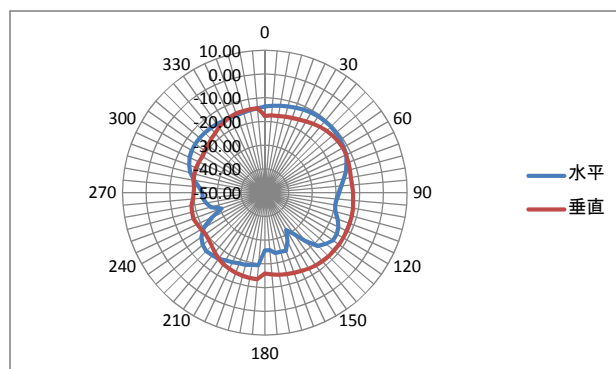


ピーク値	水平平均	垂直平均	平均化利得
-10.57	-15.42	-14.64	-14.64 dBi

m1447.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-20.58	-19.05	-16.74	-31.51	-23.35	-22.73
	-19.71	-18.16	-15.86	-30.41	-22.60	-21.93
	-19.02	-17.25	-15.03	-28.50	-22.16	-21.25
	-18.66	-16.41	-14.38	-28.32	-21.27	-20.48
	-18.46	-15.52	-13.74	-27.90	-20.64	-19.89
	-18.73	-14.68	-13.24	-27.90	-19.97	-19.32
30	-19.08	-13.80	-12.67	-27.68	-19.30	-18.71
	-19.80	-13.19	-12.33	-27.38	-18.48	-17.96
	-20.72	-12.52	-11.90	-27.72	-17.74	-17.33
	-21.64	-11.94	-11.49	-29.83	-17.07	-16.84
	-22.78	-11.49	-11.17	-33.19	-16.43	-16.34
	-23.40	-11.18	-10.93	-47.46	-15.74	-15.74
60	-23.74	-10.98	-10.76	-31.72	-15.17	-15.07
	-23.76	-10.92	-10.70	-25.27	-14.61	-14.25
	-22.85	-10.99	-10.72	-21.15	-14.15	-13.36
	-20.37	-11.30	-10.79	-17.58	-13.85	-12.31
	-17.50	-11.72	-10.70	-14.88	-13.52	-11.14
	-15.23	-12.37	-10.56	-12.83	-13.39	-10.09
90	-13.83	-13.24	-10.51	-11.50	-13.29	-9.29
	-13.29	-14.29	-10.75	-10.94	-13.32	-8.96
	-13.74	-15.46	-11.51	-10.92	-13.45	-8.99
	-14.68	-17.18	-12.74	-11.04	-13.66	-9.14
	-15.79	-18.95	-14.08	-11.24	-13.90	-9.36
	-16.68	-20.91	-15.29	-11.48	-14.32	-9.66
120	-17.17	-22.57	-16.07	-12.44	-14.68	-10.40
	-18.37	-23.76	-17.27	-14.08	-15.15	-11.57
	-19.53	-24.15	-18.24	-16.83	-15.64	-13.18
	-22.61	-23.84	-20.17	-19.94	-16.17	-14.65
	-25.99	-23.19	-21.36	-23.45	-16.58	-15.77
	-29.38	-22.40	-21.61	-23.18	-17.14	-16.18
150	-25.40	-22.02	-20.38	-22.56	-17.68	-16.46
	-22.43	-21.62	-19.00	-21.98	-18.06	-16.58
	-21.02	-21.43	-18.21	-22.11	-18.50	-16.93
	-20.85	-21.32	-18.07	-22.78	-18.91	-17.42
	-21.86	-21.24	-18.53	-24.19	-19.30	-18.08
	-23.40	-21.33	-19.23	-25.29	-19.69	-18.63
180	-26.03	-21.32	-20.05	-25.85	-20.02	-19.01
	-35.44	-21.46	-21.29	-35.08	-20.37	-20.22
	-31.40	-21.43	-21.01	-33.19	-20.88	-20.64
	-27.86	-21.44	-20.55	-31.05	-21.21	-20.78
	-25.54	-21.40	-19.98	-28.46	-21.67	-20.84
	-24.53	-21.13	-19.50	-27.62	-22.09	-21.01
210	-24.70	-20.82	-19.33	-26.27	-22.54	-21.00
	-26.70	-20.48	-19.55	-27.09	-22.95	-21.54
	-31.11	-20.26	-19.91	-28.71	-23.45	-22.32
	-33.33	-20.03	-19.83	-30.31	-24.21	-23.25
	-26.34	-20.10	-19.17	-29.43	-24.51	-23.29
	-22.95	-20.25	-18.39	-28.81	-25.15	-23.59
240	-22.34	-20.68	-18.42	-29.02	-25.61	-23.98
	-23.96	-21.54	-19.57	-32.19	-25.97	-25.04
	-26.76	-22.97	-21.45	-27.58	-26.16	-23.80
	-27.62	-25.10	-23.17	-24.20	-26.07	-22.02
	-25.81	-27.43	-23.54	-21.54	-25.86	-20.18
	-25.41	-30.56	-24.25	-20.94	-25.56	-19.65
270	-25.72	-31.84	-24.77	-20.36	-25.41	-19.18
	-26.44	-29.77	-24.78	-19.37	-24.99	-18.32
	-27.08	-26.94	-24.00	-18.86	-24.99	-17.91
	-30.68	-24.92	-23.90	-18.65	-24.82	-17.71
	-39.67	-23.78	-23.67	-19.07	-24.97	-18.08
	-31.54	-22.96	-22.40	-19.36	-25.07	-18.33
300	-26.46	-22.65	-21.14	-19.51	-25.10	-18.45
	-24.61	-22.53	-20.43	-20.04	-25.15	-18.87
	-23.92	-22.77	-20.30	-20.75	-25.19	-19.41
	-24.40	-23.15	-20.72	-22.88	-25.08	-20.83
	-25.23	-23.48	-21.26	-24.04	-24.93	-21.45
	-26.12	-24.15	-22.02	-25.39	-24.60	-21.97
330	-27.23	-24.17	-22.42	-25.19	-24.15	-21.62
	-26.98	-24.20	-22.36	-25.51	-23.84	-21.59
	-26.04	-23.63	-21.66	-25.49	-23.39	-21.31
	-24.36	-22.75	-20.47	-26.15	-23.13	-21.37
	-22.53	-21.97	-19.23	-25.26	-22.59	-20.71
	-21.50	-20.94	-18.20	-25.31	-22.18	-20.46

ピーク値	-13.29	-10.92	-10.51	-10.92	-13.29	-8.96
平均値	-20.87	-17.25	-15.68	-18.93	-18.39	-15.64

平均化

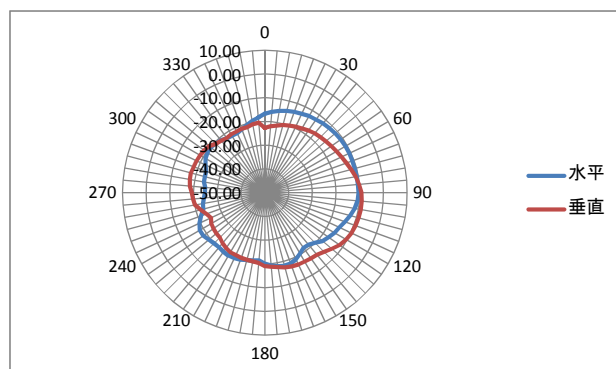


ピーク値	水平平均	垂直平均	平均化利得
-8.96	-15.68	-15.64	-15.64 dBi

m1462.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-22.44	-20.03	-18.06	-34.75	-23.95	-23.61
	-21.35	-18.98	-16.99	-34.36	-23.26	-22.93
	-20.47	-17.81	-15.93	-36.02	-22.43	-22.25
	-20.06	-16.89	-15.18	-36.64	-21.50	-21.37
	-19.85	-15.87	-14.40	-34.95	-20.81	-20.64
30	-20.12	-14.90	-13.76	-33.10	-20.03	-19.82
	-20.54	-14.00	-13.13	-31.80	-19.35	-19.11
	-21.49	-13.33	-12.71	-33.13	-18.76	-18.60
	-22.67	-12.62	-12.21	-31.87	-18.02	-17.84
	-24.08	-11.99	-11.73	-32.46	-17.36	-17.23
60	-25.20	-11.54	-11.35	-31.30	-16.77	-16.62
	-25.51	-11.18	-11.02	-36.92	-16.22	-16.18
	-25.67	-11.00	-10.85	-30.82	-15.64	-15.51
	-24.85	-10.90	-10.72	-25.16	-15.19	-14.77
	-23.84	-10.98	-10.76	-21.53	-14.76	-13.93
90	-21.34	-11.20	-10.80	-17.85	-14.44	-12.81
	-18.30	-11.61	-10.76	-15.19	-14.21	-11.66
	-16.17	-12.16	-10.71	-13.05	-14.00	-10.49
	-14.65	-13.00	-10.74	-11.60	-13.93	-9.60
	-13.93	-13.98	-10.95	-10.95	-13.95	-9.18
120	-14.10	-15.03	-11.53	-10.90	-14.02	-9.17
	-14.90	-16.55	-12.64	-11.13	-14.25	-9.40
	-16.20	-18.14	-14.05	-11.48	-14.47	-9.71
	-17.55	-19.87	-15.54	-11.73	-14.85	-10.00
	-18.51	-21.79	-16.84	-12.74	-15.22	-10.80
150	-20.21	-23.39	-18.50	-14.42	-15.69	-12.00
	-21.86	-25.05	-20.16	-17.27	-16.11	-13.64
	-25.30	-25.79	-22.53	-20.51	-16.63	-15.14
	-28.25	-26.13	-24.05	-23.66	-17.07	-16.20
	-28.27	-25.76	-23.83	-22.87	-17.68	-16.53
180	-25.28	-25.32	-22.29	-22.50	-18.28	-16.89
	-23.27	-24.91	-21.00	-21.83	-18.74	-17.00
	-22.49	-24.51	-20.37	-22.25	-19.24	-17.48
	-22.83	-24.19	-20.45	-22.88	-19.81	-18.07
	-24.18	-24.07	-21.11	-23.88	-20.30	-18.72
210	-27.26	-23.91	-22.25	-24.70	-20.91	-19.39
	-31.37	-23.92	-23.20	-25.76	-21.56	-20.16
	-30.52	-23.73	-22.91	-33.26	-22.00	-21.68
	-27.40	-23.61	-22.09	-34.62	-22.62	-22.36
	-25.58	-23.68	-21.52	-33.83	-23.38	-23.01
240	-24.50	-23.40	-20.91	-29.52	-24.02	-22.94
	-23.88	-23.00	-20.40	-27.36	-24.74	-22.85
	-24.55	-22.63	-20.47	-26.08	-25.37	-22.70
	-26.26	-22.29	-20.83	-26.95	-26.04	-23.46
	-29.87	-21.93	-21.28	-29.07	-26.72	-24.73
270	-32.01	-21.59	-21.21	-32.88	-27.22	-26.17
	-27.96	-21.43	-20.56	-33.86	-27.37	-26.49
	-25.43	-21.62	-20.11	-33.15	-27.27	-26.27
	-25.18	-21.92	-20.24	-30.76	-27.23	-25.63
	-25.37	-22.68	-20.81	-28.25	-26.81	-24.46
300	-25.15	-24.09	-21.58	-24.35	-26.34	-22.22
	-24.69	-26.27	-22.40	-23.39	-25.85	-21.44
	-24.30	-29.86	-23.23	-22.68	-25.43	-20.83
	-25.10	-36.65	-24.81	-23.12	-25.33	-21.08
	-26.05	-52.67	-26.04	-22.86	-25.10	-20.83
330	-26.90	-35.38	-26.32	-22.24	-25.06	-20.41
	-29.24	-29.61	-26.41	-21.36	-25.40	-19.92
	-35.68	-26.81	-26.28	-20.34	-26.04	-19.31
	-37.19	-25.27	-25.00	-19.65	-26.86	-18.90
	-30.10	-24.77	-23.65	-19.27	-27.50	-18.66
	-26.61	-24.20	-22.23	-18.98	-28.59	-18.53
	-25.29	-24.53	-21.88	-19.61	-29.09	-19.14
	-25.37	-24.85	-22.09	-20.00	-29.73	-19.56
	-25.82	-25.56	-22.68	-21.29	-29.49	-20.68
	-26.83	-26.21	-23.50	-22.71	-29.37	-21.86
	-27.84	-26.98	-24.38	-25.75	-28.19	-23.79
	-28.64	-27.28	-24.90	-28.24	-27.35	-24.76
	-27.67	-26.90	-24.26	-30.22	-26.61	-25.04
	-25.88	-26.16	-23.01	-29.77	-25.89	-24.40
	-23.96	-24.89	-21.39	-29.85	-24.97	-23.75
	-22.29	-23.71	-19.93	-29.80	-24.39	-23.29
	-20.97	-22.41	-18.62	-29.25	-23.61	-22.56

ピーク値	-13.93	-10.90	-10.71	-10.90	-13.93	-9.17
平均値	-21.78	-17.57	-16.18	-19.24	-19.12	-16.17

平均化

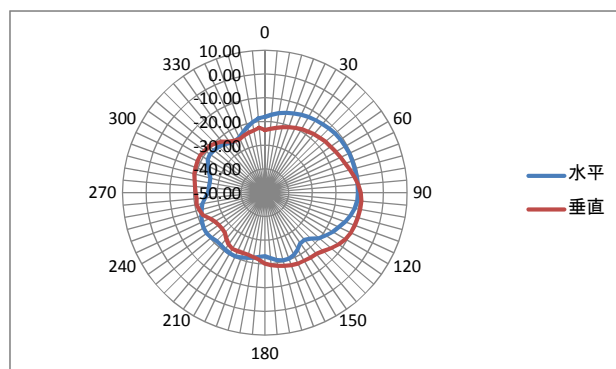


ピーク値	水平平均	垂直平均	平均化利得
-9.17	-16.18	-16.17	-16.17 dBi

m1495.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-19.96	-17.71	-15.68	-52.14	-20.17	-20.17
	-19.03	-16.82	-14.77	-45.69	-19.73	-19.71
	-18.49	-15.78	-13.92	-45.24	-19.04	-19.03
	-18.40	-14.86	-13.27	-39.42	-18.58	-18.55
	-18.45	-13.89	-12.59	-42.00	-18.12	-18.10
30	-19.17	-13.08	-12.12	-38.78	-17.79	-17.76
	-20.22	-12.14	-11.51	-35.80	-17.26	-17.20
	-21.71	-11.51	-11.11	-33.79	-16.84	-16.76
	-23.97	-10.75	-10.55	-33.41	-16.37	-16.29
	-27.34	-10.17	-10.09	-40.24	-15.99	-15.98
60	-33.24	-9.69	-9.67	-36.27	-15.54	-15.50
	-39.63	-9.31	-9.30	-30.38	-15.17	-15.04
	-33.74	-9.07	-9.05	-25.56	-14.78	-14.43
	-27.86	-8.99	-8.93	-21.15	-14.33	-13.50
	-23.65	-9.04	-8.89	-18.81	-14.05	-12.79
90	-20.08	-9.26	-8.92	-15.72	-13.69	-11.57
	-17.10	-9.61	-8.89	-13.19	-13.42	-10.29
	-14.90	-10.23	-8.95	-10.90	-13.19	-8.88
	-13.51	-10.93	-9.02	-9.64	-13.04	-8.01
	-12.98	-11.84	-9.36	-9.09	-12.99	-7.61
120	-12.93	-12.82	-9.87	-8.99	-12.93	-7.52
	-13.34	-14.19	-10.73	-9.07	-12.95	-7.58
	-14.46	-15.49	-11.94	-9.41	-13.09	-7.86
	-15.93	-16.92	-13.38	-9.73	-13.15	-8.10
	-17.23	-18.29	-14.72	-10.79	-13.28	-8.85
150	-19.32	-19.35	-16.32	-12.22	-13.46	-9.78
	-20.99	-20.23	-17.58	-14.68	-13.64	-11.12
	-23.49	-20.63	-18.82	-17.65	-13.83	-12.33
	-22.80	-20.79	-18.67	-20.60	-14.12	-13.24
	-21.83	-20.73	-18.23	-20.34	-14.45	-13.45
180	-20.03	-20.49	-17.24	-19.72	-14.73	-13.53
	-19.40	-20.21	-16.78	-18.68	-15.09	-13.51
	-19.25	-20.15	-16.67	-18.92	-15.42	-13.82
	-19.92	-20.10	-17.00	-19.43	-15.81	-14.24
	-21.17	-19.91	-17.49	-20.50	-16.26	-14.87
210	-23.02	-20.05	-18.27	-21.47	-16.80	-15.52
	-25.42	-20.27	-19.11	-22.39	-17.33	-16.15
	-29.23	-20.32	-19.80	-26.81	-17.93	-17.40
	-25.98	-20.50	-19.42	-26.99	-18.56	-17.98
	-24.10	-20.56	-18.97	-26.78	-19.34	-18.62
240	-22.99	-20.72	-18.69	-24.67	-20.15	-18.83
	-22.57	-20.81	-18.59	-23.47	-20.97	-19.03
	-22.76	-20.81	-18.67	-22.14	-21.92	-19.02
	-23.99	-20.81	-19.10	-22.04	-23.02	-19.49
	-26.22	-20.72	-19.64	-23.00	-24.41	-20.64
270	-29.33	-20.60	-20.05	-24.98	-25.67	-22.30
	-26.41	-20.70	-19.67	-26.02	-27.00	-23.47
	-22.25	-21.19	-18.68	-25.77	-28.41	-23.88
	-20.75	-21.68	-18.18	-24.83	-30.64	-23.82
	-20.62	-22.70	-18.53	-26.79	-32.30	-25.71
300	-22.68	-24.48	-20.48	-27.40	-32.96	-26.34
	-27.76	-27.27	-24.50	-25.94	-33.39	-25.22
	-30.32	-31.71	-27.95	-22.70	-32.67	-22.28
	-30.32	-36.35	-29.35	-21.54	-31.89	-21.16
	-28.46	-31.79	-26.80	-20.75	-30.70	-20.33
330	-26.75	-27.70	-24.19	-19.24	-30.73	-18.94
	-25.50	-24.76	-22.11	-17.65	-30.32	-17.42
	-27.20	-23.15	-21.71	-16.27	-30.20	-16.10
	-30.03	-21.99	-21.36	-16.06	-30.42	-15.90
	-27.87	-21.49	-20.59	-16.58	-30.43	-16.40
	-24.57	-21.45	-19.73	-17.17	-30.48	-16.97
	-23.22	-21.64	-19.35	-17.92	-29.81	-17.65
	-24.16	-22.37	-20.16	-18.55	-28.91	-18.17
	-24.95	-22.75	-20.70	-20.38	-27.63	-19.63
	-27.28	-23.68	-22.11	-22.29	-26.27	-20.83
	-27.94	-24.40	-22.81	-25.72	-25.25	-22.47
	-29.41	-24.76	-23.48	-27.82	-24.14	-22.59
	-28.60	-24.44	-23.03	-28.82	-23.14	-22.10
	-27.41	-23.86	-22.27	-29.18	-22.26	-21.46
	-25.18	-22.62	-20.70	-29.75	-21.58	-20.96
	-23.48	-21.42	-19.32	-30.24	-21.04	-20.55
	-21.72	-20.28	-17.93	-29.21	-20.42	-19.88

ピーク値	-12.93	-8.99	-8.89	-8.99	-12.93	-7.52
平均値	-20.45	-15.48	-14.28	-17.07	-17.30	-14.17

平均化

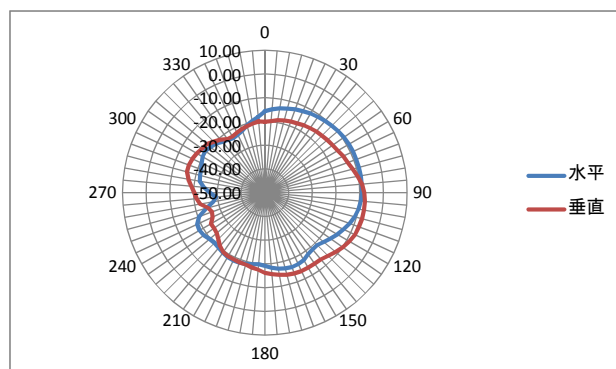


ピーク値	水平平均	垂直平均	平均化利得
-7.52	-14.28	-14.17	-14.17 dBi

m1510.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-20.44	-23.60	-18.73	-23.03	-24.12	-20.53
	-19.67	-22.06	-17.69	-21.65	-23.16	-19.33
	-19.27	-20.61	-16.87	-20.85	-22.50	-18.59
	-19.00	-19.66	-16.30	-19.55	-21.84	-17.53
	-18.97	-19.01	-15.98	-18.47	-21.16	-16.60
30	-19.50	-18.45	-15.93	-17.22	-20.38	-15.51
	-20.52	-18.20	-16.20	-16.35	-19.78	-14.73
	-22.27	-18.14	-16.72	-15.24	-19.12	-13.75
	-24.63	-18.27	-17.37	-14.09	-18.50	-12.75
	-28.60	-18.66	-18.24	-12.65	-17.87	-11.51
60	-35.03	-19.40	-19.28	-11.50	-17.26	-10.48
	-56.02	-20.23	-20.23	-10.21	-16.55	-9.30
	-33.30	-20.75	-20.51	-9.47	-15.97	-8.60
	-27.68	-20.35	-19.62	-9.08	-15.32	-8.15
	-23.38	-18.95	-17.62	-9.46	-14.73	-8.33
90	-20.50	-16.87	-15.31	-10.04	-14.31	-8.66
	-17.64	-14.82	-12.99	-11.12	-13.91	-9.28
	-15.49	-13.28	-11.23	-11.88	-13.65	-9.66
	-13.88	-11.85	-9.74	-12.88	-13.43	-10.14
	-13.29	-10.91	-8.93	-14.69	-13.33	-10.95
120	-13.52	-10.08	-8.45	-17.42	-13.29	-11.87
	-14.29	-9.55	-8.29	-21.70	-13.31	-12.72
	-15.45	-9.23	-8.30	-19.37	-13.47	-12.47
	-16.83	-9.08	-8.40	-16.37	-13.69	-11.82
	-17.67	-9.16	-8.58	-14.71	-13.97	-11.32
150	-18.93	-9.41	-8.95	-14.96	-14.26	-11.58
	-19.21	-9.84	-9.36	-15.27	-14.62	-11.92
	-20.93	-10.38	-10.02	-15.52	-15.09	-12.29
	-21.53	-11.11	-10.73	-14.94	-15.51	-12.20
	-22.16	-11.96	-11.57	-14.43	-16.02	-12.14
180	-21.05	-13.00	-12.36	-14.71	-16.54	-12.52
	-20.54	-14.16	-13.26	-15.38	-16.97	-13.09
	-20.42	-15.27	-14.11	-16.84	-17.61	-14.20
	-21.08	-16.70	-15.35	-18.82	-18.14	-15.45
	-22.54	-18.14	-16.79	-21.49	-18.69	-16.86
210	-24.14	-19.59	-18.28	-23.97	-19.21	-17.96
	-26.75	-20.93	-19.92	-26.47	-19.75	-18.91
	-27.98	-22.37	-21.32	-24.80	-20.17	-18.88
	-25.51	-23.18	-21.18	-24.03	-20.85	-19.14
	-24.29	-23.24	-20.72	-23.55	-21.14	-19.17
240	-23.71	-22.91	-20.28	-24.04	-21.73	-19.73
	-23.69	-21.77	-19.62	-26.64	-22.15	-20.83
	-24.20	-20.63	-19.04	-33.48	-22.48	-22.14
	-26.56	-19.32	-18.57	-35.24	-23.01	-22.76
	-30.06	-18.34	-18.06	-27.89	-23.36	-22.05
270	-35.04	-17.43	-17.36	-24.54	-23.90	-21.20
	-27.19	-16.80	-16.42	-23.79	-24.35	-21.05
	-22.95	-16.42	-15.54	-25.12	-24.80	-21.95
	-21.93	-16.48	-15.39	-26.29	-25.22	-22.71
	-23.29	-16.72	-15.86	-25.76	-25.60	-22.67
300	-26.63	-17.51	-17.01	-26.17	-25.73	-22.93
	-29.41	-18.82	-18.45	-25.77	-25.79	-22.77
	-27.24	-21.02	-20.09	-25.33	-25.60	-22.45
	-25.63	-24.28	-21.89	-23.18	-25.49	-21.17
	-24.58	-29.98	-23.48	-22.82	-25.55	-20.96
330	-23.90	-38.54	-23.76	-21.88	-25.55	-20.33
	-24.75	-29.08	-23.39	-22.53	-25.63	-20.80
	-28.70	-24.08	-22.79	-22.26	-26.36	-20.83
	-31.01	-21.26	-20.82	-22.02	-26.56	-20.71
	-25.84	-19.88	-18.90	-19.88	-27.13	-19.13
	-22.81	-19.12	-17.57	-19.00	-27.82	-18.46
	-22.20	-18.90	-17.24	-17.72	-28.73	-17.39
	-23.37	-19.05	-17.68	-18.62	-29.20	-18.25
	-24.74	-19.57	-18.41	-18.66	-28.89	-18.26
	-27.05	-20.54	-19.66	-20.05	-28.85	-19.51
	-28.19	-21.66	-20.79	-21.09	-28.08	-20.29
	-28.92	-23.36	-22.30	-22.31	-27.39	-21.13
	-27.42	-24.84	-22.93	-22.99	-26.71	-21.45
	-25.86	-26.23	-23.03	-23.54	-26.00	-21.59
	-24.05	-26.63	-22.14	-23.31	-25.26	-21.17
	-22.43	-25.65	-20.74	-23.15	-24.45	-20.74
	-21.32	-24.29	-19.55	-22.26	-23.88	-19.98

ピーク値	-13.29	-9.08	-8.29	-9.08	-13.29	-8.15
平均値	-20.88	-15.72	-14.56	-16.51	-18.39	-14.34

平均化

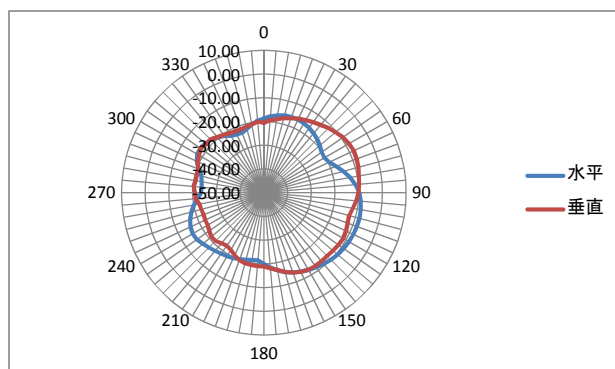


ピーク値	水平平均	垂直平均	平均化利得
-8.15	-14.56	-14.34	-14.34 dBi

m1575.42MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-29.82	-15.86	-15.68	-25.83	-27.60	-23.62
	-32.91	-14.72	-14.65	-24.67	-28.16	-23.06
	-33.12	-13.74	-13.69	-24.52	-29.64	-23.36
	-31.40	-12.69	-12.63	-23.00	-31.12	-22.38
	-27.68	-11.69	-11.59	-22.29	-32.34	-21.88
30	-26.13	-10.76	-10.64	-20.36	-34.00	-20.18
	-23.80	-9.81	-9.64	-19.55	-35.91	-19.45
	-23.51	-8.93	-8.78	-18.21	-37.77	-18.16
	-23.36	-8.09	-7.97	-18.60	-41.00	-18.58
	-24.10	-7.46	-7.36	-17.39	-41.63	-17.37
60	-26.00	-6.81	-6.76	-17.31	-41.48	-17.29
	-26.96	-6.26	-6.22	-15.22	-39.72	-15.21
	-24.61	-5.89	-5.83	-14.02	-36.66	-14.00
	-23.36	-5.59	-5.52	-11.41	-33.73	-11.38
	-22.68	-5.43	-5.35	-10.61	-30.48	-10.57
90	-23.74	-5.40	-5.34	-9.46	-27.90	-9.40
	-23.54	-5.50	-5.43	-8.66	-25.00	-8.56
	-22.32	-5.70	-5.60	-6.91	-23.13	-6.81
	-20.15	-6.01	-5.84	-5.81	-21.30	-5.69
	-17.70	-6.46	-6.15	-5.40	-19.67	-5.24
120	-16.02	-6.99	-6.48	-5.76	-18.27	-5.53
	-15.62	-7.71	-7.06	-6.32	-17.23	-5.98
	-17.39	-8.55	-8.02	-6.55	-16.21	-6.10
	-19.40	-9.56	-9.13	-6.37	-15.43	-5.86
	-19.14	-10.70	-10.12	-6.87	-14.81	-6.22
150	-17.45	-11.97	-10.89	-7.99	-14.27	-7.07
	-15.28	-13.30	-11.16	-9.96	-13.98	-8.51
	-14.52	-14.76	-11.63	-11.89	-13.74	-9.71
	-13.63	-16.36	-11.77	-13.53	-13.66	-10.58
	-14.06	-17.62	-12.47	-13.62	-13.63	-10.61
180	-14.84	-18.45	-13.27	-14.00	-13.77	-10.87
	-16.98	-18.81	-14.79	-14.07	-13.87	-10.96
	-18.87	-18.80	-15.82	-14.79	-14.17	-11.46
	-21.14	-18.72	-16.76	-15.86	-14.50	-12.11
	-22.16	-18.40	-16.87	-17.48	-14.95	-13.02
210	-23.27	-18.11	-16.95	-19.26	-15.41	-13.91
	-22.43	-17.95	-16.63	-20.76	-15.89	-14.66
	-22.24	-17.77	-16.44	-25.80	-16.53	-16.05
	-21.27	-17.77	-16.16	-27.42	-17.16	-16.77
	-20.76	-17.56	-15.86	-28.85	-17.79	-17.46
240	-20.39	-17.57	-15.74	-28.89	-18.64	-18.24
	-20.98	-17.46	-15.86	-29.68	-19.48	-19.08
	-21.06	-17.38	-15.83	-29.12	-20.22	-19.69
	-23.39	-17.24	-16.30	-31.36	-21.23	-20.82
	-28.19	-17.19	-16.86	-37.78	-22.06	-21.95
270	-38.59	-17.18	-17.15	-39.18	-23.04	-22.93
	-26.47	-17.27	-16.78	-30.91	-24.08	-23.26
	-24.59	-17.67	-16.87	-30.45	-25.05	-23.95
	-27.03	-18.46	-17.89	-30.26	-25.84	-24.50
	-33.36	-19.61	-19.43	-36.52	-26.83	-26.38
300	-25.45	-21.48	-20.02	-28.92	-27.71	-25.26
	-20.71	-24.52	-19.20	-26.28	-28.65	-24.29
	-20.64	-29.68	-20.13	-24.12	-29.46	-23.00
	-23.52	-35.90	-23.28	-24.52	-30.39	-23.52
	-27.04	-29.47	-25.08	-22.62	-30.93	-22.02
330	-29.00	-24.74	-23.36	-21.62	-31.25	-21.17
	-35.48	-21.86	-21.67	-19.70	-31.72	-19.44
	-34.57	-20.31	-20.15	-18.96	-31.61	-18.73
	-27.02	-19.18	-18.52	-18.63	-31.60	-18.42
	-24.91	-18.58	-17.67	-20.32	-30.87	-19.95
	-24.43	-18.65	-17.63	-21.90	-30.58	-21.34
	-26.32	-18.94	-18.21	-24.46	-30.07	-23.41
	-25.20	-19.68	-18.61	-24.43	-29.91	-23.35
	-24.79	-20.65	-19.23	-25.01	-29.30	-23.63
	-25.90	-22.01	-20.52	-24.75	-28.74	-23.29
	-30.13	-23.32	-22.49	-27.00	-28.19	-24.54
	-34.42	-24.18	-23.79	-29.44	-28.38	-25.87
	-35.94	-24.60	-24.29	-32.24	-28.39	-26.89
	-32.36	-23.92	-23.34	-31.93	-28.37	-26.78
	-30.28	-22.62	-21.94	-29.14	-28.57	-25.84
	-29.40	-21.34	-20.71	-28.58	-29.40	-25.96
	-30.24	-19.69	-19.32	-27.05	-29.87	-25.23

ピーク値	-13.63	-5.40	-5.34	-5.40	-13.63	-5.24
平均値	-21.19	-11.74	-11.28	-13.53	-19.81	-12.61

平均化

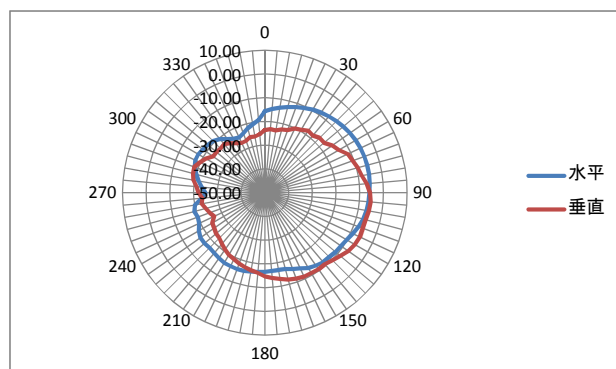


ピーク値 水平平均 垂直平均 平均化利得
 -5.24 -11.28 -12.61 -11.28 dBi

m1744.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-22.47	-9.03	-8.84	-25.43	-7.28	-7.21
	-20.34	-8.13	-7.87	-25.19	-6.65	-6.59
	-18.13	-7.28	-6.94	-26.53	-6.07	-6.03
	-16.97	-6.35	-5.99	-28.02	-5.42	-5.39
	-16.70	-5.49	-5.17	-32.94	-4.80	-4.79
30	-16.75	-4.69	-4.42	-30.07	-4.13	-4.12
	-17.04	-3.90	-3.69	-29.90	-3.55	-3.54
	-18.17	-3.16	-3.02	-24.95	-2.94	-2.92
	-18.19	-2.54	-2.42	-23.67	-2.33	-2.30
	-18.86	-2.06	-1.97	-22.35	-1.76	-1.72
60	-18.74	-1.67	-1.59	-18.86	-1.26	-1.18
	-14.58	-1.42	-1.21	-15.38	-0.74	-0.59
	-12.94	-1.38	-1.08	-11.46	-0.28	0.04
	-9.04	-1.50	-0.79	-8.70	0.09	0.63
	-6.87	-1.81	-0.63	-6.38	0.48	1.29
90	-4.59	-2.36	-0.32	-4.97	0.79	1.81
	-3.97	-3.16	-0.53	-3.77	1.04	2.28
	-3.02	-4.25	-0.58	-2.82	1.20	2.65
	-2.53	-5.37	-0.71	-1.78	1.31	3.04
	-0.73	-6.95	0.20	-1.38	1.31	3.18
120	0.36	-8.27	0.92	-1.44	1.27	3.13
	1.31	-9.67	1.64	-2.36	1.17	2.76
	0.76	-10.46	1.07	-3.09	0.92	2.37
	0.39	-10.82	0.71	-3.28	0.62	2.10
	-0.17	-10.73	0.19	-3.79	0.24	1.69
150	-0.41	-10.40	0.00	-5.07	-0.23	1.00
	-1.43	-10.09	-0.87	-7.55	-0.76	0.06
	-3.49	-9.62	-2.54	-10.97	-1.37	-0.92
	-7.41	-9.24	-5.22	-15.01	-2.06	-1.85
	-13.18	-8.99	-7.59	-15.69	-2.82	-2.60
180	-18.98	-8.93	-8.52	-16.10	-3.67	-3.43
	-16.22	-8.77	-8.05	-16.14	-4.57	-4.28
	-15.02	-8.88	-7.93	-16.83	-5.47	-5.16
	-15.81	-8.91	-8.10	-18.52	-6.40	-6.14
	-17.02	-9.00	-8.37	-19.39	-7.36	-7.10
210	-16.37	-9.19	-8.43	-19.77	-8.32	-8.02
	-13.97	-9.43	-8.12	-18.37	-9.32	-8.81
	-12.19	-9.76	-7.80	-11.46	-10.25	-7.80
	-11.05	-10.17	-7.58	-11.40	-11.23	-8.31
	-9.85	-10.70	-7.24	-12.48	-12.11	-9.28
240	-9.58	-11.30	-7.35	-12.94	-13.10	-10.01
	-10.25	-11.91	-7.99	-15.62	-13.95	-11.69
	-13.09	-12.31	-9.67	-20.11	-14.68	-13.58
	-21.40	-12.76	-12.20	-31.00	-15.57	-15.45
	-29.60	-12.78	-12.69	-22.53	-16.49	-15.53
270	-14.26	-12.50	-10.28	-19.26	-17.34	-15.19
	-10.17	-12.15	-8.04	-17.98	-18.62	-15.28
	-8.03	-11.96	-6.55	-23.57	-20.17	-18.53
	-8.97	-12.06	-7.24	-27.87	-21.98	-20.99
	-10.97	-12.92	-8.82	-18.10	-23.99	-17.10
300	-15.40	-14.33	-11.82	-13.40	-25.01	-13.11
	-20.63	-17.14	-15.53	-12.28	-24.21	-12.01
	-19.38	-22.44	-17.63	-11.97	-22.84	-11.62
	-14.14	-24.25	-13.73	-12.06	-21.56	-11.60
	-11.77	-18.64	-10.95	-11.86	-20.63	-11.32
330	-11.97	-14.83	-10.16	-11.60	-20.52	-11.07
	-15.92	-12.64	-10.97	-11.12	-21.18	-10.71
	-19.49	-11.31	-10.70	-11.50	-22.88	-11.20
	-17.57	-10.71	-9.89	-11.40	-25.85	-11.24
	-16.01	-10.71	-9.58	-11.96	-33.94	-11.94
	-16.15	-11.20	-10.00	-11.73	-35.85	-11.72
	-15.17	-12.03	-10.31	-12.34	-25.52	-12.14
	-15.27	-13.22	-11.12	-13.54	-20.41	-12.73
	-15.18	-14.62	-11.88	-17.01	-17.03	-14.01
	-17.12	-16.00	-13.51	-18.40	-14.83	-13.25
	-18.64	-17.02	-14.74	-19.16	-13.04	-12.09
	-22.66	-17.28	-16.17	-19.34	-11.72	-11.02
	-27.66	-16.62	-16.29	-22.66	-10.67	-10.40
	-30.63	-15.92	-15.78	-21.77	-9.69	-9.43
	-28.44	-14.77	-14.59	-22.56	-8.91	-8.72
	-23.62	-13.67	-13.25	-23.71	-8.21	-8.08
	-19.56	-12.64	-11.84	-26.36	-7.60	-7.54

ピーク値	1.31	-1.38	1.64	-1.38	1.31	3.18
平均値	-7.48	-7.60	-4.53	-9.64	-4.13	-3.05

平均化

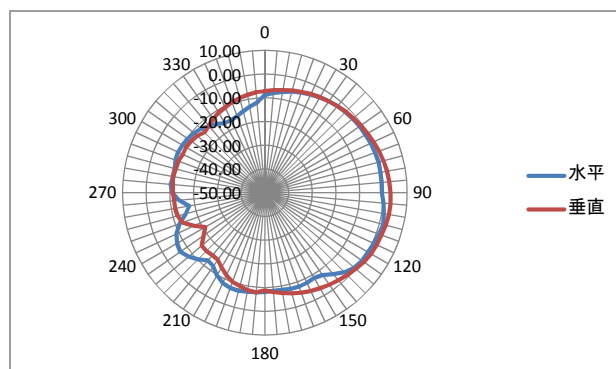


ピーク値 水平平均 垂直平均 平均化利得
3.18 -4.53 -3.05 -3.05 dBi

m1784.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-20.32	-8.09	-7.84	-26.72	-6.51	-6.47
	-20.14	-7.43	-7.21	-25.70	-6.11	-6.06
	-18.18	-6.61	-6.31	-26.14	-5.54	-5.50
	-16.67	-5.82	-5.47	-28.45	-4.96	-4.94
	-14.89	-4.93	-4.51	-26.08	-4.41	-4.38
30	-13.72	-4.15	-3.70	-24.78	-3.78	-3.74
	-13.22	-3.32	-2.89	-22.47	-3.22	-3.17
	-13.94	-2.67	-2.36	-22.43	-2.60	-2.56
	-14.55	-1.97	-1.74	-22.48	-2.02	-1.99
	-15.83	-1.38	-1.23	-21.79	-1.45	-1.41
60	-18.04	-0.93	-0.84	-18.77	-0.95	-0.87
	-19.70	-0.57	-0.52	-17.90	-0.42	-0.35
	-19.83	-0.34	-0.29	-15.21	0.05	0.18
	-13.75	-0.29	-0.10	-11.95	0.48	0.72
	-10.80	-0.38	0.00	-8.35	0.86	1.35
90	-7.11	-0.66	0.23	-6.04	1.20	1.95
	-5.21	-1.15	0.29	-4.37	1.43	2.44
	-3.29	-1.86	0.50	-3.32	1.58	2.79
	-2.30	-2.85	0.45	-1.71	1.67	3.31
	-0.54	-4.01	1.07	-0.82	1.65	3.60
120	0.55	-5.40	1.53	-0.29	1.54	3.73
	1.67	-7.28	2.19	-1.08	1.37	3.32
	1.26	-9.26	1.63	-1.66	1.02	2.90
	1.08	-11.53	1.31	-1.79	0.66	2.62
	0.31	-13.48	0.49	-1.94	0.19	2.27
150	-0.22	-14.83	-0.07	-2.76	-0.33	1.63
	-1.36	-14.87	-1.17	-4.83	-0.94	0.55
	-3.33	-14.09	-2.98	-7.59	-1.61	-0.63
	-6.94	-13.15	-6.01	-11.02	-2.29	-1.75
	-10.70	-12.10	-8.33	-12.91	-3.12	-2.68
180	-12.98	-11.31	-9.06	-15.26	-4.00	-3.69
	-11.70	-10.70	-8.16	-16.91	-4.82	-4.56
	-10.94	-10.16	-7.52	-19.75	-5.71	-5.54
	-10.69	-9.89	-7.26	-22.71	-6.61	-6.50
	-10.74	-9.81	-7.24	-22.58	-7.51	-7.37
210	-10.21	-9.76	-6.97	-23.45	-8.48	-8.34
	-9.23	-9.98	-6.58	-20.30	-9.33	-9.00
	-22.73	-10.25	-10.01	-14.80	-10.27	-8.96
	-25.32	-10.71	-10.56	-15.29	-11.17	-9.75
	-28.76	-11.37	-11.29	-17.47	-11.88	-10.82
240	-23.03	-12.08	-11.74	-18.43	-12.56	-11.56
	-18.27	-12.92	-11.81	-20.37	-13.32	-12.54
	-16.61	-13.82	-11.98	-23.58	-13.78	-13.34
	-15.54	-14.49	-11.97	-29.20	-14.31	-14.17
	-15.25	-14.92	-12.07	-21.75	-14.71	-13.92
270	-13.46	-14.92	-11.11	-19.67	-14.98	-13.71
	-13.81	-14.91	-11.32	-18.24	-15.40	-13.58
	-14.35	-14.95	-11.63	-23.56	-15.69	-15.03
	-16.54	-15.43	-12.94	-38.98	-15.97	-15.95
	-17.95	-16.63	-14.23	-29.47	-16.14	-15.94
300	-20.40	-19.00	-16.63	-20.63	-16.53	-15.10
	-27.24	-24.27	-22.49	-18.64	-16.86	-14.65
	-20.02	-30.26	-19.62	-16.63	-17.19	-13.89
	-13.42	-21.80	-12.83	-14.49	-17.80	-12.82
	-12.50	-16.82	-11.13	-11.86	-18.54	-11.02
330	-12.54	-14.06	-10.22	-10.88	-19.40	-10.31
	-15.62	-12.08	-10.49	-9.53	-20.72	-9.21
	-18.54	-11.05	-10.34	-9.51	-21.75	-9.26
	-16.54	-10.57	-9.59	-8.81	-21.97	-8.61
	-12.42	-10.60	-8.40	-9.52	-20.73	-9.20
	-10.34	-11.14	-7.71	-9.88	-18.59	-9.33
	-8.52	-11.84	-6.86	-10.97	-16.32	-9.86
	-9.64	-12.79	-7.92	-11.95	-14.14	-9.90
	-11.34	-13.80	-9.39	-15.64	-12.56	-10.82
	-17.23	-14.54	-12.67	-18.67	-11.24	-10.52
	-17.15	-14.96	-12.91	-20.72	-10.12	-9.76
	-12.33	-14.79	-10.38	-21.52	-9.30	-9.05
	-10.04	-14.47	-8.70	-27.38	-8.53	-8.47
	-9.48	-13.82	-8.12	-30.49	-7.87	-7.85
	-9.46	-13.16	-7.91	-35.25	-7.26	-7.25
	-10.86	-12.39	-8.55	-37.26	-6.80	-6.79
	-12.88	-11.57	-9.17	-40.41	-6.25	-6.25

ピーク値	1.67	-0.29	2.19	-0.29	1.67	3.73
平均値	-7.20	-6.88	-4.03	-9.04	-3.82	-2.68

平均化

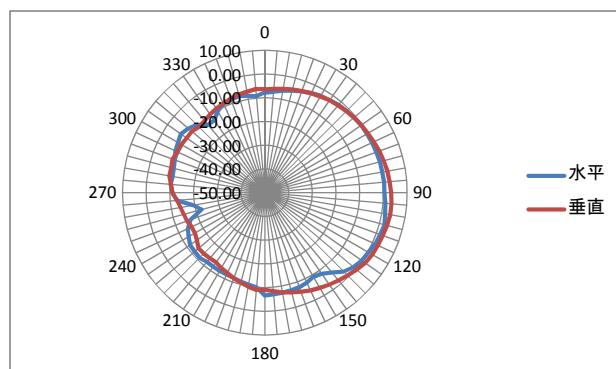


ピーク値	水平平均	垂直平均	平均化利得
3.73	-4.03	-2.68	-2.68 dBi

m1920MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-15.93	-9.87	-8.91	-17.47	-12.10	-11.00
	-16.20	-9.21	-8.42	-17.05	-10.67	-9.77
	-15.53	-8.46	-7.68	-17.14	-9.19	-8.54
	-15.43	-7.71	-7.03	-17.49	-8.06	-7.59
	-14.74	-6.88	-6.22	-18.20	-6.94	-6.63
30	-14.60	-5.94	-5.39	-18.20	-5.98	-5.73
	-13.76	-5.06	-4.51	-17.13	-5.09	-4.83
	-12.90	-4.26	-3.70	-14.81	-4.28	-3.91
	-11.21	-3.54	-2.85	-12.89	-3.49	-3.02
	-10.15	-2.77	-2.04	-11.08	-2.89	-2.27
60	-9.19	-2.15	-1.36	-10.17	-2.27	-1.62
	-9.44	-1.61	-0.95	-10.08	-1.77	-1.17
	-10.71	-1.17	-0.71	-11.53	-1.33	-0.94
	-14.49	-0.86	-0.68	-12.85	-0.97	-0.70
	-18.77	-0.72	-0.65	-15.91	-0.68	-0.56
90	-18.06	-0.74	-0.66	-13.01	-0.50	-0.26
	-12.07	-0.93	-0.61	-8.79	-0.38	0.20
	-9.32	-1.32	-0.68	-6.04	-0.35	0.68
	-7.83	-1.81	-0.84	-4.53	-0.37	1.04
	-6.17	-2.57	-0.99	-3.06	-0.53	1.40
120	-3.90	-3.40	-0.63	-1.67	-0.75	1.83
	-2.06	-4.53	-0.11	-0.96	-1.02	2.02
	-1.12	-5.86	0.14	-0.72	-1.44	1.95
	-0.67	-7.71	0.11	-0.81	-1.96	1.66
	-0.58	-9.82	-0.09	-0.98	-2.61	1.29
150	-0.35	-12.02	-0.07	-1.30	-3.25	0.85
	-0.54	-15.32	-0.40	-2.23	-4.13	-0.07
	-1.75	-19.89	-1.69	-3.55	-5.07	-1.24
	-4.07	-26.63	-4.04	-5.60	-6.24	-2.90
	-7.21	-31.15	-7.20	-7.21	-7.46	-4.32
180	-10.67	-23.59	-10.45	-9.09	-8.85	-5.96
	-11.57	-19.78	-10.96	-10.39	-10.35	-7.36
	-11.48	-17.23	-10.45	-12.21	-12.16	-9.17
	-11.24	-15.85	-9.95	-13.62	-14.15	-10.87
	-11.66	-14.72	-9.92	-14.35	-16.00	-12.09
210	-12.03	-14.16	-9.95	-14.46	-18.01	-12.87
	-12.36	-13.86	-10.03	-14.28	-20.24	-13.30
	-13.71	-13.71	-10.70	-16.11	-22.86	-15.28
	-13.86	-13.74	-10.79	-16.35	-26.43	-15.95
	-14.04	-13.94	-10.98	-18.16	-28.07	-17.74
240	-15.72	-14.39	-11.99	-20.24	-27.37	-19.47
	-18.37	-15.04	-13.38	-24.01	-25.08	-21.50
	-24.29	-15.73	-15.16	-29.84	-22.75	-21.98
	-30.37	-16.38	-16.21	-35.72	-21.14	-20.99
	-21.27	-16.34	-15.13	-30.16	-19.58	-19.22
270	-15.14	-16.06	-12.57	-26.89	-18.08	-17.55
	-13.35	-15.60	-11.32	-26.41	-17.06	-16.58
	-13.08	-15.32	-11.05	-25.80	-15.81	-15.39
	-14.61	-15.11	-11.84	-22.61	-14.91	-14.23
	-17.08	-15.42	-13.16	-20.15	-14.18	-13.20
300	-19.86	-16.46	-14.82	-16.46	-13.54	-11.74
	-17.53	-17.96	-14.73	-14.34	-13.35	-10.80
	-16.45	-20.51	-15.01	-12.77	-13.19	-9.97
	-16.34	-23.78	-15.62	-13.72	-13.08	-10.38
	-18.32	-28.77	-17.95	-15.92	-13.21	-11.35
330	-15.45	-31.43	-15.34	-21.12	-13.43	-12.75
	-13.64	-27.44	-13.46	-22.65	-13.75	-13.23
	-12.62	-24.72	-12.36	-21.65	-14.13	-13.42
	-13.96	-23.80	-13.53	-20.13	-14.55	-13.49
	-15.17	-22.75	-14.47	-20.60	-14.91	-13.88
	-17.64	-22.12	-16.32	-20.80	-15.60	-14.45
	-20.86	-21.63	-18.22	-21.44	-16.01	-14.92
	-29.58	-20.02	-19.56	-22.33	-16.37	-15.39
	-27.08	-18.41	-17.86	-28.84	-16.91	-16.64
	-21.63	-17.34	-15.97	-30.59	-17.67	-17.46
	-20.35	-15.91	-14.57	-27.90	-18.19	-17.75
	-21.45	-15.02	-14.13	-25.11	-19.16	-18.17
	-20.25	-14.23	-13.26	-23.75	-19.66	-18.23
	-18.98	-13.19	-12.17	-24.26	-19.56	-18.29
	-18.03	-12.56	-11.48	-24.37	-18.79	-17.73
	-17.74	-12.00	-10.97	-23.91	-17.23	-16.38
	-17.85	-11.24	-10.38	-20.49	-15.23	-14.10

ピーク値	-0.35	-0.72	0.14	-0.72	-0.35	2.02
平均値	-8.91	-7.61	-5.20	-9.07	-6.26	-4.43

平均化

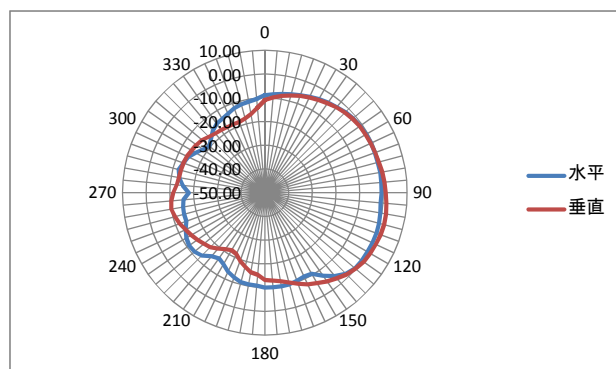


ピーク値	水平平均	垂直平均	平均化利得
2.02	-5.20	-4.43	-4.43 dBi

m1940MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-15.57	-8.58	-7.79	-17.87	-12.56	-11.44
	-15.62	-8.05	-7.35	-17.48	-11.29	-10.35
	-15.18	-7.50	-6.81	-17.81	-10.14	-9.46
	-15.38	-6.89	-6.32	-18.62	-8.94	-8.49
	-14.28	-6.25	-5.61	-19.05	-7.88	-7.56
	-14.01	-5.38	-4.82	-18.41	-6.90	-6.60
30	-12.45	-4.62	-3.96	-17.31	-6.02	-5.71
	-11.41	-3.92	-3.21	-15.56	-5.17	-4.79
	-9.61	-3.21	-2.31	-14.11	-4.41	-3.97
	-8.40	-2.55	-1.55	-12.38	-3.71	-3.16
	-7.84	-2.01	-1.00	-11.98	-3.04	-2.52
	-8.32	-1.54	-0.71	-12.25	-2.49	-2.05
60	-9.21	-1.19	-0.55	-13.31	-2.00	-1.69
	-11.40	-0.95	-0.58	-15.22	-1.60	-1.42
	-13.90	-0.88	-0.67	-25.24	-1.26	-1.24
	-18.31	-0.98	-0.90	-19.05	-1.02	-0.95
	-14.27	-1.23	-1.02	-11.32	-0.86	-0.49
	-10.77	-1.64	-1.13	-7.63	-0.78	0.03
90	-8.77	-2.26	-1.38	-5.54	-0.78	0.47
	-7.23	-3.02	-1.62	-3.77	-0.90	0.91
	-4.83	-3.89	-1.32	-2.22	-1.13	1.37
	-2.55	-5.01	-0.60	-1.30	-1.49	1.62
	-1.39	-6.31	-0.18	-0.88	-1.88	1.66
	-0.96	-8.00	-0.18	-1.04	-2.40	1.35
120	-1.04	-9.88	-0.51	-1.39	-3.12	0.84
	-0.78	-11.89	-0.46	-1.77	-3.88	0.31
	-1.03	-14.68	-0.84	-2.98	-4.78	-0.78
	-2.25	-18.10	-2.14	-4.53	-5.80	-2.11
	-4.50	-23.12	-4.44	-6.81	-7.04	-3.91
	-7.56	-35.16	-7.56	-8.39	-8.47	-5.42
150	-10.70	-29.67	-10.65	-10.33	-9.89	-7.10
	-11.26	-23.08	-10.98	-11.34	-11.72	-8.51
	-11.08	-19.56	-10.50	-12.65	-13.69	-10.13
	-10.86	-17.45	-10.00	-13.83	-15.57	-11.60
	-11.69	-16.26	-10.39	-15.02	-17.48	-13.07
	-12.03	-15.37	-10.37	-16.39	-19.56	-14.68
180	-12.16	-15.10	-10.38	-16.52	-21.09	-15.22
	-13.76	-14.69	-11.19	-25.01	-21.71	-20.04
	-13.98	-14.64	-11.29	-30.81	-21.39	-20.92
	-14.28	-15.04	-11.63	-34.43	-20.29	-20.12
	-16.36	-15.64	-12.98	-28.26	-19.46	-18.92
	-20.10	-16.66	-15.04	-27.75	-18.05	-17.60
210	-29.59	-17.85	-17.57	-25.70	-17.16	-16.59
	-27.83	-19.52	-18.92	-24.67	-16.38	-15.78
	-19.95	-20.94	-17.41	-23.47	-15.67	-15.00
	-14.83	-20.56	-13.80	-23.92	-14.85	-14.34
	-13.19	-19.52	-12.28	-24.85	-14.30	-13.94
	-12.95	-18.80	-11.95	-24.23	-13.72	-13.35
240	-15.34	-18.38	-13.59	-23.71	-13.24	-12.86
	-19.49	-18.37	-15.89	-23.12	-12.96	-12.56
	-24.25	-19.37	-18.15	-19.37	-12.79	-11.93
	-20.27	-21.99	-18.04	-16.71	-12.49	-11.10
	-17.78	-25.65	-17.12	-14.83	-12.66	-10.60
	-16.11	-35.45	-16.05	-15.38	-12.64	-10.78
270	-16.61	-33.14	-16.52	-16.46	-12.95	-11.35
	-17.25	-25.15	-16.59	-18.39	-13.09	-11.97
	-18.05	-20.98	-16.26	-18.56	-13.58	-12.38
	-19.31	-19.41	-16.35	-16.71	-13.82	-12.02
	-23.33	-18.37	-17.17	-15.00	-14.35	-11.65
	-26.07	-17.74	-17.15	-16.09	-14.92	-12.46
300	-24.42	-17.22	-16.47	-19.03	-15.23	-13.72
	-22.90	-16.59	-15.68	-23.43	-15.79	-15.10
	-24.27	-15.76	-15.19	-28.94	-16.15	-15.92
	-20.39	-14.95	-13.86	-29.25	-16.70	-16.46
	-19.83	-14.08	-13.05	-29.53	-17.03	-16.79
	-19.92	-13.26	-12.41	-29.71	-17.64	-17.38
330	-21.91	-12.65	-12.16	-27.81	-17.81	-17.39
	-23.14	-12.13	-11.80	-29.36	-17.90	-17.60
	-22.77	-11.61	-11.29	-33.42	-17.74	-17.62
	-21.93	-11.08	-10.73	-37.26	-17.27	-17.23
	-20.61	-10.68	-10.26	-29.91	-16.40	-16.21
	-20.97	-10.23	-9.88	-25.24	-15.23	-14.82

ピーク値 -0.78 -0.88 **-0.18** -0.88 -0.78 **1.66**
 平均値 -9.24 -7.63 **-5.35** -9.78 -6.76 **-5.01**

平均化

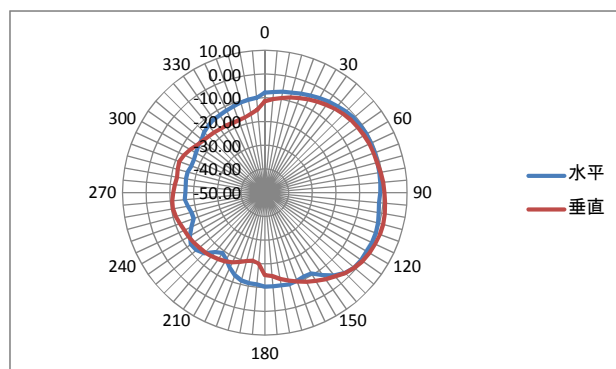


ピーク値 水平平均 垂直平均 平均化利得
 1.66 -5.35 -5.01 -5.01 dBi

m1960MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-13.47	-10.96	-9.02	-14.17	-11.10	-9.36
	-13.00	-10.13	-8.32	-14.09	-9.80	-8.43
	-12.44	-9.32	-7.60	-14.75	-8.66	-7.70
	-12.42	-8.28	-6.86	-15.38	-7.70	-7.01
	-12.00	-7.31	-6.04	-16.82	-6.69	-6.29
30	-12.06	-6.19	-5.19	-18.80	-5.81	-5.59
	-11.19	-5.29	-4.30	-19.41	-4.99	-4.84
	-10.31	-4.51	-3.50	-17.12	-4.18	-3.96
	-8.32	-3.63	-2.36	-14.33	-3.44	-3.10
	-6.70	-2.77	-1.29	-11.71	-2.74	-2.22
60	-5.76	-2.16	-0.59	-11.20	-2.17	-1.66
	-6.01	-1.66	-0.30	-11.85	-1.61	-1.22
	-6.91	-1.26	-0.21	-12.88	-1.19	-0.90
	-8.59	-0.99	-0.29	-13.61	-0.79	-0.57
	-9.75	-0.84	-0.31	-17.31	-0.49	-0.40
90	-12.21	-0.81	-0.51	-22.33	-0.28	-0.25
	-13.09	-0.98	-0.72	-14.99	-0.15	-0.01
	-11.06	-1.25	-0.82	-9.44	-0.06	0.41
	-8.96	-1.62	-0.88	-6.82	-0.05	0.78
	-7.93	-2.13	-1.12	-4.88	-0.17	1.09
120	-5.39	-2.84	-0.92	-2.98	-0.36	1.53
	-2.65	-3.66	-0.11	-1.97	-0.68	1.74
	-1.07	-4.50	0.55	-1.31	-1.06	1.82
	-0.50	-5.49	0.70	-1.11	-1.56	1.68
	-0.37	-6.51	0.58	-0.81	-2.23	1.55
150	-0.05	-7.64	0.64	-0.99	-2.92	1.16
	-0.20	-8.87	0.35	-1.96	-3.82	0.22
	-1.34	-10.02	-0.78	-3.56	-4.81	-1.13
	-3.50	-11.22	-2.82	-5.83	-5.88	-2.85
	-6.65	-12.46	-5.63	-7.86	-6.96	-4.37
180	-10.13	-13.53	-8.50	-10.18	-8.11	-6.01
	-10.27	-14.27	-8.82	-11.39	-9.39	-7.26
	-9.95	-14.91	-8.74	-13.08	-10.77	-8.76
	-9.68	-15.24	-8.62	-14.52	-12.20	-10.19
	-10.39	-15.24	-9.16	-16.04	-13.55	-11.61
210	-10.89	-15.51	-9.60	-17.23	-14.73	-12.79
	-11.00	-15.72	-9.74	-17.33	-16.23	-13.74
	-14.00	-15.78	-11.79	-19.71	-17.46	-15.43
	-14.04	-16.19	-11.97	-21.95	-18.78	-17.07
	-14.21	-16.49	-12.19	-26.08	-19.48	-18.62
240	-15.17	-17.53	-13.18	-27.73	-19.73	-19.10
	-17.77	-18.82	-15.25	-24.86	-19.09	-18.07
	-24.08	-20.62	-19.00	-22.15	-18.96	-17.26
	-29.52	-23.07	-22.18	-22.37	-17.97	-16.62
	-20.73	-26.89	-19.78	-22.07	-17.28	-16.04
270	-15.19	-32.61	-15.11	-22.85	-16.38	-15.50
	-13.56	-43.82	-13.55	-25.77	-15.48	-15.09
	-13.30	-33.14	-13.25	-27.30	-14.81	-14.57
	-16.83	-28.68	-16.56	-28.06	-14.24	-14.06
	-22.93	-26.95	-21.48	-26.35	-13.86	-13.62
300	-28.46	-27.60	-25.00	-20.88	-13.35	-12.64
	-20.26	-28.06	-19.59	-17.39	-13.08	-11.71
	-17.38	-30.56	-17.17	-15.30	-13.05	-11.02
	-16.07	-32.75	-15.98	-14.95	-13.25	-11.01
	-17.83	-35.19	-17.75	-15.97	-13.30	-11.42
330	-19.26	-37.24	-19.20	-20.74	-13.66	-12.88
	-18.47	-33.13	-18.32	-21.93	-14.24	-13.56
	-17.67	-30.97	-17.47	-20.43	-14.61	-13.60
	-16.94	-28.31	-16.63	-18.08	-15.04	-13.29
	-16.27	-25.90	-15.82	-17.78	-15.81	-13.67
	-17.72	-22.88	-16.56	-16.90	-16.24	-13.55
	-20.92	-20.73	-17.82	-17.58	-16.54	-14.02
	-38.47	-18.71	-18.66	-20.86	-16.75	-15.33
	-21.84	-17.17	-15.90	-27.31	-16.80	-16.43
	-18.24	-16.15	-14.06	-34.26	-16.73	-16.65
	-18.44	-15.27	-13.57	-33.10	-16.65	-16.55
	-21.77	-14.27	-13.55	-28.74	-16.53	-16.28
	-22.67	-13.63	-13.11	-28.15	-16.13	-15.87
	-20.37	-12.93	-12.21	-31.91	-15.60	-15.50
	-18.83	-12.19	-11.34	-28.58	-14.97	-14.78
	-17.11	-11.74	-10.63	-26.14	-14.10	-13.83
	-16.79	-11.02	-10.00	-21.67	-13.03	-12.47

ピーク値 -0.05 -0.81 0.70 -0.81 -0.05 1.82
 平均値 -8.43 -7.44 -4.90 -9.75 -5.93 -4.42

平均化

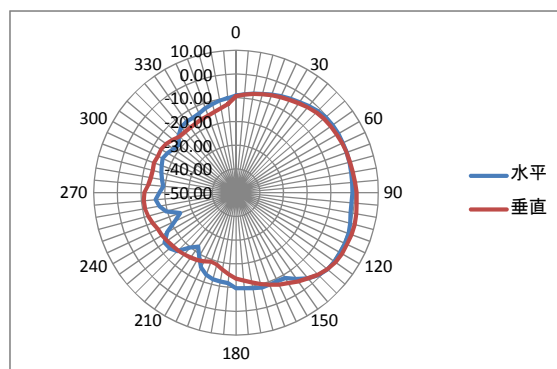


ピーク値 水平平均 垂直平均 平均化利得
 1.82 -4.90 -4.42 -4.42 dBi

m1980MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-13.80	-13.03	-10.39	-14.87	-11.48	-9.84
	-13.67	-11.80	-9.62	-14.31	-10.20	-8.77
	-12.89	-10.58	-8.57	-14.22	-9.29	-8.08
	-12.65	-9.57	-7.83	-14.28	-8.22	-7.26
	-12.13	-8.43	-6.89	-14.74	-7.29	-6.58
30	-12.06	-7.50	-6.19	-15.40	-6.42	-5.90
	-11.17	-6.57	-5.27	-16.39	-5.68	-5.33
	-10.23	-5.71	-4.40	-15.50	-4.93	-4.57
	-8.25	-4.87	-3.23	-13.33	-4.27	-3.76
	-6.83	-4.22	-2.32	-10.59	-3.70	-2.89
60	-5.70	-3.66	-1.55	-9.34	-3.15	-2.21
	-5.89	-3.18	-1.32	-9.32	-2.67	-1.82
	-6.81	-2.82	-1.36	-10.54	-2.30	-1.70
	-8.49	-2.60	-1.60	-11.80	-1.96	-1.53
	-9.27	-2.50	-1.68	-13.26	-1.71	-1.42
90	-10.88	-2.50	-1.91	-16.30	-1.56	-1.41
	-12.33	-2.65	-2.20	-26.27	-1.45	-1.43
	-13.08	-2.92	-2.52	-17.74	-1.42	-1.32
	-11.64	-3.34	-2.74	-12.91	-1.50	-1.20
	-10.85	-3.74	-2.97	-9.51	-1.67	-1.01
120	-7.76	-4.33	-2.70	-6.54	-1.88	-0.61
	-4.72	-5.02	-1.86	-4.76	-2.19	-0.28
	-2.88	-5.72	-1.06	-3.74	-2.61	-0.13
	-2.16	-6.56	-0.81	-3.30	-3.12	-0.20
	-1.88	-7.30	-0.78	-2.73	-3.71	-0.19
150	-1.51	-8.22	-0.67	-2.50	-4.43	-0.35
	-1.42	-9.16	-0.75	-3.00	-5.18	-0.95
	-2.49	-10.12	-1.80	-4.32	-6.09	-2.11
	-4.54	-11.01	-3.66	-6.15	-7.13	-3.61
	-8.04	-11.93	-6.55	-8.18	-8.28	-5.22
180	-12.31	-12.95	-9.61	-10.34	-9.53	-6.90
	-14.09	-13.88	-10.97	-11.77	-10.93	-8.32
	-13.17	-14.55	-10.80	-13.42	-12.39	-9.87
	-11.85	-15.42	-10.27	-14.52	-14.34	-11.42
	-11.49	-16.02	-10.18	-15.85	-16.60	-13.20
210	-11.31	-16.58	-10.18	-16.18	-19.71	-14.59
	-11.47	-17.17	-10.44	-16.61	-22.65	-15.65
	-14.60	-17.82	-12.91	-20.01	-28.12	-19.39
	-14.25	-18.67	-12.91	-21.98	-32.66	-21.63
	-14.40	-19.79	-13.30	-26.53	-33.64	-25.75
240	-14.93	-21.15	-14.00	-30.25	-28.80	-26.45
	-17.41	-22.69	-16.29	-30.58	-25.16	-24.06
	-21.53	-25.43	-20.04	-29.88	-23.32	-22.46
	-32.53	-28.90	-27.33	-29.06	-21.64	-20.91
	-26.65	-34.15	-25.94	-31.13	-19.96	-19.64
270	-18.32	-44.11	-18.31	-48.19	-18.88	-18.88
	-15.15	-37.33	-15.13	-33.71	-17.92	-17.81
	-13.89	-31.69	-13.82	-28.34	-17.14	-16.83
	-16.17	-29.64	-15.98	-25.87	-16.23	-15.78
	-22.38	-28.10	-21.35	-25.94	-15.89	-15.48
300	-25.70	-27.67	-23.56	-23.46	-15.49	-14.84
	-22.03	-28.34	-21.11	-21.43	-15.25	-14.32
	-18.59	-29.09	-18.21	-18.74	-15.07	-13.52
	-15.36	-30.88	-15.23	-16.82	-15.15	-12.90
	-14.90	-32.75	-14.83	-15.67	-15.29	-12.46
330	-16.34	-34.74	-16.28	-16.55	-15.40	-12.93
	-19.21	-36.81	-19.13	-16.00	-15.85	-12.91
	-19.93	-38.82	-19.87	-15.13	-16.38	-12.70
	-21.08	-35.95	-20.94	-15.26	-16.88	-12.98
	-21.72	-34.39	-21.49	-19.37	-17.59	-15.38
	-21.02	-30.72	-20.58	-22.14	-18.27	-16.78
	-23.15	-27.46	-21.78	-23.73	-19.60	-18.18
	-27.50	-25.49	-23.37	-30.54	-20.67	-20.24
	-24.11	-23.96	-21.02	-45.51	-22.87	-22.85
	-22.81	-21.83	-19.28	-36.30	-24.78	-24.48
	-23.72	-20.50	-18.81	-36.07	-26.83	-26.34
	-26.13	-19.25	-18.44	-32.99	-27.04	-26.06
	-23.43	-18.19	-17.05	-29.71	-25.34	-23.99
	-20.41	-17.43	-15.66	-27.74	-22.29	-21.20
	-18.91	-16.42	-14.48	-23.95	-19.93	-18.48
	-17.48	-15.57	-13.41	-21.34	-17.74	-16.17
	-17.62	-14.60	-12.84	-19.69	-15.63	-14.19

ピーク値 -1.42 -2.50 **-0.67** -2.50 -1.42 **-0.13**
 平均値 -9.60 -8.94 **-6.24** -11.24 -7.28 **-5.81**

平均化

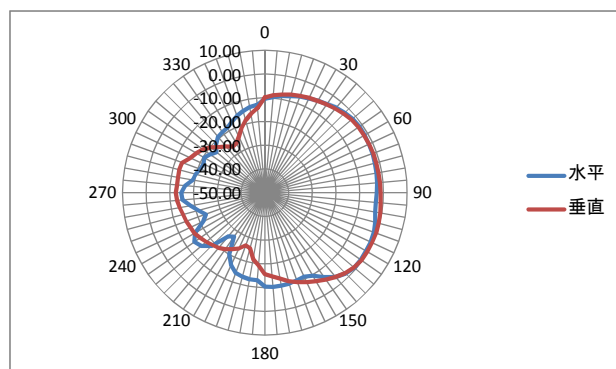


ピーク値 水平平均 垂直平均 平均化利得
 -0.13 -6.24 -5.81 -5.81 dBi

m2130MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-11.70	-10.47	-8.03	-10.32	-21.96	-10.03
	-10.93	-9.18	-6.96	-9.28	-19.07	-8.85
	-10.12	-7.97	-5.91	-8.31	-16.73	-7.73
	-9.11	-6.81	-4.80	-7.04	-14.28	-6.29
	-7.84	-5.57	-3.54	-5.92	-12.18	-4.99
30	-6.86	-4.44	-2.47	-4.75	-10.34	-3.69
	-5.72	-3.35	-1.37	-3.78	-8.55	-2.53
	-4.76	-2.23	-0.30	-2.54	-7.05	-1.22
	-3.45	-1.28	0.78	-1.42	-5.74	-0.05
	-2.34	-0.34	1.78	-0.06	-4.60	1.25
60	-0.96	0.45	2.81	1.03	-3.60	2.32
	-0.19	1.24	3.59	2.00	-2.69	3.27
	0.12	1.90	4.11	2.28	-1.93	3.68
	-0.29	2.38	4.26	2.29	-1.26	3.88
	-0.67	2.76	4.39	2.26	-0.79	4.01
90	-1.17	3.02	4.42	2.32	-0.41	4.18
	-1.59	3.13	4.39	1.89	-0.13	4.01
	-2.43	3.07	4.14	1.28	0.03	3.71
	-3.12	2.90	3.87	0.92	0.12	3.55
	-3.78	2.56	3.47	1.20	0.08	3.69
120	-4.71	2.07	2.90	0.83	-0.04	3.43
	-6.09	1.37	2.08	1.38	-0.21	3.67
	-4.55	0.53	1.71	1.92	-0.47	3.90
	-2.32	-0.57	1.65	2.47	-0.84	4.13
	-1.26	-1.78	1.50	2.81	-1.29	4.24
150	-0.91	-3.19	1.11	3.13	-1.86	4.32
	-0.82	-4.97	0.59	2.96	-2.43	4.06
	-0.85	-6.81	0.13	2.17	-3.24	3.27
	-1.71	-8.97	-0.97	0.75	-4.06	1.99
	-3.70	-11.52	-3.03	-1.00	-5.03	0.45
180	-6.59	-14.28	-5.90	-2.83	-5.95	-1.11
	-10.62	-17.30	-9.77	-3.92	-7.09	-2.21
	-13.43	-21.38	-12.78	-4.87	-8.21	-3.22
	-13.90	-26.44	-13.66	-5.52	-9.32	-4.00
	-13.42	-32.72	-13.37	-6.55	-10.57	-5.10
210	-12.19	-31.23	-12.14	-7.13	-11.65	-5.81
	-10.83	-29.07	-10.77	-7.87	-12.77	-6.65
	-11.45	-26.01	-11.30	-13.67	-13.83	-10.74
	-12.01	-25.15	-11.80	-15.36	-14.58	-11.94
	-13.38	-23.79	-13.00	-16.81	-15.23	-12.94
240	-17.00	-22.78	-15.98	-20.05	-15.92	-14.50
	-23.65	-22.02	-19.74	-24.94	-16.36	-15.79
	-23.13	-21.26	-19.08	-37.02	-16.83	-16.78
	-17.01	-19.96	-15.23	-25.88	-17.35	-16.78
	-13.93	-19.15	-12.78	-22.31	-17.88	-16.54
270	-12.51	-18.23	-11.48	-20.84	-18.65	-16.60
	-11.66	-17.63	-10.68	-18.10	-20.00	-15.94
	-11.95	-17.09	-10.79	-18.05	-21.91	-16.56
	-15.91	-16.73	-13.29	-19.37	-23.34	-17.91
	-20.04	-16.82	-15.13	-26.27	-24.91	-22.53
300	-17.15	-17.04	-14.08	-24.20	-22.31	-20.14
	-13.35	-17.34	-11.89	-15.49	-19.51	-14.04
	-12.02	-18.05	-11.06	-11.80	-17.46	-10.76
	-12.78	-18.94	-11.84	-12.17	-16.27	-10.74
	-15.94	-20.11	-14.53	-14.15	-16.00	-11.97
330	-24.58	-21.13	-19.51	-17.56	-16.00	-13.70
	-23.62	-22.86	-20.21	-19.67	-16.57	-14.84
	-17.45	-23.66	-16.52	-24.70	-17.49	-16.73
	-16.12	-23.57	-15.40	-21.93	-19.07	-17.26
	-16.19	-22.89	-15.35	-27.50	-20.62	-19.81
	-16.00	-21.55	-14.94	-20.34	-22.16	-18.15
	-19.31	-20.56	-16.88	-21.21	-23.16	-19.06
	-31.51	-19.58	-19.31	-24.39	-24.18	-21.27
	-26.58	-18.83	-18.16	-43.06	-24.85	-24.79
	-23.76	-18.03	-17.00	-21.13	-25.49	-19.77
	-25.06	-16.79	-16.19	-19.19	-25.69	-18.31
	-29.09	-15.67	-15.48	-23.33	-26.48	-21.61
	-22.90	-14.68	-14.07	-22.97	-25.29	-20.96
	-17.42	-13.55	-12.06	-14.67	-24.88	-14.27
	-14.39	-12.53	-10.35	-10.92	-24.29	-10.72
	-12.43	-11.44	-8.90	-8.72	-23.49	-8.57
	-11.66	-10.49	-8.02	-7.65	-22.75	-7.52

ピーク値 0.12 3.13 4.42 3.13 0.12 4.32
 平均値 -6.19 -3.96 -1.92 -2.85 -6.14 -1.18

平均化

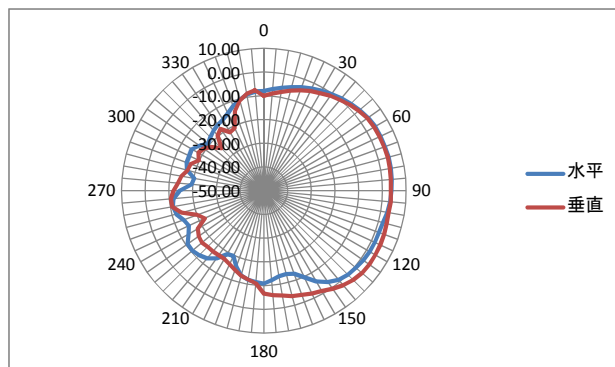


ピーク値 水平平均 垂直平均 平均化利得
 4.42 -1.92 -1.18 -1.18 dBi

m2150MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-10.27	-12.78	-8.33	-8.28	-23.45	-8.15
	-9.73	-11.17	-7.38	-7.68	-19.20	-7.39
	-9.03	-9.51	-6.26	-7.20	-16.38	-6.70
	-8.23	-8.03	-5.12	-6.54	-13.59	-5.75
	-7.15	-6.56	-3.83	-5.71	-11.50	-4.70
30	-6.23	-5.20	-2.67	-4.80	-9.71	-3.58
	-5.16	-4.06	-1.56	-3.99	-8.09	-2.56
	-4.22	-2.81	-0.45	-2.75	-6.73	-1.29
	-2.93	-1.73	0.72	-1.47	-5.59	-0.05
	-1.89	-0.70	1.76	-0.02	-4.56	1.29
60	-0.80	0.19	2.73	1.13	-3.62	2.38
	-0.21	1.00	3.45	2.15	-2.88	3.34
	-0.03	1.70	3.93	2.47	-2.20	3.75
	-0.37	2.32	4.19	2.42	-1.58	3.88
	-0.74	2.71	4.33	2.46	-1.12	4.04
90	-1.14	2.98	4.40	2.54	-0.70	4.22
	-1.44	3.10	4.41	2.15	-0.41	4.07
	-2.06	3.06	4.23	1.48	-0.17	3.74
	-2.77	2.88	3.93	0.90	-0.06	3.46
	-3.36	2.54	3.53	1.14	-0.03	3.61
120	-4.35	2.04	2.94	0.80	-0.08	3.39
	-6.10	1.40	2.11	1.45	-0.24	3.70
	-5.81	0.53	1.44	1.98	-0.50	3.93
	-3.31	-0.47	1.35	2.60	-0.82	4.23
	-2.16	-1.57	1.16	2.84	-1.28	4.26
150	-1.72	-2.88	0.75	3.10	-1.84	4.31
	-1.70	-4.38	0.18	3.00	-2.47	4.09
	-1.45	-5.91	-0.12	2.37	-3.24	3.42
	-2.07	-7.70	-1.02	0.88	-4.27	2.04
	-3.89	-9.45	-2.83	-1.02	-5.21	0.38
180	-6.58	-11.66	-5.40	-2.91	-6.38	-1.29
	-10.22	-14.05	-8.72	-3.98	-7.62	-2.42
	-12.60	-17.05	-11.27	-4.99	-8.93	-3.52
	-12.80	-19.71	-12.00	-5.50	-10.45	-4.29
	-12.03	-22.50	-11.65	-6.29	-12.06	-5.27
210	-11.23	-24.10	-11.01	-6.88	-13.45	-6.02
	-10.73	-24.82	-10.56	-7.82	-14.97	-7.06
	-10.03	-23.55	-9.84	-11.10	-16.99	-10.10
	-10.11	-22.58	-9.87	-12.15	-18.56	-11.25
	-10.79	-22.05	-10.47	-12.74	-20.38	-12.05
240	-12.27	-21.25	-11.75	-14.39	-21.26	-13.58
	-17.22	-20.45	-15.53	-16.81	-22.63	-15.80
	-26.52	-19.28	-18.53	-21.02	-22.62	-18.73
	-16.41	-18.35	-14.26	-23.03	-22.66	-19.83
	-12.15	-17.11	-10.94	-19.22	-23.18	-17.75
270	-10.39	-16.39	-9.42	-16.35	-23.92	-15.65
	-10.49	-15.56	-9.31	-14.73	-25.86	-14.40
	-12.48	-14.85	-10.50	-16.27	-31.46	-16.14
	-19.54	-14.67	-13.44	-22.23	-45.75	-22.21
	-21.62	-14.73	-13.92	-24.45	-31.87	-23.73
300	-23.24	-14.94	-14.34	-21.31	-25.19	-19.82
	-20.88	-15.49	-14.39	-26.92	-21.96	-20.76
	-13.83	-16.27	-11.87	-15.96	-20.22	-14.58
	-11.89	-17.37	-10.81	-12.80	-19.23	-11.91
	-13.53	-18.04	-12.21	-13.42	-19.30	-12.42
330	-20.15	-18.73	-16.37	-15.87	-20.08	-14.47
	-25.23	-19.01	-18.08	-16.81	-21.25	-15.48
	-19.12	-18.70	-15.90	-17.96	-23.85	-16.96
	-17.28	-17.79	-14.51	-18.16	-25.65	-17.45
	-17.74	-17.46	-14.59	-30.26	-25.27	-24.07
	-20.08	-17.24	-15.42	-30.52	-23.21	-22.47
	-27.17	-16.91	-16.52	-25.13	-21.67	-20.05
	-25.28	-16.73	-16.16	-22.73	-20.34	-18.36
	-18.19	-16.71	-14.38	-24.10	-19.89	-18.49
	-17.00	-16.51	-13.73	-19.06	-20.12	-16.55
	-17.79	-16.49	-14.08	-17.17	-20.44	-15.49
	-19.38	-16.29	-14.56	-19.05	-21.03	-16.92
	-16.13	-15.87	-12.99	-18.66	-22.80	-17.24
	-12.95	-15.40	-10.99	-13.19	-24.89	-12.91
	-11.20	-14.70	-9.60	-10.43	-28.27	-10.35
	-10.71	-13.67	-8.93	-9.03	-35.66	-9.02
	-10.47	-12.40	-8.32	-8.51	-31.69	-8.49

ピーク値	-0.03	3.10	4.41	3.10	-0.03	4.31
平均値	-6.17	-4.02	-1.95	-2.73	-6.34	-1.16

平均化

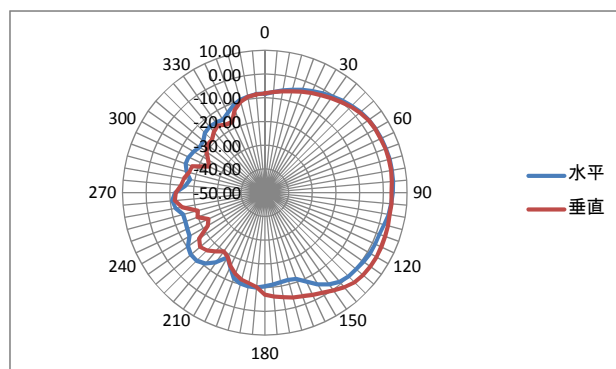


ピーク値	水平平均	垂直平均	平均化利得
4.41	-1.95	-1.16	-1.16 dBi

m2170MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-11.28	-11.88	-8.56	-9.12	-11.59	-7.17
	-10.23	-10.17	-7.19	-8.37	-9.95	-6.08
	-9.72	-8.62	-6.13	-7.35	-8.74	-4.98
	-9.29	-7.19	-5.11	-6.54	-7.61	-4.03
	-9.09	-5.80	-4.13	-5.71	-6.46	-3.06
30	-8.85	-4.53	-3.16	-4.72	-5.44	-2.05
	-8.20	-3.29	-2.07	-3.65	-4.58	-1.08
	-7.43	-2.25	-1.09	-2.21	-3.71	0.12
	-5.74	-1.19	0.11	-0.80	-2.90	1.29
	-4.38	-0.22	1.19	0.42	-2.33	2.27
60	-3.04	0.64	2.19	1.46	-1.72	3.17
	-2.04	1.35	2.99	2.26	-1.20	3.88
	-1.57	2.11	3.66	2.42	-0.82	4.10
	-1.61	2.68	4.05	1.98	-0.53	3.92
	-1.73	3.02	4.27	1.83	-0.38	3.87
90	-2.20	3.32	4.39	1.77	-0.33	3.86
	-2.36	3.48	4.48	1.69	-0.40	3.78
	-2.99	3.49	4.37	1.19	-0.53	3.42
	-3.97	3.34	4.08	0.93	-0.91	3.12
	-4.90	3.06	3.71	1.25	-1.31	3.16
120	-5.54	2.60	3.22	1.05	-1.84	2.85
	-6.75	2.02	2.56	1.57	-2.46	3.02
	-5.03	1.30	2.21	2.18	-3.21	3.28
	-2.32	0.37	2.24	2.77	-4.04	3.59
	-0.89	-0.59	2.27	3.11	-4.79	3.76
150	-0.53	-1.66	1.95	3.44	-5.78	3.93
	-0.33	-2.98	1.56	3.49	-6.58	3.90
	-0.41	-4.32	1.07	2.92	-7.32	3.31
	-1.25	-5.78	0.06	1.64	-8.17	2.07
	-3.42	-7.69	-2.04	-0.05	-8.90	0.48
180	-6.80	-9.65	-4.98	-1.61	-9.36	-0.94
	-11.00	-11.85	-8.39	-2.56	-9.93	-1.83
	-11.96	-14.43	-10.01	-3.42	-10.39	-2.63
	-10.64	-17.50	-9.83	-3.92	-10.65	-3.08
	-9.68	-21.32	-9.39	-4.53	-11.10	-3.66
210	-8.90	-25.55	-8.80	-5.25	-11.52	-4.33
	-8.47	-32.67	-8.46	-6.09	-11.69	-5.04
	-9.63	-39.39	-9.62	-11.67	-11.76	-8.71
	-10.16	-32.90	-10.13	-13.03	-11.94	-9.44
	-11.25	-30.82	-11.20	-14.50	-12.15	-10.16
240	-14.50	-28.46	-14.33	-16.52	-12.16	-10.80
	-21.86	-27.35	-20.78	-21.87	-12.15	-11.71
	-27.27	-24.75	-22.82	-26.62	-12.23	-12.07
	-17.58	-22.69	-16.41	-19.19	-11.89	-11.15
	-15.32	-21.10	-14.30	-17.09	-11.73	-10.62
270	-12.85	-19.63	-12.02	-18.56	-11.75	-10.93
	-12.16	-18.43	-11.24	-22.10	-11.49	-11.13
	-12.50	-17.84	-11.39	-23.36	-11.53	-11.26
	-17.91	-17.39	-14.64	-23.94	-11.53	-11.29
	-21.28	-17.83	-16.21	-22.04	-11.50	-11.13
300	-17.05	-18.57	-14.73	-25.92	-11.73	-11.56
	-13.76	-19.51	-12.74	-20.87	-12.16	-11.61
	-11.90	-20.83	-11.38	-12.84	-12.41	-9.61
	-13.43	-22.10	-12.88	-11.80	-12.85	-9.28
	-16.46	-22.52	-15.50	-14.06	-13.18	-10.59
330	-21.82	-22.56	-19.17	-16.38	-13.68	-11.81
	-28.23	-21.26	-20.47	-16.14	-14.07	-11.97
	-19.99	-20.44	-17.20	-23.67	-14.35	-13.87
	-18.18	-18.88	-15.51	-25.34	-14.26	-13.93
	-21.93	-17.88	-16.44	-23.87	-14.63	-14.14
	-24.19	-16.97	-16.22	-18.74	-15.29	-13.67
	-29.89	-16.55	-16.35	-19.16	-15.81	-14.16
	-21.79	-16.44	-15.33	-21.05	-16.79	-15.41
	-15.84	-16.60	-13.19	-31.93	-17.95	-17.78
	-14.54	-17.25	-12.68	-17.98	-19.50	-15.66
	-15.50	-18.22	-13.64	-16.86	-21.63	-15.61
	-17.18	-18.95	-14.96	-23.45	-23.25	-20.34
	-14.69	-19.21	-13.38	-21.05	-23.18	-18.98
	-12.00	-18.58	-11.14	-13.78	-21.13	-13.04
	-10.79	-17.48	-9.94	-11.26	-18.59	-10.53
	-9.94	-16.04	-8.99	-9.47	-16.46	-8.68
	-9.22	-14.40	-8.07	-8.06	-14.44	-7.16

ピーク値	-0.33	3.49	4.48	3.49	-0.33	4.10
平均値	-6.68	-3.51	-1.80	-2.54	-6.34	-1.03

平均化

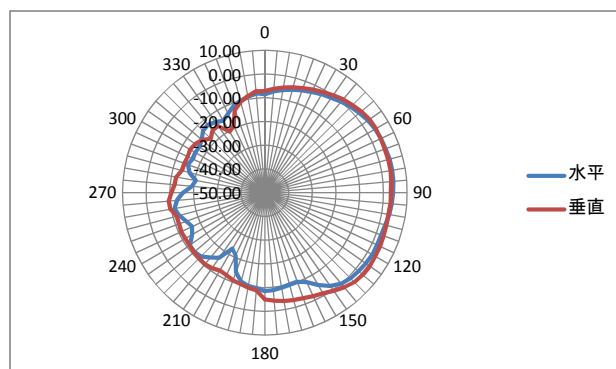


ピーク値	水平平均	垂直平均	平均化利得
4.48	-1.80	-1.03	-1.03 dBi

サブ815MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-27.57	-9.05	-8.99	-13.60	-6.08	-5.37
	-24.40	-9.19	-9.07	-13.84	-6.12	-5.44
	-18.87	-9.41	-8.94	-13.69	-6.26	-5.54
	-16.03	-9.63	-8.74	-13.63	-6.30	-5.56
	-13.60	-9.94	-8.38	-13.31	-6.40	-5.59
30	-12.15	-10.23	-8.08	-13.28	-6.53	-5.70
	-10.98	-10.47	-7.71	-13.14	-6.69	-5.80
	-10.29	-10.99	-7.62	-13.27	-6.83	-5.94
	-10.09	-11.35	-7.66	-13.18	-7.02	-6.07
	-10.27	-11.92	-8.01	-13.61	-7.22	-6.32
60	-10.73	-12.50	-8.51	-13.78	-7.48	-6.57
	-11.72	-13.21	-9.39	-14.57	-7.74	-6.92
	-13.18	-13.98	-10.55	-15.77	-7.97	-7.30
	-15.29	-14.84	-12.05	-18.43	-8.22	-7.82
	-18.43	-15.90	-13.97	-22.67	-8.45	-8.29
90	-22.85	-16.99	-15.99	-24.82	-8.72	-8.61
	-26.27	-18.11	-17.50	-20.29	-8.99	-8.68
	-26.23	-19.48	-18.65	-16.91	-9.10	-8.44
	-25.01	-20.64	-19.29	-14.39	-9.29	-8.12
	-27.16	-21.38	-20.36	-12.41	-9.40	-7.64
120	-23.19	-21.69	-19.37	-10.62	-9.51	-7.02
	-16.86	-21.39	-15.55	-9.61	-9.57	-6.58
	-12.37	-20.81	-11.79	-9.05	-9.64	-6.32
	-9.50	-20.09	-9.13	-9.15	-9.48	-6.30
	-7.75	-19.42	-7.47	-9.45	-9.46	-6.45
150	-6.64	-18.89	-6.39	-10.22	-9.36	-6.76
	-6.14	-18.35	-5.89	-11.14	-9.29	-7.11
	-6.08	-18.07	-5.81	-12.49	-9.13	-7.48
	-6.53	-17.89	-6.22	-14.08	-9.03	-7.85
	-7.17	-17.73	-6.81	-16.03	-8.86	-8.10
180	-8.23	-17.70	-7.77	-18.18	-8.77	-8.30
	-9.53	-17.75	-8.92	-19.72	-8.68	-8.35
	-11.25	-17.84	-10.39	-19.65	-8.58	-8.25
	-13.82	-17.98	-12.41	-18.99	-8.55	-8.17
	-17.86	-18.14	-14.98	-18.00	-8.44	-7.98
210	-25.62	-18.27	-17.53	-17.63	-8.41	-7.92
	-26.21	-18.37	-17.70	-17.24	-8.43	-7.90
	-24.86	-18.40	-17.51	-10.89	-8.33	-6.41
	-17.18	-18.45	-14.76	-11.00	-8.31	-6.44
	-13.60	-18.45	-12.37	-11.51	-8.30	-6.61
240	-11.47	-18.43	-10.67	-11.97	-8.25	-6.71
	-9.98	-18.48	-9.41	-12.83	-8.21	-6.92
	-9.20	-18.52	-8.72	-13.74	-8.16	-7.10
	-8.61	-18.62	-8.20	-14.80	-8.08	-7.24
	-8.41	-18.83	-8.03	-15.88	-7.95	-7.30
270	-8.43	-19.18	-8.08	-17.22	-7.87	-7.39
	-8.85	-19.59	-8.49	-19.56	-7.70	-7.43
	-9.90	-20.12	-9.50	-23.24	-7.53	-7.41
	-11.88	-20.79	-11.35	-32.94	-7.38	-7.37
	-15.70	-21.38	-14.66	-25.42	-7.28	-7.22
300	-21.25	-21.81	-18.51	-18.37	-7.16	-6.84
	-22.05	-21.72	-18.87	-15.51	-7.02	-6.44
	-18.20	-21.21	-16.44	-12.99	-6.93	-5.97
	-15.91	-20.10	-14.50	-11.92	-6.81	-5.65
	-16.55	-18.79	-14.52	-10.58	-6.74	-5.24
330	-19.38	-17.50	-15.33	-10.32	-6.75	-5.17
	-23.82	-16.23	-15.53	-10.07	-6.68	-5.04
	-23.32	-15.13	-14.51	-11.18	-6.70	-5.37
	-18.34	-14.27	-12.83	-12.15	-6.76	-5.66
	-14.66	-13.38	-10.96	-14.24	-6.84	-6.11
	-13.38	-12.64	-9.98	-15.92	-6.89	-6.38
	-11.68	-12.00	-8.82	-18.49	-6.89	-6.60
	-11.18	-11.48	-8.32	-20.75	-7.02	-6.84
	-10.37	-11.17	-7.74	-23.84	-7.10	-7.00
	-10.34	-10.73	-7.52	-27.79	-7.17	-7.13
	-10.33	-10.56	-7.43	-29.42	-7.26	-7.24
	-10.94	-10.37	-7.64	-34.10	-7.29	-7.28
	-11.89	-10.32	-8.02	-26.61	-7.35	-7.30
	-12.93	-10.25	-8.37	-27.27	-7.42	-7.37
	-14.73	-10.30	-8.96	-22.83	-7.46	-7.33
	-16.12	-10.36	-9.34	-23.00	-7.50	-7.38
	-18.05	-10.45	-9.76	-20.72	-7.55	-7.34

ピーク値	-6.08	-9.05	-5.81	-9.05	-6.08	-5.04
平均値	-11.90	-14.07	-9.84	-14.06	-7.70	-6.80

平均化

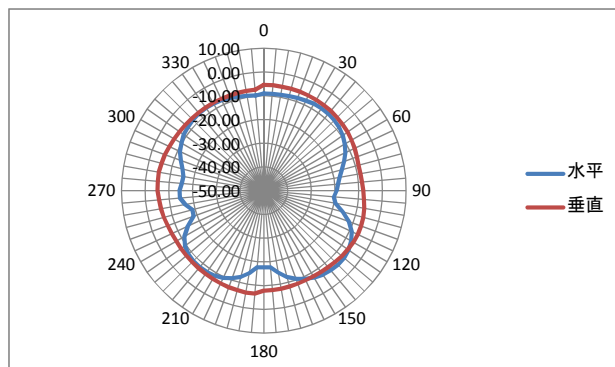


ピーク値	水平平均	垂直平均	平均化利得
-5.04	-9.84	-6.80	-6.80 dBi

サブ830MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-35.73	-8.89	-8.88	-14.58	-7.52	-6.73
	-34.15	-8.99	-8.98	-14.80	-7.56	-6.81
	-24.15	-9.11	-8.98	-14.77	-7.66	-6.89
	-19.56	-9.33	-8.93	-14.91	-7.76	-6.99
	-16.09	-9.59	-8.71	-14.79	-7.93	-7.12
30	-13.92	-9.84	-8.41	-14.63	-8.06	-7.20
	-12.28	-10.11	-8.05	-14.38	-8.22	-7.28
	-11.44	-10.48	-7.92	-14.44	-8.45	-7.47
	-11.00	-10.87	-7.92	-14.43	-8.67	-7.65
	-11.04	-11.30	-8.16	-14.98	-8.90	-7.94
60	-11.55	-11.87	-8.69	-15.51	-9.20	-8.28
	-12.11	-12.36	-9.22	-16.79	-9.47	-8.73
	-13.11	-12.99	-10.04	-18.09	-9.80	-9.20
	-13.47	-13.73	-10.59	-20.56	-10.08	-9.70
	-14.93	-14.55	-11.73	-24.38	-10.29	-10.13
90	-15.79	-15.42	-12.59	-34.74	-10.56	-10.54
	-17.72	-16.36	-13.98	-30.99	-10.87	-10.83
	-17.02	-17.45	-14.22	-22.22	-11.08	-10.76
	-16.46	-18.53	-14.36	-17.76	-11.15	-10.29
	-15.36	-19.60	-13.97	-14.58	-11.32	-9.64
120	-17.31	-20.56	-15.63	-11.96	-11.33	-8.62
	-20.71	-20.91	-17.80	-10.25	-11.36	-7.76
	-24.96	-21.06	-19.58	-9.10	-11.27	-7.04
	-18.09	-20.84	-16.24	-8.89	-11.17	-6.87
	-12.35	-20.34	-11.71	-9.09	-11.00	-6.93
150	-9.84	-19.89	-9.43	-10.01	-10.82	-7.39
	-8.08	-19.48	-7.77	-11.04	-10.57	-7.79
	-7.18	-19.07	-6.91	-12.66	-10.27	-8.29
	-6.86	-18.83	-6.60	-14.63	-10.03	-8.74
	-7.01	-18.62	-6.72	-17.21	-9.74	-9.02
180	-7.64	-18.52	-7.30	-19.91	-9.52	-9.14
	-8.46	-18.53	-8.05	-21.64	-9.30	-9.06
	-9.85	-18.55	-9.30	-20.95	-9.05	-8.78
	-11.52	-18.67	-10.75	-19.83	-8.86	-8.52
	-13.59	-18.87	-12.46	-18.69	-8.64	-8.23
210	-16.83	-18.99	-14.76	-18.43	-8.50	-8.08
	-19.15	-19.15	-16.14	-18.21	-8.39	-7.96
	-25.60	-19.31	-18.40	-11.56	-8.23	-6.57
	-19.15	-19.43	-16.28	-11.49	-8.14	-6.49
	-15.11	-19.54	-13.77	-11.90	-8.00	-6.52
240	-12.82	-19.63	-11.99	-12.23	-7.96	-6.58
	-11.35	-19.75	-10.77	-13.28	-7.84	-6.75
	-10.88	-19.84	-10.36	-14.28	-7.77	-6.89
	-10.71	-19.97	-10.22	-15.87	-7.68	-7.06
	-11.08	-20.18	-10.57	-17.69	-7.54	-7.14
270	-10.98	-20.45	-10.51	-20.22	-7.48	-7.25
	-10.89	-20.80	-10.47	-25.08	-7.39	-7.31
	-10.52	-21.19	-10.16	-33.38	-7.27	-7.26
	-10.62	-21.45	-10.28	-24.77	-7.15	-7.07
	-11.12	-21.62	-10.75	-19.15	-7.06	-6.80
300	-11.64	-21.34	-11.20	-15.33	-6.95	-6.36
	-11.88	-20.64	-11.33	-13.56	-6.97	-6.11
	-11.17	-19.87	-10.62	-11.94	-6.92	-5.73
	-10.68	-18.64	-10.04	-11.43	-6.86	-5.56
	-10.17	-17.61	-9.45	-10.75	-6.88	-5.39
330	-10.42	-16.43	-9.45	-11.27	-6.93	-5.57
	-10.25	-15.40	-9.09	-11.34	-7.00	-5.64
	-10.40	-14.46	-8.96	-12.81	-7.05	-6.03
	-9.81	-13.65	-8.31	-13.69	-7.14	-6.27
	-9.34	-12.87	-7.75	-15.80	-7.27	-6.70
	-8.56	-12.23	-7.01	-17.46	-7.37	-6.96
	-7.84	-11.79	-6.37	-20.22	-7.50	-7.28
	-7.44	-11.38	-5.97	-21.77	-7.64	-7.47
	-7.15	-11.03	-5.66	-23.96	-7.79	-7.69
	-7.49	-10.75	-5.81	-25.82	-7.86	-7.79
	-7.89	-10.58	-6.02	-24.45	-8.00	-7.90
	-9.05	-10.34	-6.63	-24.28	-8.11	-8.01
	-10.32	-10.39	-7.34	-20.55	-8.21	-7.96
	-12.12	-10.27	-8.09	-20.41	-8.36	-8.10
	-14.22	-10.27	-8.80	-18.74	-8.42	-8.03
	-16.78	-10.24	-9.37	-19.29	-8.50	-8.15
	-19.04	-10.31	-9.76	-19.02	-8.53	-8.16

ピーク値	-6.86	-8.89	-5.66	-8.89	-6.86	-5.39
平均値	-11.29	-13.85	-9.37	-14.66	-8.41	-7.48

平均化

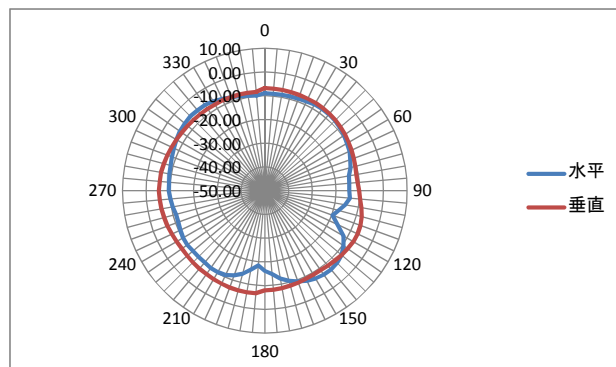


ピーク値	水平平均	垂直平均	平均化利得
-5.39	-9.37	-7.48	-7.48 dBi

サブ845MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-30.11	-14.97	-14.84	-23.27	-6.95	-6.85
	-42.78	-14.93	-14.93	-22.51	-7.02	-6.90
	-27.16	-14.98	-14.72	-26.16	-7.12	-7.07
	-21.64	-15.05	-14.19	-24.69	-7.20	-7.12
	-17.93	-15.15	-13.31	-31.87	-7.26	-7.24
30	-15.47	-15.24	-12.34	-28.44	-7.42	-7.39
	-13.84	-15.36	-11.53	-33.58	-7.55	-7.54
	-12.41	-15.41	-10.65	-25.62	-7.71	-7.64
	-11.72	-15.49	-10.19	-24.37	-7.93	-7.83
	-10.83	-15.48	-9.55	-19.67	-8.15	-7.86
60	-10.68	-15.39	-9.41	-17.53	-8.34	-7.84
	-10.46	-15.19	-9.20	-15.23	-8.58	-7.73
	-11.10	-14.91	-9.59	-13.76	-8.81	-7.60
	-11.63	-14.54	-9.83	-13.14	-9.05	-7.62
	-13.64	-14.09	-10.85	-12.24	-9.32	-7.53
90	-15.20	-13.64	-11.34	-11.82	-9.48	-7.48
	-17.80	-13.10	-11.83	-10.55	-9.65	-7.07
	-17.18	-12.59	-11.30	-10.04	-9.81	-6.91
	-16.49	-12.04	-10.70	-9.29	-9.94	-6.59
	-15.41	-11.55	-10.05	-9.94	-10.00	-6.96
120	-17.54	-11.09	-10.21	-10.81	-10.07	-7.42
	-20.77	-10.72	-10.31	-12.93	-10.07	-8.26
	-30.96	-10.43	-10.39	-15.21	-9.98	-8.84
	-19.31	-10.13	-9.63	-18.49	-9.90	-9.34
	-12.84	-10.00	-8.18	-22.04	-9.76	-9.51
150	-10.27	-9.82	-7.03	-23.63	-9.50	-9.33
	-8.23	-9.75	-5.92	-19.95	-9.32	-8.96
	-7.20	-9.67	-5.25	-16.66	-9.04	-8.35
	-6.59	-9.71	-4.86	-14.77	-8.90	-7.90
	-6.44	-9.68	-4.75	-13.70	-8.61	-7.44
180	-6.82	-9.71	-5.02	-12.91	-8.30	-7.01
	-7.50	-9.70	-5.45	-12.55	-8.15	-6.80
	-8.61	-9.78	-6.14	-12.04	-7.86	-6.45
	-10.29	-9.71	-6.98	-11.98	-7.69	-6.31
	-12.11	-9.72	-7.74	-11.36	-7.52	-6.02
210	-14.85	-9.68	-8.52	-11.25	-7.32	-5.84
	-16.66	-9.59	-8.81	-10.74	-7.23	-5.63
	-21.51	-9.56	-9.29	-17.63	-7.09	-6.72
	-17.10	-9.42	-8.73	-18.26	-6.97	-6.66
	-14.05	-9.33	-8.07	-19.66	-6.90	-6.67
240	-12.09	-9.34	-7.49	-20.50	-6.84	-6.65
	-10.64	-9.29	-6.90	-20.15	-6.78	-6.58
	-10.05	-9.29	-6.65	-18.28	-6.67	-6.38
	-9.65	-9.33	-6.48	-16.24	-6.66	-6.21
	-10.21	-9.45	-6.80	-14.71	-6.69	-6.06
270	-10.50	-9.55	-6.99	-13.64	-6.64	-5.85
	-11.34	-9.87	-7.54	-12.70	-6.57	-5.62
	-11.73	-10.21	-7.89	-11.80	-6.51	-5.38
	-11.75	-10.70	-8.18	-11.10	-6.48	-5.19
	-11.74	-11.27	-8.49	-11.21	-6.49	-5.23
300	-11.38	-12.04	-8.69	-11.77	-6.45	-5.33
	-11.32	-12.88	-9.02	-13.26	-6.45	-5.63
	-11.05	-14.05	-9.29	-14.24	-6.44	-5.77
	-11.12	-15.42	-9.75	-14.63	-6.46	-5.85
	-10.81	-17.12	-9.90	-15.24	-6.49	-5.95
330	-11.15	-19.11	-10.51	-17.65	-6.53	-6.21
	-10.95	-21.73	-10.60	-24.08	-6.60	-6.52
	-10.99	-25.25	-10.83	-32.51	-6.67	-6.66
	-10.17	-30.53	-10.13	-20.32	-6.80	-6.61
	-9.35	-36.65	-9.34	-17.05	-6.87	-6.47
	-8.49	-31.33	-8.47	-15.94	-7.03	-6.51
	-7.84	-26.77	-7.79	-16.64	-7.11	-6.65
	-7.50	-23.77	-7.40	-16.94	-7.22	-6.78
	-7.37	-21.84	-7.22	-16.84	-7.30	-6.84
	-7.64	-20.45	-7.42	-15.33	-7.44	-6.79
	-8.16	-19.47	-7.85	-14.50	-7.54	-6.74
	-9.11	-18.74	-8.66	-13.80	-7.61	-6.67
	-10.37	-18.25	-9.72	-13.99	-7.68	-6.77
	-11.99	-17.84	-10.98	-14.12	-7.78	-6.87
	-13.89	-17.63	-12.36	-14.67	-7.85	-7.03
	-16.12	-17.55	-13.76	-14.58	-7.95	-7.10
	-17.90	-17.58	-14.73	-14.46	-7.99	-7.11

ピーク値	-6.44	-9.29	-4.75	-9.29	-6.44	-5.19
平均値	-11.13	-12.31	-8.67	-14.49	-7.64	-6.82

平均化

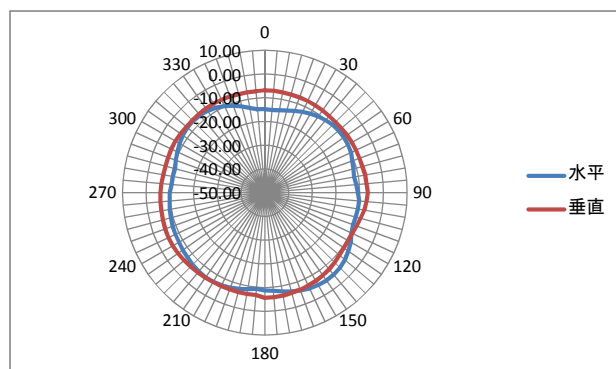


ピーク値	水平平均	垂直平均	平均化利得
-4.75	-8.67	-6.82	-6.82 dBi

サブ860MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-29.93	-25.09	-23.86	-31.95	-7.28	-7.26
	-29.85	-25.27	-23.97	-34.71	-7.23	-7.22
	-23.36	-25.25	-21.19	-29.25	-7.26	-7.23
	-20.11	-25.28	-18.95	-31.98	-7.26	-7.25
	-17.40	-24.91	-16.69	-28.58	-7.32	-7.29
30	-15.88	-24.41	-15.31	-29.96	-7.37	-7.34
	-14.66	-23.72	-14.15	-25.72	-7.44	-7.37
	-14.13	-22.94	-13.60	-24.18	-7.60	-7.51
	-13.65	-21.96	-13.05	-20.97	-7.73	-7.53
	-13.73	-21.01	-12.98	-21.27	-7.96	-7.76
60	-13.99	-20.16	-13.05	-20.14	-8.11	-7.84
	-14.61	-19.11	-13.29	-21.64	-8.37	-8.17
	-15.57	-18.27	-13.70	-19.38	-8.67	-8.32
	-16.74	-17.36	-14.03	-16.93	-8.90	-8.26
	-18.74	-16.50	-14.47	-13.68	-9.31	-7.96
90	-21.61	-15.74	-14.74	-12.22	-9.50	-7.64
	-28.00	-15.01	-14.79	-10.84	-9.81	-7.29
	-29.21	-14.30	-14.16	-10.98	-10.11	-7.51
	-24.89	-13.59	-13.28	-10.58	-10.34	-7.45
	-23.44	-12.99	-12.62	-11.03	-10.54	-7.77
120	-25.87	-12.47	-12.28	-11.07	-10.74	-7.89
	-32.68	-12.01	-11.97	-12.31	-10.83	-8.50
	-22.43	-11.62	-11.28	-14.24	-10.87	-9.22
	-16.29	-11.39	-10.17	-17.50	-10.93	-10.07
	-12.49	-11.14	-8.75	-21.21	-10.85	-10.46
150	-9.92	-10.99	-7.41	-21.52	-10.80	-10.45
	-8.38	-10.94	-6.46	-18.84	-10.62	-10.01
	-7.53	-10.85	-5.87	-15.71	-10.53	-9.38
	-7.23	-10.81	-5.65	-13.46	-10.35	-8.62
	-7.48	-10.88	-5.84	-12.37	-10.19	-8.13
180	-8.20	-10.83	-6.31	-11.76	-10.07	-7.82
	-9.41	-10.86	-7.06	-11.99	-9.97	-7.85
	-11.05	-10.96	-7.99	-12.09	-9.77	-7.76
	-13.47	-10.94	-9.01	-12.84	-9.74	-8.01
	-16.94	-10.91	-9.94	-13.06	-9.64	-8.01
210	-23.19	-10.88	-10.63	-13.44	-9.61	-8.11
	-39.26	-10.86	-10.85	-13.26	-9.51	-7.98
	-25.56	-10.78	-10.64	-17.90	-9.55	-8.95
	-18.05	-10.68	-9.95	-18.74	-9.50	-9.01
	-14.67	-10.59	-9.16	-19.59	-9.50	-9.10
240	-12.34	-10.58	-8.36	-19.04	-9.54	-9.08
	-10.86	-10.65	-7.74	-17.98	-9.53	-8.95
	-9.91	-10.65	-7.25	-16.89	-9.49	-8.77
	-9.42	-10.73	-7.02	-16.12	-9.53	-8.67
	-9.55	-10.96	-7.19	-15.49	-9.47	-8.50
270	-9.84	-11.19	-7.45	-14.76	-9.44	-8.32
	-10.90	-11.59	-8.22	-13.74	-9.41	-8.05
	-12.12	-12.04	-9.07	-13.16	-9.36	-7.85
	-14.26	-12.64	-10.36	-12.96	-9.25	-7.71
	-16.94	-13.31	-11.74	-13.65	-9.21	-7.87
300	-19.64	-14.37	-13.24	-14.30	-9.11	-7.96
	-19.96	-15.54	-14.20	-15.36	-9.00	-8.10
	-20.01	-17.09	-15.30	-16.61	-8.97	-8.28
	-20.02	-18.96	-16.44	-20.07	-8.87	-8.55
	-24.16	-21.11	-19.36	-24.91	-8.82	-8.71
330	-45.59	-23.38	-23.35	-22.72	-8.78	-8.61
	-23.29	-25.12	-21.10	-19.53	-8.77	-8.42
	-16.45	-25.15	-15.90	-18.71	-8.81	-8.38
	-14.03	-23.87	-13.60	-19.94	-8.81	-8.49
	-12.02	-22.25	-11.63	-21.86	-8.81	-8.60
	-11.78	-20.94	-11.28	-21.06	-8.83	-8.58
	-11.29	-19.84	-10.72	-19.52	-8.86	-8.51
	-11.94	-19.00	-11.16	-17.97	-8.89	-8.38
	-12.30	-18.45	-11.36	-17.92	-8.91	-8.40
	-13.21	-18.12	-12.00	-17.50	-8.90	-8.34
	-13.78	-17.95	-12.37	-17.53	-8.91	-8.35
	-14.68	-17.89	-12.99	-16.55	-8.89	-8.20
	-15.84	-17.94	-13.75	-16.02	-8.84	-8.08
	-17.13	-18.12	-14.59	-15.37	-8.81	-7.95
	-19.49	-18.38	-15.89	-15.39	-8.78	-7.92
	-21.25	-18.66	-16.75	-15.38	-8.76	-7.90
	-24.53	-19.12	-18.02	-15.78	-8.73	-7.95

ピーク値	-7.23	-10.58	-5.65	-10.58	-7.23	-7.22
平均値	-13.63	-13.94	-10.77	-15.57	-9.07	-8.19

平均化

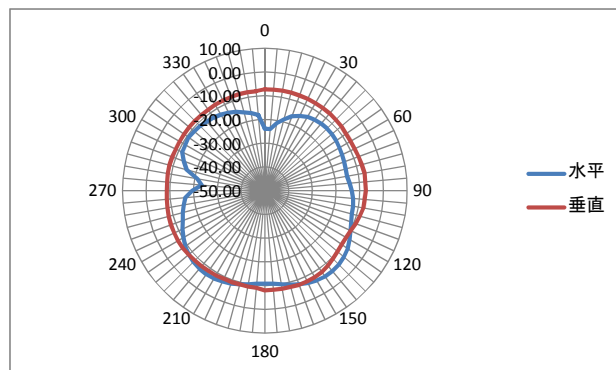


ピーク値	水平平均	垂直平均	平均化利得
-5.65	-10.77	-8.19	-8.19 dBi

サブ875MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-27.98	-22.94	-21.76	-20.73	-6.49	-6.33
	-33.63	-23.04	-22.68	-19.41	-6.49	-6.28
	-30.21	-23.50	-22.66	-21.52	-6.54	-6.40
	-24.23	-23.64	-20.91	-21.53	-6.59	-6.46
	-21.61	-23.70	-19.52	-27.88	-6.71	-6.67
30	-18.27	-23.52	-17.14	-28.99	-6.83	-6.80
	-16.68	-23.06	-15.78	-35.97	-6.92	-6.92
	-14.61	-22.49	-13.95	-34.32	-7.09	-7.08
	-13.58	-21.85	-12.97	-36.14	-7.28	-7.28
	-12.25	-20.97	-11.70	-28.64	-7.47	-7.44
60	-11.76	-20.08	-11.16	-23.77	-7.68	-7.57
	-10.82	-19.16	-10.23	-18.88	-7.98	-7.64
	-10.66	-18.25	-9.96	-15.97	-8.24	-7.56
	-10.20	-17.31	-9.43	-14.74	-8.55	-7.61
	-11.18	-16.37	-10.03	-13.30	-8.77	-7.46
90	-12.19	-15.56	-10.55	-12.19	-9.02	-7.31
	-15.13	-14.72	-11.91	-10.28	-9.30	-6.75
	-15.86	-13.96	-11.80	-9.54	-9.53	-6.52
	-14.88	-13.10	-10.89	-8.74	-9.74	-6.20
	-12.70	-12.46	-9.57	-9.36	-9.85	-6.59
120	-13.23	-11.85	-9.48	-10.07	-9.93	-6.99
	-14.88	-11.33	-9.74	-11.84	-10.01	-7.82
	-20.91	-10.98	-10.56	-14.11	-10.04	-8.61
	-19.33	-10.51	-9.98	-18.24	-9.89	-9.30
	-12.38	-10.39	-8.26	-24.04	-9.86	-9.70
150	-9.27	-10.14	-6.67	-20.50	-9.69	-9.34
	-7.33	-10.01	-5.46	-17.15	-9.44	-8.76
	-6.57	-9.86	-4.90	-14.87	-9.26	-8.21
	-6.47	-9.84	-4.83	-13.73	-9.01	-7.75
	-6.90	-9.74	-5.08	-12.79	-8.79	-7.33
180	-7.82	-9.77	-5.68	-12.34	-8.63	-7.09
	-9.14	-9.73	-6.41	-12.21	-8.42	-6.91
	-10.71	-9.66	-7.14	-12.16	-8.21	-6.74
	-13.08	-9.54	-7.95	-12.41	-7.99	-6.65
	-15.53	-9.48	-8.52	-12.30	-7.83	-6.50
210	-19.14	-9.34	-8.91	-12.33	-7.69	-6.41
	-19.53	-9.27	-8.88	-12.06	-7.54	-6.23
	-22.47	-9.07	-8.88	-19.36	-7.42	-7.15
	-17.76	-8.95	-8.41	-17.97	-7.33	-6.97
	-14.24	-8.90	-7.79	-16.73	-7.26	-6.79
240	-11.93	-8.83	-7.10	-15.35	-7.23	-6.60
	-10.27	-8.74	-6.43	-14.32	-7.16	-6.39
	-9.51	-8.80	-6.13	-13.31	-7.07	-6.15
	-8.97	-8.85	-5.90	-12.47	-7.02	-5.93
	-9.30	-9.00	-6.14	-11.61	-6.97	-5.69
270	-9.41	-9.20	-6.29	-10.92	-6.92	-5.47
	-10.21	-9.48	-6.82	-10.35	-6.85	-5.24
	-10.66	-9.88	-7.24	-10.30	-6.76	-5.17
	-11.99	-10.38	-8.10	-10.29	-6.66	-5.10
	-13.54	-10.95	-9.04	-10.68	-6.63	-5.18
300	-14.83	-11.83	-10.06	-11.26	-6.57	-5.30
	-14.86	-12.78	-10.68	-13.17	-6.51	-5.66
	-13.42	-14.00	-10.69	-16.09	-6.47	-6.02
	-13.19	-15.45	-11.16	-20.67	-6.49	-6.33
	-13.10	-17.16	-11.66	-23.52	-6.49	-6.40
330	-13.82	-19.10	-12.69	-26.39	-6.52	-6.47
	-13.33	-21.05	-12.65	-27.16	-6.58	-6.54
	-12.12	-22.62	-11.75	-19.60	-6.66	-6.44
	-10.45	-22.87	-10.21	-15.11	-6.76	-6.17
	-8.84	-21.99	-8.64	-13.20	-6.84	-5.94
	-7.91	-20.70	-7.68	-12.40	-7.01	-5.91
	-7.06	-19.46	-6.81	-12.83	-7.12	-6.09
	-7.08	-18.47	-6.78	-13.03	-7.22	-6.21
	-7.30	-17.73	-6.92	-13.31	-7.36	-6.37
	-8.23	-17.23	-7.71	-13.00	-7.44	-6.38
	-9.44	-16.95	-8.73	-13.25	-7.55	-6.51
	-11.09	-16.80	-10.06	-13.72	-7.68	-6.71
	-13.19	-16.72	-11.60	-14.94	-7.71	-6.96
	-15.50	-16.88	-13.12	-15.86	-7.80	-7.17
	-18.44	-16.99	-14.65	-16.83	-7.90	-7.38
	-21.52	-17.29	-15.90	-16.94	-7.96	-7.44
	-25.19	-17.64	-16.93	-17.33	-7.99	-7.51

ピーク値	-6.47	-8.74	-4.83	-8.74	-6.47	-5.10
平均値	-11.48	-12.53	-8.96	-13.92	-7.61	-6.70

平均化

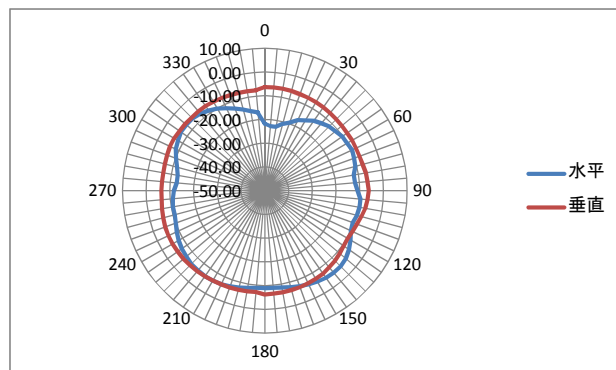


ピーク値	水平平均	垂直平均	平均化利得
-4.83	-8.96	-6.70	-6.70 dBi

サブ890MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-29.15	-7.70	-7.67	-14.51	-5.72	-5.18
	-45.62	-7.85	-7.85	-13.83	-5.67	-5.05
	-26.57	-7.92	-7.86	-12.67	-5.60	-4.82
	-21.60	-8.05	-7.87	-11.54	-5.57	-4.59
	-18.05	-8.15	-7.73	-10.67	-5.58	-4.41
30	-15.87	-8.19	-7.50	-10.41	-5.59	-4.35
	-13.65	-8.31	-7.20	-10.64	-5.63	-4.44
	-12.15	-8.38	-6.86	-11.29	-5.71	-4.65
	-10.63	-8.49	-6.42	-11.60	-5.81	-4.80
	-9.73	-8.61	-6.12	-11.59	-5.96	-4.91
60	-9.05	-8.78	-5.90	-11.02	-6.11	-4.89
	-9.15	-8.98	-6.05	-11.25	-6.32	-5.11
	-9.79	-9.23	-6.49	-11.94	-6.53	-5.43
	-11.42	-9.54	-7.37	-13.83	-6.74	-5.96
	-14.14	-9.94	-8.54	-15.95	-6.98	-6.46
90	-18.15	-10.42	-9.75	-18.87	-7.24	-6.95
	-21.74	-10.98	-10.63	-22.35	-7.53	-7.39
	-19.10	-11.69	-10.97	-31.56	-7.72	-7.71
	-18.11	-12.39	-11.36	-29.14	-7.96	-7.93
	-17.90	-13.19	-11.92	-19.61	-8.16	-7.86
120	-21.04	-14.12	-13.31	-14.40	-8.41	-7.44
	-23.13	-15.11	-14.48	-11.49	-8.55	-6.77
	-18.02	-16.16	-13.98	-9.42	-8.71	-6.04
	-13.20	-17.23	-11.75	-8.46	-8.78	-5.61
	-10.04	-18.23	-9.42	-7.74	-8.85	-5.25
150	-8.05	-19.14	-7.73	-7.70	-8.91	-5.25
	-6.77	-19.97	-6.56	-7.98	-8.89	-5.40
	-5.96	-20.59	-5.81	-8.96	-8.78	-5.86
	-5.63	-21.06	-5.51	-10.63	-8.75	-6.58
	-5.57	-21.38	-5.45	-13.06	-8.57	-7.25
180	-5.97	-21.66	-5.85	-16.14	-8.47	-7.78
	-6.68	-21.72	-6.55	-19.22	-8.31	-7.97
	-7.92	-21.83	-7.74	-21.91	-8.13	-7.95
	-9.72	-21.93	-9.47	-23.22	-7.94	-7.81
	-12.56	-21.91	-12.08	-23.11	-7.82	-7.69
210	-17.32	-21.97	-16.04	-22.33	-7.67	-7.52
	-26.34	-22.02	-20.65	-20.79	-7.49	-7.29
	-20.16	-22.07	-18.00	-13.94	-7.37	-6.50
	-14.44	-22.15	-13.76	-13.56	-7.21	-6.31
	-11.34	-22.43	-11.02	-13.13	-7.12	-6.15
240	-9.40	-22.58	-9.19	-12.60	-6.98	-5.93
	-8.13	-23.06	-7.99	-12.31	-6.92	-5.81
	-7.46	-23.44	-7.35	-12.22	-6.84	-5.73
	-7.12	-24.13	-7.03	-12.31	-6.75	-5.68
	-7.11	-24.96	-7.04	-13.14	-6.68	-5.80
270	-7.61	-25.73	-7.54	-14.41	-6.62	-5.95
	-8.57	-26.44	-8.50	-17.55	-6.57	-6.24
	-10.05	-26.35	-9.95	-22.02	-6.49	-6.37
	-12.28	-25.26	-12.07	-21.30	-6.46	-6.32
	-15.99	-23.20	-15.23	-16.04	-6.41	-5.96
300	-22.93	-21.11	-18.92	-12.87	-6.44	-5.55
	-30.75	-19.18	-18.89	-11.73	-6.42	-5.30
	-21.02	-17.39	-15.82	-10.91	-6.46	-5.13
	-16.74	-15.83	-13.25	-10.99	-6.46	-5.15
	-16.27	-14.46	-12.26	-10.73	-6.53	-5.13
330	-15.78	-13.28	-11.35	-10.87	-6.63	-5.25
	-16.12	-12.23	-10.74	-10.68	-6.75	-5.28
	-13.70	-11.39	-9.38	-11.99	-6.85	-5.69
	-11.76	-10.68	-8.18	-13.56	-6.95	-6.09
	-9.39	-10.09	-6.72	-16.85	-7.09	-6.66
	-8.61	-9.59	-6.06	-17.75	-7.19	-6.82
	-7.96	-9.21	-5.53	-18.18	-7.32	-6.97
	-8.33	-8.87	-5.58	-16.83	-7.44	-6.96
	-8.80	-8.66	-5.72	-19.02	-7.50	-7.21
	-9.89	-8.51	-6.13	-19.32	-7.58	-7.30
	-11.20	-8.45	-6.60	-21.44	-7.60	-7.42
	-12.78	-8.42	-7.06	-19.05	-7.66	-7.35
	-14.76	-8.46	-7.55	-19.13	-7.62	-7.33
	-17.17	-8.56	-8.00	-18.15	-7.57	-7.21
	-20.65	-8.63	-8.37	-20.69	-7.57	-7.36
	-26.80	-8.80	-8.73	-21.74	-7.47	-7.31
	-35.50	-8.96	-8.95	-27.95	-7.46	-7.42

ピーク値	-5.57	-7.70	-5.45	-7.70	-5.57	-4.35
平均値	-11.02	-11.76	-8.36	-13.14	-7.07	-6.11

平均化

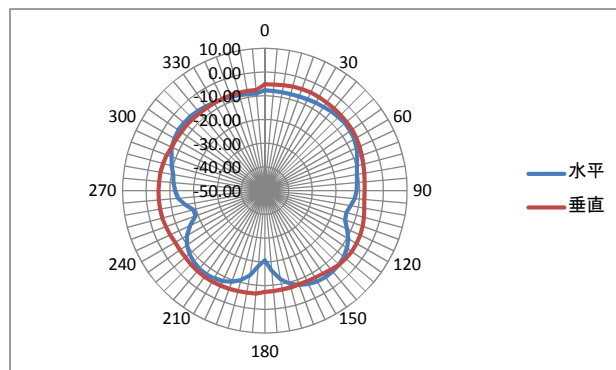


ピーク値	水平平均	垂直平均	平均化利得
-4.35	-8.36	-6.11	-6.11 dBi

サブ900MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-25.82	-8.04	-7.97	-19.60	-4.23	-4.10
	-25.40	-8.25	-8.17	-18.06	-4.15	-3.98
	-20.53	-8.47	-8.21	-16.71	-4.11	-3.88
	-17.44	-8.70	-8.15	-16.14	-4.09	-3.82
	-15.84	-8.80	-8.02	-15.81	-4.05	-3.77
30	-14.67	-8.99	-7.95	-15.83	-4.08	-3.80
	-13.89	-9.10	-7.86	-14.93	-4.16	-3.81
	-13.15	-9.21	-7.73	-13.68	-4.24	-3.77
	-12.44	-9.31	-7.58	-12.16	-4.36	-3.69
	-11.81	-9.39	-7.43	-11.60	-4.55	-3.77
60	-11.32	-9.50	-7.31	-11.29	-4.71	-3.85
	-11.13	-9.67	-7.33	-12.03	-4.91	-4.14
	-10.93	-9.83	-7.34	-12.54	-5.12	-4.40
	-11.25	-10.06	-7.60	-13.56	-5.38	-4.76
	-11.95	-10.37	-8.08	-14.10	-5.65	-5.07
90	-13.10	-10.78	-8.77	-15.83	-5.85	-5.43
	-15.19	-11.16	-9.72	-18.70	-6.09	-5.85
	-17.05	-11.75	-10.62	-25.28	-6.34	-6.28
	-18.77	-12.41	-11.50	-22.51	-6.53	-6.42
	-18.31	-13.10	-11.96	-16.18	-6.71	-6.24
120	-17.99	-14.00	-12.54	-12.36	-6.83	-5.76
	-15.69	-14.94	-12.29	-10.48	-6.97	-5.37
	-12.53	-15.99	-10.91	-8.89	-7.03	-4.85
	-9.78	-17.01	-9.02	-8.31	-7.09	-4.65
	-7.62	-18.28	-7.26	-8.04	-7.09	-4.53
150	-6.11	-19.45	-5.91	-8.68	-7.13	-4.82
	-5.00	-20.61	-4.89	-9.96	-7.05	-5.26
	-4.28	-21.70	-4.20	-11.83	-7.00	-5.76
	-4.05	-22.59	-3.99	-13.96	-6.94	-6.15
	-4.21	-23.40	-4.16	-16.13	-6.88	-6.39
180	-4.92	-24.24	-4.87	-18.92	-6.84	-6.58
	-5.92	-24.83	-5.86	-22.88	-6.79	-6.68
	-7.47	-25.45	-7.40	-29.65	-6.75	-6.73
	-9.48	-26.04	-9.38	-31.24	-6.68	-6.66
	-12.35	-26.60	-12.19	-24.70	-6.68	-6.61
210	-17.00	-26.70	-16.56	-22.45	-6.63	-6.52
	-26.49	-26.62	-23.54	-21.05	-6.62	-6.47
	-15.18	-26.56	-14.87	-15.62	-6.61	-6.10
	-11.99	-26.08	-11.82	-16.02	-6.60	-6.13
	-9.88	-25.56	-9.77	-16.31	-6.61	-6.17
240	-8.59	-25.07	-8.49	-16.19	-6.63	-6.17
	-7.39	-24.61	-7.31	-15.57	-6.55	-6.04
	-6.78	-24.34	-6.70	-15.65	-6.60	-6.09
	-6.40	-24.36	-6.33	-16.11	-6.52	-6.07
	-6.63	-24.43	-6.56	-18.48	-6.48	-6.21
270	-7.11	-24.92	-7.03	-21.74	-6.45	-6.32
	-8.28	-25.53	-8.20	-28.85	-6.42	-6.39
	-10.12	-25.99	-10.01	-34.56	-6.42	-6.42
	-12.96	-26.24	-12.76	-26.62	-6.37	-6.33
	-18.17	-25.68	-17.46	-19.87	-6.32	-6.13
300	-30.85	-24.00	-23.19	-14.23	-6.32	-5.67
	-23.61	-22.07	-19.76	-11.55	-6.39	-5.23
	-19.36	-19.96	-16.64	-9.97	-6.37	-4.80
	-18.09	-18.23	-15.15	-10.26	-6.40	-4.91
	-21.06	-16.66	-15.32	-10.62	-6.43	-5.03
330	-20.09	-15.35	-14.09	-12.25	-6.50	-5.47
	-16.16	-14.03	-11.96	-13.14	-6.55	-5.69
	-12.38	-13.01	-9.68	-15.26	-6.68	-6.11
	-10.70	-12.20	-8.38	-17.11	-6.75	-6.37
	-9.32	-11.41	-7.23	-21.96	-6.88	-6.75
	-9.35	-10.82	-7.01	-23.07	-6.92	-6.81
	-8.99	-10.31	-6.59	-22.38	-6.99	-6.87
	-9.46	-9.98	-6.70	-18.09	-7.06	-6.73
	-9.18	-9.65	-6.40	-17.87	-7.05	-6.70
	-9.63	-9.49	-6.55	-16.88	-7.09	-6.66
	-9.43	-9.41	-6.41	-18.77	-7.07	-6.78
	-10.15	-9.41	-6.75	-18.24	-6.98	-6.67
	-10.54	-9.45	-6.95	-18.40	-6.94	-6.64
	-12.08	-9.62	-7.67	-16.94	-6.80	-6.40
	-13.49	-9.79	-8.25	-17.22	-6.71	-6.34
	-17.01	-9.98	-9.19	-17.03	-6.59	-6.21
	-21.27	-10.27	-9.93	-19.09	-6.50	-6.27

ピーク値	-4.05	-8.04	-3.99	-8.04	-4.05	-3.69
平均値	-10.20	-12.61	-8.23	-14.41	-6.12	-5.52

平均化

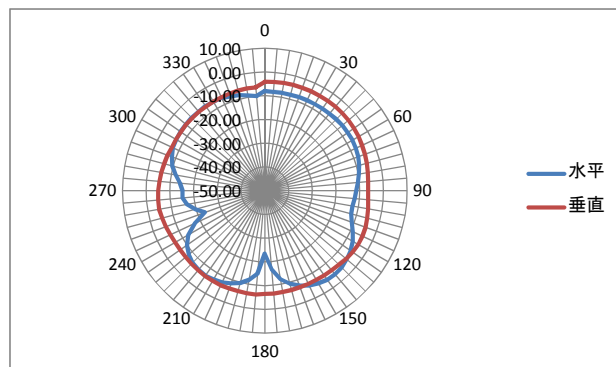


ピーク値	水平平均	垂直平均	平均化利得
-3.69	-8.23	-5.52	-5.52 dBi

サブ915MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-22.61	-5.93	-5.83	-14.71	0.52	0.65
	-22.90	-6.35	-6.26	-16.08	0.52	0.62
	-14.78	-6.71	-6.08	-18.83	0.52	0.57
	-11.08	-6.93	-5.52	-24.73	0.47	0.48
	-8.87	-7.06	-4.86	-22.44	0.43	0.45
30	-7.58	-7.06	-4.30	-17.73	0.32	0.38
	-6.58	-6.95	-3.75	-14.81	0.19	0.33
	-6.03	-6.75	-3.37	-13.33	0.05	0.24
	-5.68	-6.52	-3.07	-11.90	-0.10	0.18
	-5.82	-6.28	-3.03	-9.80	-0.35	0.12
60	-6.10	-6.03	-3.06	-7.50	-0.53	0.27
	-6.99	-5.87	-3.38	-5.99	-0.75	0.39
	-8.04	-5.72	-3.72	-5.16	-1.01	0.40
	-9.43	-5.66	-4.14	-5.30	-1.23	0.20
	-10.43	-5.64	-4.40	-6.09	-1.46	-0.18
90	-10.70	-5.72	-4.52	-7.73	-1.67	-0.71
	-11.12	-5.84	-4.71	-9.79	-1.85	-1.20
	-11.46	-6.01	-4.92	-11.88	-2.06	-1.63
	-12.83	-6.23	-5.37	-13.58	-2.20	-1.89
	-14.16	-6.47	-5.79	-13.01	-2.33	-1.97
120	-15.25	-6.74	-6.17	-11.79	-2.41	-1.93
	-13.16	-7.02	-6.07	-9.07	-2.48	-1.62
	-9.11	-7.28	-5.09	-7.75	-2.47	-1.34
	-6.12	-7.58	-3.78	-6.71	-2.44	-1.06
	-3.84	-7.88	-2.40	-6.04	-2.37	-0.82
150	-2.33	-8.16	-1.32	-5.92	-2.28	-0.72
	-1.14	-8.49	-0.41	-6.14	-2.18	-0.71
	-0.19	-8.88	0.36	-7.66	-2.05	-0.99
	0.36	-9.32	0.80	-10.26	-1.94	-1.34
	0.52	-9.83	0.91	-14.58	-1.77	-1.55
180	0.09	-10.44	0.46	-19.22	-1.65	-1.57
	-0.83	-11.11	-0.44	-17.33	-1.49	-1.38
	-2.38	-11.88	-1.92	-14.16	-1.41	-1.18
	-4.56	-12.81	-3.95	-12.60	-1.32	-1.01
	-7.73	-13.74	-6.76	-11.66	-1.25	-0.87
210	-12.55	-14.84	-10.54	-11.30	-1.15	-0.75
	-21.79	-15.95	-14.94	-10.87	-1.12	-0.68
	-9.69	-17.04	-8.96	-9.94	-1.09	-0.56
	-6.41	-18.08	-6.12	-9.94	-1.06	-0.53
	-4.33	-18.76	-4.17	-9.96	-1.06	-0.53
240	-2.86	-19.03	-2.76	-10.07	-1.04	-0.52
	-1.82	-19.11	-1.74	-11.01	-1.06	-0.64
	-1.23	-18.95	-1.16	-13.02	-1.06	-0.79
	-1.09	-18.83	-1.02	-17.07	-1.03	-0.92
	-1.52	-18.76	-1.44	-25.34	-1.05	-1.03
270	-2.44	-18.98	-2.34	-21.62	-1.01	-0.98
	-3.85	-19.42	-3.73	-18.89	-0.99	-0.92
	-5.73	-19.88	-5.56	-22.00	-1.00	-0.96
	-8.18	-20.20	-7.91	-19.56	-0.95	-0.89
	-11.29	-19.80	-10.72	-13.11	-0.96	-0.71
300	-15.89	-18.51	-14.00	-8.72	-0.93	-0.26
	-20.36	-16.53	-15.03	-7.45	-0.93	-0.05
	-24.50	-14.64	-14.21	-6.39	-0.94	0.15
	-22.59	-12.80	-12.37	-6.66	-0.96	0.08
	-18.55	-11.16	-10.43	-6.86	-0.98	0.01
330	-13.08	-9.78	-8.11	-8.52	-1.04	-0.32
	-10.60	-8.55	-6.44	-11.41	-1.10	-0.72
	-7.93	-7.60	-4.75	-19.08	-1.20	-1.12
	-6.81	-6.87	-3.83	-18.11	-1.29	-1.20
	-5.04	-6.19	-2.57	-12.40	-1.35	-1.02
	-4.39	-5.72	-1.99	-8.88	-1.42	-0.70
	-3.30	-5.42	-1.23	-8.55	-1.48	-0.70
	-3.04	-5.23	-0.99	-8.36	-1.51	-0.69
	-2.57	-5.16	-0.67	-9.66	-1.57	-0.94
	-2.86	-5.21	-0.86	-9.72	-1.56	-0.95
	-3.03	-5.35	-1.02	-9.96	-1.52	-0.94
	-3.90	-5.59	-1.66	-9.73	-1.51	-0.90
	-4.80	-5.93	-2.32	-10.92	-1.46	-0.99
	-6.47	-6.33	-3.39	-11.71	-1.38	-1.00
	-8.48	-6.80	-4.55	-13.42	-1.37	-1.10
	-12.23	-7.30	-6.09	-12.77	-1.28	-0.99
	-18.25	-7.94	-7.55	-12.57	-1.28	-0.97

ピーク値	0.52	-5.16	0.91	-5.16	0.52	0.65
平均値	-5.25	-8.16	-3.45	-10.08	-1.12	-0.60

平均化

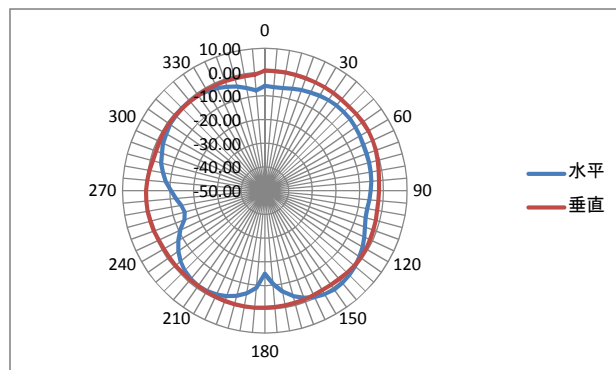


ピーク値	水平平均	垂直平均	平均化利得
0.91	-3.45	-0.60	-0.60 dBi

サブ945MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-23.21	-19.70	-18.10	-17.30	-6.09	-5.77
	-31.08	-20.25	-19.91	-17.60	-6.04	-5.74
	-25.84	-20.83	-19.64	-17.27	-5.97	-5.66
	-20.24	-21.55	-17.83	-17.72	-6.01	-5.73
	-16.80	-22.30	-15.73	-17.93	-6.03	-5.76
30	-14.73	-23.17	-14.15	-18.11	-6.07	-5.81
	-13.20	-24.13	-12.86	-18.00	-6.16	-5.88
	-12.27	-24.95	-12.04	-18.40	-6.35	-6.09
	-11.39	-25.43	-11.22	-19.73	-6.47	-6.27
	-11.15	-25.23	-10.98	-21.28	-6.71	-6.56
60	-11.18	-24.44	-10.98	-22.43	-6.92	-6.80
	-11.83	-23.13	-11.52	-23.14	-7.27	-7.16
	-12.56	-21.65	-12.05	-27.34	-7.54	-7.50
	-13.31	-20.12	-12.49	-26.28	-7.87	-7.81
	-14.11	-18.41	-12.74	-19.18	-8.27	-7.93
90	-15.02	-16.89	-12.84	-15.38	-8.61	-7.78
	-17.24	-15.69	-13.38	-12.38	-8.98	-7.35
	-18.46	-14.38	-12.95	-11.64	-9.25	-7.27
	-19.22	-13.32	-12.33	-9.98	-9.58	-6.76
	-19.16	-12.41	-11.57	-9.54	-9.83	-6.67
120	-24.03	-11.60	-11.36	-8.70	-10.00	-6.29
	-45.68	-10.97	-10.96	-9.96	-10.20	-7.07
	-20.78	-10.42	-10.04	-11.61	-10.28	-7.88
	-15.33	-10.01	-8.89	-14.95	-10.27	-9.00
	-11.94	-9.73	-7.69	-18.66	-10.24	-9.65
150	-9.25	-9.49	-6.36	-20.58	-10.15	-9.77
	-7.43	-9.33	-5.27	-17.55	-9.97	-9.27
	-6.26	-9.27	-4.50	-14.22	-9.86	-8.51
	-5.97	-9.29	-4.31	-11.92	-9.66	-7.63
	-6.04	-9.27	-4.35	-10.96	-9.44	-7.12
180	-6.46	-9.26	-4.63	-10.17	-9.25	-6.68
	-6.99	-9.27	-4.97	-10.01	-9.06	-6.50
	-8.01	-9.26	-5.58	-9.68	-8.84	-6.23
	-9.45	-9.29	-6.36	-9.77	-8.67	-6.17
	-11.89	-9.30	-7.39	-9.81	-8.47	-6.08
210	-15.48	-9.22	-8.30	-10.23	-8.37	-6.19
	-20.28	-9.15	-8.82	-10.38	-8.25	-6.17
	-13.37	-9.08	-7.71	-17.32	-8.17	-7.67
	-10.31	-9.02	-6.60	-16.84	-8.06	-7.52
	-8.52	-8.90	-5.69	-17.32	-7.96	-7.49
240	-7.61	-8.84	-5.17	-17.39	-7.91	-7.45
	-7.18	-8.76	-4.89	-16.86	-7.86	-7.34
	-7.33	-8.70	-4.95	-14.42	-7.80	-6.94
	-7.48	-8.72	-5.04	-12.37	-7.70	-6.43
	-8.06	-8.78	-5.39	-10.78	-7.64	-5.92
270	-8.86	-8.90	-5.87	-10.17	-7.58	-5.68
	-10.89	-9.18	-6.94	-10.05	-7.57	-5.62
	-13.32	-9.48	-7.98	-10.69	-7.54	-5.82
	-16.60	-9.91	-9.07	-11.88	-7.48	-6.14
	-16.97	-10.46	-9.59	-14.21	-7.46	-6.62
300	-17.94	-11.20	-10.37	-17.46	-7.44	-7.03
	-16.63	-11.98	-10.70	-21.40	-7.48	-7.31
	-17.04	-13.08	-11.61	-24.13	-7.53	-7.43
	-16.93	-14.55	-12.57	-38.86	-7.62	-7.62
	-19.97	-16.35	-14.78	-21.29	-7.65	-7.47
330	-18.35	-18.44	-15.38	-15.32	-7.77	-7.07
	-15.16	-21.27	-14.21	-12.63	-7.95	-6.68
	-11.82	-25.08	-11.62	-12.13	-8.05	-6.61
	-10.76	-29.62	-10.70	-12.12	-8.19	-6.71
	-9.61	-31.70	-9.59	-12.57	-8.33	-6.94
	-9.73	-28.12	-9.67	-12.69	-8.52	-7.11
	-9.30	-25.11	-9.18	-13.56	-8.64	-7.43
	-9.58	-22.98	-9.38	-14.70	-8.83	-7.83
	-9.59	-21.61	-9.32	-16.49	-8.82	-8.14
	-10.21	-20.70	-9.83	-17.30	-8.93	-8.34
	-10.82	-20.17	-10.34	-18.13	-8.93	-8.44
	-11.95	-19.84	-11.29	-18.55	-8.92	-8.47
	-13.39	-19.65	-12.46	-20.50	-8.87	-8.58
	-15.54	-19.61	-14.10	-21.89	-8.84	-8.63
	-18.67	-19.67	-16.13	-23.41	-8.77	-8.63
	-24.87	-19.84	-18.65	-22.96	-8.74	-8.58
	-35.98	-20.02	-19.91	-22.79	-8.68	-8.52

ピーク値	-5.97	-8.70	-4.31	-8.70	-5.97	-5.62
平均値	-11.35	-12.43	-8.84	-13.81	-8.06	-7.03

平均化

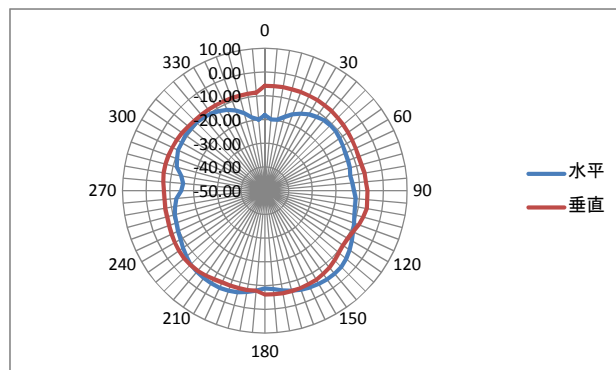


ピーク値	水平平均	垂直平均	平均化利得
-4.31	-8.84	-7.03	-7.03 dBi

サブ960MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-27.89	-12.36	-12.24	-21.17	-7.53	-7.35
	-37.90	-12.62	-12.61	-22.88	-7.40	-7.28
	-26.13	-12.81	-12.62	-23.56	-7.34	-7.24
	-21.66	-12.86	-12.32	-26.47	-7.27	-7.22
	-18.85	-12.83	-11.86	-27.25	-7.31	-7.27
30	-17.12	-12.72	-11.38	-34.74	-7.27	-7.26
	-15.56	-12.54	-10.78	-34.37	-7.41	-7.40
	-14.54	-12.36	-10.30	-23.07	-7.49	-7.37
	-13.53	-12.16	-9.78	-18.55	-7.65	-7.31
	-12.97	-11.97	-9.43	-15.39	-7.86	-7.15
60	-12.46	-11.82	-9.11	-13.44	-8.05	-6.94
	-12.39	-11.76	-9.05	-12.00	-8.36	-6.80
	-12.47	-11.73	-9.08	-10.62	-8.63	-6.50
	-13.15	-11.77	-9.40	-9.92	-8.97	-6.41
	-14.15	-11.92	-9.88	-9.63	-9.28	-6.44
90	-15.29	-12.11	-10.40	-10.38	-9.60	-6.96
	-16.66	-12.38	-11.00	-11.57	-9.96	-7.68
	-17.45	-12.76	-11.49	-12.50	-10.25	-8.22
	-18.97	-13.13	-12.13	-13.15	-10.50	-8.62
	-19.60	-13.59	-12.62	-13.71	-10.70	-8.93
120	-22.53	-13.99	-13.42	-15.21	-10.86	-9.50
	-28.72	-14.42	-14.26	-14.94	-11.01	-9.53
	-26.27	-14.83	-14.53	-14.04	-11.11	-9.32
	-17.93	-15.28	-13.39	-13.03	-11.06	-8.92
	-13.52	-15.69	-11.46	-11.83	-11.08	-8.43
150	-10.84	-16.01	-9.68	-11.75	-10.95	-8.32
	-9.12	-16.34	-8.37	-11.84	-10.85	-8.31
	-7.90	-16.74	-7.37	-13.01	-10.71	-8.70
	-7.42	-17.12	-6.98	-13.59	-10.60	-8.83
	-7.27	-17.62	-6.89	-13.91	-10.36	-8.77
180	-7.89	-18.06	-7.49	-13.75	-10.23	-8.63
	-8.66	-18.61	-8.24	-14.09	-10.09	-8.63
	-10.21	-19.29	-9.70	-14.38	-9.90	-8.57
	-12.41	-20.04	-11.72	-14.93	-9.78	-8.62
	-16.15	-20.73	-14.85	-15.07	-9.68	-8.58
210	-21.30	-21.56	-18.42	-15.44	-9.62	-8.61
	-20.11	-22.23	-18.03	-15.12	-9.58	-8.51
	-15.41	-22.86	-14.69	-15.73	-9.47	-8.54
	-11.93	-23.41	-11.63	-15.16	-9.44	-8.41
	-9.79	-23.63	-9.61	-15.16	-9.39	-8.37
240	-9.04	-23.83	-8.90	-14.75	-9.39	-8.28
	-8.54	-24.10	-8.42	-14.75	-9.36	-8.26
	-9.18	-24.29	-9.04	-14.59	-9.37	-8.23
	-9.39	-24.76	-9.27	-15.30	-9.39	-8.40
	-10.53	-25.81	-10.40	-16.62	-9.34	-8.59
270	-11.23	-27.31	-11.13	-18.64	-9.30	-8.82
	-13.09	-30.12	-13.00	-20.72	-9.20	-8.91
	-14.96	-35.54	-14.92	-25.28	-9.17	-9.07
	-20.23	-40.84	-20.19	-34.32	-9.07	-9.06
	-23.87	-31.28	-23.15	-20.57	-9.04	-8.74
300	-20.04	-24.92	-18.82	-14.67	-9.00	-7.96
	-15.25	-21.34	-14.29	-13.40	-8.97	-7.63
	-14.79	-18.70	-13.31	-12.73	-8.96	-7.44
	-14.53	-16.59	-12.43	-14.16	-8.90	-7.77
	-17.23	-14.89	-12.89	-14.97	-8.89	-7.93
330	-17.01	-13.55	-11.93	-18.60	-8.94	-8.49
	-16.47	-12.46	-11.01	-22.57	-9.00	-8.81
	-13.81	-11.61	-9.56	-22.62	-9.11	-8.92
	-13.22	-10.91	-8.90	-16.34	-9.21	-8.44
	-11.73	-10.33	-7.96	-15.39	-9.36	-8.39
	-11.84	-10.01	-7.82	-13.87	-9.37	-8.05
	-11.16	-9.74	-7.38	-14.86	-9.45	-8.35
	-11.85	-9.63	-7.58	-14.53	-9.60	-8.39
	-11.58	-9.63	-7.48	-16.50	-9.63	-8.82
	-12.66	-9.72	-7.93	-17.87	-9.70	-9.08
	-12.75	-9.89	-8.08	-20.79	-9.69	-9.36
	-14.27	-10.13	-8.72	-20.27	-9.69	-9.32
	-15.00	-10.44	-9.14	-19.13	-9.66	-9.19
	-17.43	-10.77	-9.92	-17.50	-9.59	-8.94
	-19.28	-11.14	-10.52	-17.80	-9.48	-8.88
	-23.50	-11.55	-11.28	-17.25	-9.43	-8.76
	-27.99	-11.95	-11.85	-17.62	-9.36	-8.76

ピーク値	-7.27	-9.63	-6.89	-9.63	-7.27	-6.41
平均値	-12.98	-13.70	-10.32	-14.93	-9.22	-8.19

平均化

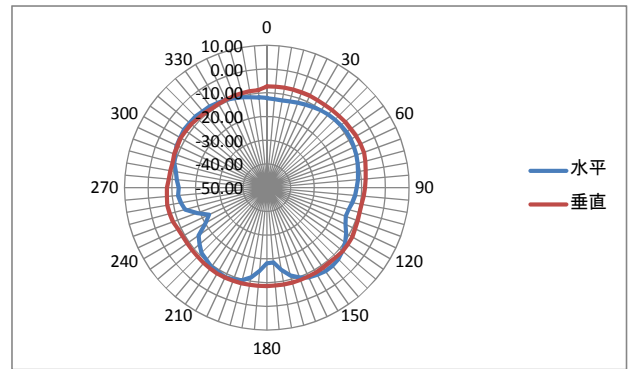


ピーク値	水平平均	垂直平均	平均化利得
-6.41	-10.32	-8.19	-8.19 dBi

サブ1447.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-24.89	-46.79	-24.86	-31.55	-36.64	-30.38
	-22.88	-43.76	-22.84	-28.24	-35.46	-27.48
	-20.76	-34.33	-20.57	-24.98	-34.12	-24.48
	-19.68	-30.06	-19.30	-22.74	-33.61	-22.40
	-18.36	-25.87	-17.65	-20.58	-32.90	-20.33
30	-17.77	-23.24	-16.68	-18.80	-32.47	-18.62
	-17.41	-20.62	-15.72	-17.40	-31.51	-17.24
	-17.80	-18.55	-15.15	-16.29	-30.80	-16.14
	-18.11	-16.82	-14.41	-15.32	-30.06	-15.18
	-18.83	-15.23	-13.66	-14.43	-29.13	-14.28
60	-18.89	-13.78	-12.61	-13.61	-28.45	-13.47
	-19.21	-12.62	-11.76	-12.59	-27.11	-12.44
	-19.33	-11.49	-10.83	-11.61	-25.79	-11.45
	-20.61	-10.58	-10.17	-10.57	-24.71	-10.40
	-22.61	-9.92	-9.69	-10.04	-23.61	-9.85
90	-25.65	-9.33	-9.23	-9.64	-22.69	-9.43
	-30.20	-8.88	-8.85	-9.48	-21.84	-9.23
	-41.26	-8.65	-8.65	-9.10	-20.88	-8.82
	-33.79	-8.55	-8.54	-8.89	-20.02	-8.56
	-28.94	-8.60	-8.56	-8.55	-19.52	-8.22
120	-28.92	-8.80	-8.75	-8.62	-19.07	-8.24
	-29.88	-9.15	-9.11	-9.06	-18.53	-8.60
	-29.46	-9.70	-9.65	-9.76	-18.17	-9.17
	-25.76	-10.36	-10.24	-10.37	-17.95	-9.68
	-24.05	-11.16	-10.94	-10.96	-17.68	-10.12
150	-23.35	-12.11	-11.79	-11.18	-17.55	-10.28
	-26.12	-13.11	-12.90	-11.69	-17.47	-10.67
	-30.56	-14.32	-14.21	-12.72	-17.41	-11.45
	-38.38	-15.70	-15.67	-14.27	-17.50	-12.58
	-26.83	-17.17	-16.72	-16.60	-17.58	-14.05
180	-21.97	-18.58	-16.94	-19.31	-17.68	-15.41
	-20.10	-19.97	-17.03	-22.33	-17.97	-16.61
	-19.41	-21.43	-17.29	-24.82	-18.03	-17.21
	-19.46	-22.91	-17.84	-25.91	-18.31	-17.62
	-20.43	-24.31	-18.94	-26.30	-18.83	-18.11
210	-21.45	-25.46	-19.99	-26.31	-19.15	-18.38
	-23.01	-27.01	-21.55	-26.51	-19.70	-18.88
	-36.91	-27.95	-27.43	-25.23	-20.27	-19.07
	-40.86	-28.76	-28.50	-25.83	-21.05	-19.80
	-39.92	-29.72	-29.32	-26.12	-21.97	-20.56
240	-34.40	-30.47	-28.99	-26.59	-23.08	-21.48
	-31.33	-31.11	-28.21	-26.97	-24.40	-22.49
	-29.99	-31.14	-27.52	-25.72	-25.99	-22.85
	-30.38	-31.34	-27.82	-25.29	-27.99	-23.42
	-32.97	-30.83	-28.75	-24.79	-31.01	-23.86
270	-34.34	-30.57	-29.04	-25.53	-35.01	-25.07
	-32.51	-29.95	-28.04	-27.32	-43.52	-27.22
	-29.00	-28.77	-25.87	-29.54	-50.95	-29.51
	-29.99	-27.97	-25.85	-31.28	-39.46	-30.66
	-32.07	-27.17	-25.95	-28.34	-33.85	-27.26
300	-30.69	-26.54	-25.13	-25.75	-31.24	-24.67
	-27.17	-25.96	-23.51	-25.14	-29.54	-23.79
	-25.75	-26.02	-22.87	-25.41	-28.34	-23.62
	-26.80	-26.49	-23.63	-27.55	-27.91	-24.72
	-27.90	-27.55	-24.71	-28.72	-27.11	-24.83
330	-30.48	-29.15	-26.75	-28.28	-27.16	-24.67
	-32.08	-31.63	-28.84	-26.58	-27.32	-23.92
	-33.47	-36.17	-31.60	-26.07	-27.43	-23.69
	-30.84	-45.78	-30.70	-27.46	-27.77	-24.60
	-28.90	-44.93	-28.79	-32.33	-28.86	-27.25
	-26.98	-35.78	-26.44	-40.91	-29.42	-29.13
	-27.45	-32.03	-26.15	-36.51	-30.70	-29.68
	-28.40	-29.91	-26.08	-32.15	-32.26	-29.19
	-30.82	-28.80	-26.68	-27.78	-33.52	-26.75
	-32.45	-27.86	-26.56	-26.37	-35.88	-25.91
	-32.99	-27.67	-26.55	-26.18	-38.87	-25.95
	-33.52	-27.67	-26.67	-28.09	-42.38	-27.93
	-31.81	-28.20	-26.63	-29.95	-51.11	-29.91
	-31.20	-29.08	-27.00	-35.21	-57.16	-35.18
	-27.55	-29.74	-25.50	-40.17	-48.51	-39.57
	-25.42	-31.34	-24.43	-41.77	-42.01	-38.88
	-23.59	-33.54	-23.17	-36.47	-39.34	-34.66

ピーク値	-17.41	-8.55	-8.54	-8.55	-17.41	-8.22
平均値	-23.84	-15.77	-15.14	-15.58	-22.76	-14.82

平均化

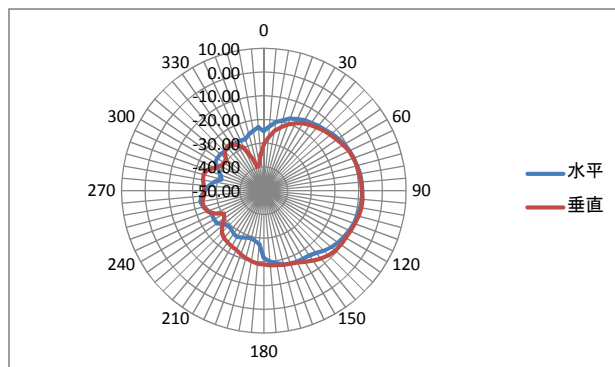


ピーク値 水平平均 垂直平均 平均化利得
-8.22 -15.14 -14.82 -14.82 dBi

サブ1462.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-53.27	-36.27	-36.18	-28.86	-22.37	-21.49
	-46.09	-33.45	-33.21	-26.28	-21.32	-20.12
	-37.90	-29.59	-28.99	-23.98	-20.59	-18.95
	-35.26	-26.94	-26.34	-22.08	-19.73	-17.74
	-32.78	-24.02	-23.48	-20.35	-19.15	-16.70
30	-32.78	-21.80	-21.46	-18.75	-18.47	-15.60
	-32.51	-19.65	-19.43	-17.24	-18.07	-14.63
	-32.39	-17.73	-17.59	-15.92	-17.85	-13.77
	-31.81	-16.18	-16.06	-14.75	-17.62	-12.94
	-32.20	-14.60	-14.52	-13.73	-17.48	-12.20
60	-31.08	-13.23	-13.16	-12.77	-17.48	-11.50
	-31.67	-12.16	-12.11	-11.93	-17.60	-10.89
	-29.41	-11.07	-11.01	-11.09	-17.94	-10.27
	-29.58	-10.21	-10.16	-10.35	-18.29	-9.70
	-28.42	-9.48	-9.42	-9.83	-18.88	-9.32
90	-27.99	-8.95	-8.89	-9.46	-19.50	-9.05
	-24.99	-8.53	-8.43	-9.35	-20.14	-9.00
	-22.25	-8.28	-8.11	-8.87	-20.97	-8.61
	-19.68	-8.18	-7.88	-8.59	-22.00	-8.39
	-18.38	-8.27	-7.87	-8.18	-23.01	-8.04
120	-17.79	-8.50	-8.01	-8.27	-24.07	-8.16
	-18.32	-8.86	-8.39	-8.65	-24.72	-8.54
	-18.98	-9.41	-8.95	-9.32	-25.68	-9.22
	-19.81	-10.05	-9.61	-10.00	-26.48	-9.91
	-19.33	-10.88	-10.30	-10.55	-27.26	-10.46
150	-18.81	-11.83	-11.03	-10.79	-27.97	-10.70
	-17.77	-12.89	-11.67	-11.23	-28.41	-11.15
	-17.48	-14.18	-12.51	-12.13	-28.74	-12.04
	-17.78	-15.51	-13.49	-13.46	-29.01	-13.34
	-18.82	-17.15	-14.90	-15.63	-29.17	-15.44
180	-20.82	-18.73	-16.64	-17.90	-29.11	-17.59
	-23.33	-20.43	-18.63	-20.32	-29.69	-19.85
	-26.43	-22.32	-20.89	-21.82	-30.02	-21.21
	-29.15	-24.18	-22.98	-22.55	-30.48	-21.90
	-30.27	-26.57	-25.02	-23.10	-30.90	-22.43
210	-29.51	-28.86	-26.16	-23.66	-31.19	-22.95
	-28.07	-31.30	-26.38	-23.80	-31.53	-23.12
	-27.15	-33.74	-26.29	-25.88	-32.33	-24.99
	-26.65	-35.95	-26.17	-26.07	-32.27	-25.14
	-26.23	-39.01	-26.01	-25.93	-33.17	-25.18
240	-25.85	-40.91	-25.71	-25.26	-33.09	-24.60
	-25.57	-41.75	-25.46	-25.09	-33.38	-24.49
	-26.43	-40.71	-26.27	-24.64	-33.98	-24.16
	-27.81	-41.52	-27.63	-25.03	-34.05	-24.51
	-31.22	-42.47	-30.90	-25.69	-33.09	-24.96
270	-33.18	-44.63	-32.88	-27.32	-33.18	-26.32
	-33.48	-42.39	-32.95	-31.56	-33.59	-29.45
	-28.56	-38.90	-28.18	-36.28	-32.66	-31.10
	-26.12	-35.85	-25.68	-34.14	-33.12	-30.59
	-24.43	-33.05	-23.87	-30.69	-33.05	-28.70
300	-24.42	-31.42	-23.63	-28.28	-33.29	-27.09
	-26.09	-29.70	-24.52	-27.86	-33.23	-26.75
	-29.65	-28.89	-26.25	-27.79	-33.25	-26.70
	-35.41	-28.46	-27.66	-28.92	-32.66	-27.39
	-43.15	-28.92	-28.76	-30.25	-31.87	-27.97
330	-66.92	-29.56	-29.56	-30.81	-31.31	-28.04
	-42.31	-31.08	-30.76	-29.03	-31.14	-26.95
	-33.30	-32.50	-29.87	-28.19	-30.08	-26.02
	-28.99	-35.55	-28.12	-29.46	-29.64	-26.54
	-28.81	-36.97	-28.19	-33.97	-29.49	-28.17
	-30.13	-37.25	-29.36	-36.34	-29.32	-28.53
	-34.58	-35.36	-31.94	-31.56	-29.01	-27.09
	-40.45	-33.46	-32.66	-30.80	-29.44	-27.05
	-36.30	-32.61	-31.07	-29.47	-29.87	-26.66
	-34.02	-31.96	-29.86	-30.51	-30.46	-27.47
	-30.40	-31.45	-27.88	-31.08	-31.15	-28.10
	-30.01	-31.47	-27.67	-34.86	-31.93	-30.14
	-29.52	-32.26	-27.67	-36.00	-31.98	-30.53
	-31.22	-33.41	-29.16	-32.17	-31.31	-28.70
	-32.31	-34.78	-30.36	-29.26	-30.28	-26.73
	-33.48	-36.39	-31.68	-26.54	-28.86	-24.53
	-34.65	-39.74	-33.48	-25.31	-27.52	-23.26

ピーク値	-17.48	-8.18	-7.87	-8.18	-17.48	-8.04
平均値	-24.57	-15.49	-14.98	-15.18	-23.82	-14.63

平均化

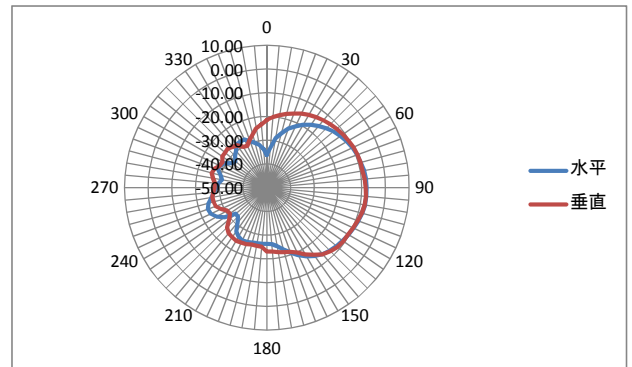


ピーク値	水平平均	垂直平均	平均化利得
-7.87	-14.98	-14.63	-14.63 dBi

サブ1495.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-30.31	-35.09	-29.06	-23.90	-21.35	-19.43
	-29.04	-32.71	-27.49	-21.85	-20.54	-18.13
	-26.61	-29.52	-24.82	-20.06	-19.62	-16.83
	-25.92	-26.40	-23.14	-18.67	-18.86	-15.76
	-24.31	-23.88	-21.08	-17.40	-18.06	-14.70
30	-23.38	-21.28	-19.20	-16.20	-17.28	-13.70
	-22.19	-18.92	-17.24	-15.09	-16.70	-12.81
	-21.96	-17.05	-15.83	-14.09	-16.04	-11.95
	-20.84	-15.35	-14.27	-13.07	-15.51	-11.11
	-20.99	-13.65	-12.91	-11.93	-15.07	-10.21
60	-20.02	-12.30	-11.62	-10.95	-14.75	-9.44
	-19.99	-11.02	-10.50	-9.90	-14.42	-8.58
	-18.82	-9.96	-9.43	-9.01	-14.27	-7.88
	-18.83	-9.08	-8.64	-8.31	-14.19	-7.31
	-18.38	-8.26	-7.85	-8.02	-14.15	-7.07
90	-19.15	-7.68	-7.38	-7.86	-14.31	-6.98
	-18.87	-7.28	-6.99	-8.00	-14.52	-7.13
	-18.33	-6.98	-6.67	-7.78	-14.89	-7.01
	-16.55	-6.85	-6.41	-7.54	-15.34	-6.87
	-15.53	-6.92	-6.36	-7.06	-15.91	-6.53
120	-14.51	-7.11	-6.39	-6.85	-16.67	-6.42
	-14.22	-7.44	-6.62	-7.07	-17.36	-6.68
	-14.15	-7.91	-6.98	-7.69	-18.28	-7.32
	-14.65	-8.60	-7.64	-8.27	-19.22	-7.93
	-14.76	-9.37	-8.27	-8.81	-20.19	-8.50
150	-15.58	-10.19	-9.09	-9.16	-21.25	-8.90
	-16.33	-11.22	-10.05	-9.84	-22.41	-9.61
	-17.91	-12.38	-11.31	-10.94	-23.51	-10.71
	-20.46	-13.55	-12.74	-12.38	-24.78	-12.13
	-23.41	-14.89	-14.32	-14.28	-25.94	-13.99
180	-28.73	-16.40	-16.15	-16.16	-26.94	-15.81
	-35.15	-17.90	-17.82	-17.53	-28.42	-17.19
	-49.57	-19.40	-19.39	-18.81	-28.97	-18.41
	-41.16	-21.26	-21.22	-18.99	-29.64	-18.63
	-43.60	-23.26	-23.22	-19.35	-29.95	-18.99
210	-42.74	-25.78	-25.69	-19.98	-30.14	-19.58
	-35.40	-28.59	-27.77	-20.50	-29.74	-20.01
	-26.25	-31.77	-25.18	-27.63	-29.71	-25.54
	-26.03	-35.66	-25.58	-27.89	-29.67	-25.68
	-27.16	-42.47	-27.03	-28.11	-29.76	-25.85
240	-29.22	-49.93	-29.18	-28.00	-29.57	-25.70
	-33.84	-45.53	-33.56	-28.07	-29.77	-25.82
	-42.85	-40.49	-38.50	-27.93	-30.17	-25.90
	-41.75	-38.45	-36.78	-29.56	-30.30	-26.91
	-36.97	-37.97	-34.43	-30.08	-30.87	-27.44
270	-30.53	-37.85	-29.79	-30.48	-31.15	-27.79
	-28.35	-36.58	-27.74	-30.89	-31.50	-28.17
	-25.96	-34.14	-25.35	-34.12	-31.77	-29.78
	-25.44	-32.30	-24.62	-37.24	-31.57	-30.53
	-26.66	-29.67	-24.89	-30.49	-31.70	-28.04
300	-31.69	-27.91	-26.39	-26.87	-31.69	-25.63
	-49.00	-26.57	-26.55	-24.80	-31.28	-23.92
	-34.43	-25.66	-25.11	-25.27	-31.53	-24.35
	-33.47	-25.04	-24.46	-29.15	-31.55	-27.18
	-35.11	-25.27	-24.84	-34.62	-31.88	-30.02
330	-30.53	-25.63	-24.41	-33.26	-32.48	-29.84
	-26.75	-26.84	-23.78	-27.69	-33.62	-26.70
	-25.61	-28.43	-23.78	-25.65	-35.68	-25.24
	-25.68	-31.18	-24.60	-25.75	-38.60	-25.53
	-28.41	-34.91	-27.53	-28.47	-43.79	-28.34
	-33.10	-41.21	-32.48	-32.61	-54.60	-32.58
	-37.46	-41.45	-36.00	-33.82	-47.30	-33.63
	-34.11	-36.96	-32.29	-35.08	-40.10	-33.89
	-34.53	-34.20	-31.35	-32.50	-34.96	-30.55
	-33.95	-32.28	-30.02	-33.76	-32.90	-30.30
	-36.03	-31.59	-30.25	-32.91	-30.92	-28.79
	-35.48	-31.30	-29.89	-35.65	-29.06	-28.20
	-34.76	-30.94	-29.43	-36.30	-27.65	-27.09
	-32.97	-31.13	-28.95	-33.53	-26.49	-25.70
	-32.19	-31.82	-28.99	-30.55	-25.12	-24.02
	-31.52	-33.04	-29.20	-27.42	-24.11	-22.45
	-31.54	-33.98	-29.58	-25.30	-23.02	-21.00

ピーク値	-14.15	-6.85	-6.36	-6.85	-14.15	-6.42
平均値	-21.65	-14.11	-13.41	-13.62	-20.33	-12.78

平均化

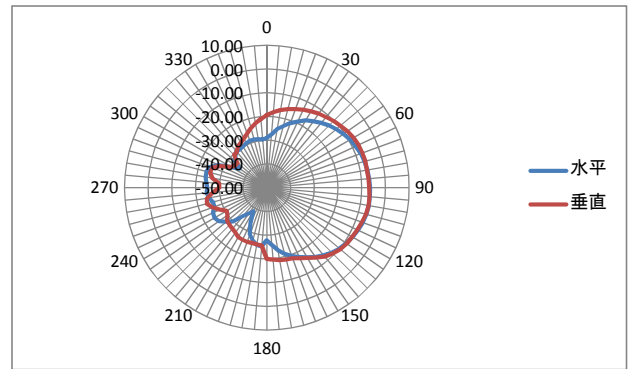


ピーク値 水平平均 垂直平均 平均化利得
-6.36 -13.41 -12.78 -12.78 dBi

サブ1510.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-29.10	-42.10	-28.89	-24.96	-19.63	-18.52
	-28.61	-35.61	-27.82	-23.00	-18.83	-17.43
	-26.13	-30.00	-24.64	-21.18	-17.96	-16.27
	-25.29	-26.63	-22.90	-19.33	-17.18	-15.11
	-23.18	-23.65	-20.40	-17.61	-16.42	-13.97
30	-22.30	-20.74	-18.44	-16.28	-15.70	-12.97
	-20.90	-18.34	-16.42	-15.23	-15.09	-12.15
	-20.51	-16.44	-15.01	-14.16	-14.46	-11.30
	-19.31	-14.60	-13.34	-12.98	-13.93	-10.42
	-19.65	-12.98	-12.13	-11.91	-13.45	-9.60
60	-18.69	-11.55	-10.78	-10.70	-13.05	-8.71
	-18.97	-10.25	-9.70	-9.45	-12.73	-7.78
	-17.65	-9.17	-8.60	-8.39	-12.50	-6.97
	-17.40	-8.28	-7.78	-7.52	-12.30	-6.27
	-16.65	-7.45	-6.95	-7.05	-12.31	-5.92
90	-17.16	-6.80	-6.41	-6.84	-12.34	-5.76
	-16.91	-6.37	-6.00	-6.89	-12.52	-5.84
	-16.54	-6.07	-5.70	-6.61	-12.80	-5.67
	-14.80	-5.95	-5.42	-6.39	-13.25	-5.57
	-13.74	-5.99	-5.31	-6.01	-13.65	-5.32
120	-12.72	-6.17	-5.30	-5.95	-14.37	-5.37
	-12.51	-6.52	-5.55	-6.16	-15.07	-5.63
	-12.30	-7.03	-5.90	-6.72	-15.96	-6.23
	-12.66	-7.68	-6.48	-7.34	-16.83	-6.88
	-12.63	-8.43	-7.03	-8.08	-17.81	-7.64
150	-13.24	-9.33	-7.85	-8.56	-18.90	-8.17
	-13.81	-10.31	-8.71	-9.36	-20.05	-9.00
	-15.25	-11.47	-9.95	-10.52	-21.11	-10.16
	-17.34	-12.69	-11.41	-12.16	-22.35	-11.77
	-20.06	-13.98	-13.02	-14.31	-23.49	-13.82
180	-24.74	-15.45	-14.97	-16.70	-24.40	-16.02
	-30.31	-16.78	-16.59	-18.63	-25.39	-17.80
	-40.95	-18.31	-18.28	-20.37	-25.96	-19.31
	-51.87	-20.06	-20.05	-21.04	-26.46	-19.95
	-48.55	-21.81	-21.80	-21.80	-26.47	-20.52
210	-38.81	-23.88	-23.74	-22.36	-26.55	-20.96
	-32.75	-25.37	-24.64	-23.24	-26.41	-21.53
	-23.35	-26.90	-21.76	-24.65	-26.19	-22.34
	-23.23	-27.72	-21.91	-25.67	-26.28	-22.96
	-24.02	-28.02	-22.57	-26.81	-26.23	-23.50
240	-26.09	-28.07	-23.96	-29.13	-26.30	-24.48
	-29.44	-28.07	-25.69	-29.80	-26.33	-24.71
	-37.13	-28.21	-27.69	-27.71	-26.89	-24.27
	-40.53	-28.26	-28.01	-25.94	-27.44	-23.62
	-36.46	-28.74	-28.06	-24.59	-28.22	-23.03
270	-31.10	-29.46	-27.19	-24.92	-29.20	-23.54
	-30.35	-30.90	-27.61	-26.62	-30.20	-25.04
	-28.25	-31.71	-26.63	-28.98	-31.23	-26.95
	-27.30	-31.37	-25.87	-28.71	-32.47	-27.18
	-28.71	-29.85	-26.23	-26.06	-33.86	-25.40
300	-33.86	-28.07	-27.06	-24.04	-33.73	-23.60
	-35.14	-27.02	-26.39	-23.91	-33.79	-23.49
	-34.88	-25.94	-25.42	-25.65	-33.17	-24.94
	-33.46	-25.59	-24.93	-30.01	-32.96	-28.23
	-30.08	-25.65	-24.31	-30.21	-32.81	-28.31
330	-27.89	-26.36	-24.05	-26.83	-33.23	-25.93
	-27.86	-27.91	-24.88	-24.72	-34.97	-24.32
	-28.57	-30.17	-26.28	-23.86	-36.75	-23.64
	-26.96	-33.80	-26.14	-24.88	-39.29	-24.73
	-27.20	-41.30	-27.04	-27.87	-44.12	-27.77
	-28.79	-49.24	-28.75	-31.73	-43.57	-31.45
	-31.97	-38.33	-31.07	-30.28	-39.96	-29.84
	-32.42	-33.94	-30.11	-29.92	-35.02	-28.75
	-35.40	-31.59	-30.08	-27.35	-32.28	-26.14
	-34.76	-30.21	-28.90	-26.95	-30.20	-25.26
	-35.67	-29.56	-28.61	-26.02	-28.48	-24.07
	-37.30	-29.18	-28.56	-26.86	-26.98	-23.91
	-36.45	-29.36	-28.58	-27.67	-25.65	-23.54
	-36.30	-29.91	-29.01	-28.33	-24.43	-22.95
	-35.48	-30.69	-29.45	-28.00	-23.41	-22.11
	-34.29	-31.74	-29.82	-26.17	-22.28	-20.80
	-35.15	-33.66	-31.33	-24.70	-21.19	-19.59

ピーク値	-12.30	-5.95	-5.30	-5.95	-12.30	-5.32
平均値	-19.83	-13.22	-12.37	-12.87	-18.41	-11.80

平均化

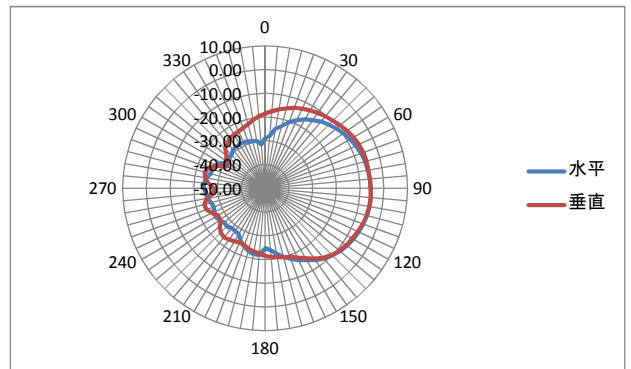


ピーク値	水平平均	垂直平均	平均化利得
-5.30	-12.37	-11.80	-11.80 dBi

サブ1575.42MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-23.76	-42.94	-23.71	-28.36	-19.27	-18.76
	-22.83	-44.82	-22.80	-26.21	-18.31	-17.65
	-20.78	-39.15	-20.72	-23.79	-17.41	-16.51
	-19.60	-33.33	-19.41	-21.88	-16.49	-15.39
	-17.67	-29.18	-17.37	-20.01	-15.48	-14.17
	-16.62	-25.54	-16.10	-18.58	-14.50	-13.06
30	-15.13	-22.35	-14.38	-17.01	-13.56	-11.94
	-14.20	-19.99	-13.18	-15.43	-12.61	-10.78
	-12.90	-17.86	-11.70	-14.00	-11.74	-9.72
	-11.94	-15.77	-10.44	-12.90	-11.01	-8.85
	-10.85	-14.04	-9.15	-11.58	-10.18	-7.81
	-10.23	-12.42	-8.18	-10.55	-9.51	-6.99
60	-9.50	-11.09	-7.21	-9.65	-8.92	-6.26
	-9.17	-9.97	-6.54	-8.97	-8.40	-5.67
	-8.72	-8.89	-5.79	-8.29	-8.03	-5.15
	-8.58	-8.08	-5.31	-7.80	-7.74	-4.76
	-8.37	-7.50	-4.91	-7.45	-7.58	-4.50
	-8.32	-7.06	-4.63	-7.15	-7.49	-4.30
90	-7.94	-6.78	-4.31	-6.92	-7.54	-4.20
	-7.71	-6.68	-4.16	-6.69	-7.68	-4.14
	-7.49	-6.77	-4.10	-6.68	-7.91	-4.24
	-7.66	-6.96	-4.29	-6.89	-8.23	-4.50
	-7.96	-7.35	-4.63	-7.31	-8.66	-4.92
	-8.31	-7.90	-5.09	-7.80	-9.15	-5.41
120	-8.54	-8.58	-5.55	-8.38	-9.80	-6.02
	-9.10	-9.35	-6.21	-9.03	-10.47	-6.68
	-9.95	-10.25	-7.09	-10.02	-11.17	-7.54
	-11.41	-11.33	-8.36	-11.18	-12.01	-8.56
	-13.20	-12.49	-9.82	-12.59	-12.98	-9.77
	-15.24	-13.71	-11.40	-14.21	-13.88	-11.03
150	-17.37	-15.15	-13.11	-15.83	-14.79	-12.27
	-19.38	-16.45	-14.66	-17.23	-15.92	-13.51
	-21.19	-17.77	-16.14	-18.70	-16.91	-14.71
	-23.17	-19.22	-17.75	-19.94	-17.82	-15.74
	-24.56	-20.98	-19.40	-21.29	-18.84	-16.89
	-25.39	-22.70	-20.83	-22.96	-19.73	-18.04
180	-25.50	-24.39	-21.90	-23.98	-20.41	-18.82
	-27.68	-26.23	-23.88	-29.38	-21.23	-20.61
	-27.84	-27.83	-24.82	-30.81	-21.92	-21.39
	-28.74	-29.41	-26.05	-29.41	-22.57	-21.76
	-30.18	-30.69	-27.41	-27.45	-22.93	-21.62
	-31.03	-31.32	-28.16	-25.36	-23.58	-21.37
210	-28.44	-31.87	-26.81	-24.12	-24.19	-21.15
	-26.12	-32.64	-25.25	-23.78	-24.59	-21.15
	-24.64	-34.24	-24.18	-24.06	-25.20	-21.58
	-24.12	-36.50	-23.87	-25.65	-25.62	-22.63
	-24.76	-38.39	-24.58	-28.50	-26.19	-24.18
	-27.62	-41.05	-27.43	-30.34	-26.38	-24.91
240	-32.99	-37.53	-31.68	-27.18	-27.25	-24.20
	-42.67	-34.54	-33.92	-25.01	-27.44	-23.04
	-35.50	-31.73	-30.21	-24.84	-28.13	-23.17
	-30.39	-30.18	-27.27	-27.93	-28.56	-25.22
	-28.93	-29.44	-26.17	-32.50	-29.16	-27.50
	-28.16	-29.55	-25.79	-47.21	-28.93	-28.87
270	-26.63	-30.20	-25.05	-50.04	-29.06	-29.02
	-26.02	-32.50	-25.14	-49.74	-29.06	-29.02
	-27.32	-35.89	-26.75	-37.12	-28.51	-27.94
	-30.89	-41.58	-30.53	-32.39	-28.44	-26.97
	-36.98	-41.27	-35.61	-32.31	-28.03	-26.65
	-46.42	-35.71	-35.35	-35.00	-27.63	-26.90
300	-39.89	-32.24	-31.55	-32.77	-27.13	-26.08
	-37.14	-30.81	-29.90	-30.31	-26.79	-25.19
	-34.47	-29.57	-28.35	-29.65	-26.51	-24.79
	-33.81	-29.48	-28.11	-28.10	-25.92	-23.86
	-33.38	-29.63	-28.10	-28.20	-25.61	-23.70
	-33.36	-29.91	-28.29	-28.51	-25.29	-23.60
330	-33.63	-30.15	-28.54	-29.89	-24.60	-23.48
	-33.09	-31.09	-28.96	-29.77	-23.92	-22.91
	-32.34	-32.13	-29.22	-29.18	-23.35	-22.34
	-29.75	-33.77	-28.30	-29.10	-22.57	-21.69
	-27.59	-34.05	-26.70	-28.28	-21.63	-20.78
	-26.30	-35.73	-25.83	-27.95	-20.76	-20.00

ピーク値	-7.49	-6.68	-4.10	-6.68	-7.49	-4.14
平均値	-14.06	-14.06	-11.05	-13.63	-13.63	-10.62

平均化

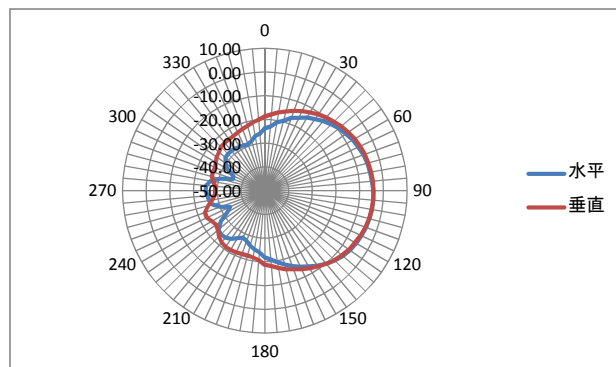


ピーク値	水平平均	垂直平均	平均化利得
-4.10	-11.05	-10.62	-10.62 dBi

サブ1744.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-13.22	-17.15	-11.75	-19.61	-7.03	-6.80
	-15.16	-17.45	-13.14	-19.21	-6.00	-5.79
	-13.53	-17.40	-12.03	-17.28	-5.00	-4.75
	-13.44	-17.30	-11.94	-18.57	-4.00	-3.85
	-11.29	-16.98	-10.25	-16.03	-3.13	-2.91
30	-10.61	-16.41	-9.60	-17.13	-2.27	-2.13
	-8.78	-15.55	-7.95	-15.28	-1.41	-1.24
	-7.48	-14.39	-6.67	-15.52	-0.60	-0.46
	-5.64	-13.11	-4.93	-11.37	0.07	0.37
	-3.95	-11.50	-3.25	-8.93	0.70	1.15
60	-2.40	-10.01	-1.70	-5.65	1.30	2.10
	-1.35	-8.31	-0.55	-4.41	1.84	2.76
	-0.45	-6.61	0.49	-2.97	2.30	3.43
	-0.11	-5.24	1.05	-2.73	2.66	3.77
	0.66	-3.94	1.95	-1.37	2.95	4.32
90	1.07	-2.73	2.58	-0.38	3.15	4.75
	1.49	-1.68	3.20	0.79	3.25	5.20
	1.57	-0.81	3.55	0.72	3.22	5.16
	2.06	-0.14	4.11	0.39	3.15	4.99
	2.66	0.34	4.66	-0.09	2.94	4.69
120	3.25	0.65	5.15	0.05	2.65	4.55
	3.00	0.79	5.04	-0.56	2.28	4.10
	1.88	0.71	4.34	-1.38	1.81	3.51
	0.00	0.46	3.25	-4.02	1.28	2.40
	-0.41	0.06	2.84	-5.97	0.68	1.53
150	-1.04	-0.52	2.24	-6.63	-0.02	0.84
	-1.80	-1.30	1.47	-5.61	-0.74	0.48
	-4.35	-2.20	-0.13	-6.69	-1.55	-0.39
	-8.88	-3.17	-2.14	-7.26	-2.41	-1.18
	-17.54	-4.37	-4.17	-9.73	-3.25	-2.37
180	-19.76	-5.63	-5.46	-9.97	-4.16	-3.14
	-15.81	-6.93	-6.40	-10.74	-5.08	-4.03
	-14.95	-8.40	-7.53	-11.12	-5.95	-4.79
	-17.41	-9.86	-9.16	-11.68	-6.87	-5.63
	-18.37	-11.30	-10.52	-11.66	-7.73	-6.25
210	-17.27	-12.91	-11.56	-12.52	-8.60	-7.12
	-13.75	-14.33	-11.02	-13.03	-9.36	-7.81
	-16.14	-15.61	-12.86	-28.63	-10.25	-10.19
	-13.93	-16.84	-12.13	-30.49	-11.08	-11.03
	-13.33	-18.14	-12.09	-32.83	-11.91	-11.87
240	-12.38	-19.30	-11.57	-27.67	-12.73	-12.59
	-14.82	-19.96	-13.66	-21.44	-13.61	-12.95
	-19.41	-20.05	-16.71	-16.75	-14.75	-12.62
	-24.40	-20.22	-18.81	-13.84	-16.05	-11.79
	-15.91	-19.50	-14.33	-12.92	-17.58	-11.64
270	-10.90	-18.24	-10.17	-13.85	-19.07	-12.71
	-9.06	-17.41	-8.47	-15.89	-20.69	-14.65
	-7.77	-16.51	-7.23	-19.15	-21.76	-17.25
	-8.74	-15.93	-7.98	-19.87	-21.94	-17.77
	-10.94	-15.82	-9.72	-16.31	-20.86	-15.01
300	-14.91	-16.28	-12.53	-14.59	-19.38	-13.34
	-17.74	-17.70	-14.71	-15.19	-18.06	-13.38
	-17.07	-19.81	-15.22	-16.89	-17.07	-13.97
	-14.33	-23.64	-13.84	-18.53	-16.34	-14.29
	-11.34	-25.37	-11.17	-19.69	-15.86	-14.35
330	-10.78	-21.16	-10.40	-16.74	-15.83	-13.25
	-12.38	-17.20	-11.14	-14.85	-15.89	-12.33
	-16.95	-14.85	-12.76	-12.88	-16.10	-11.19
	-21.41	-13.39	-12.76	-13.69	-17.00	-12.03
	-22.31	-12.56	-12.12	-12.60	-17.82	-11.46
	-21.62	-12.21	-11.74	-13.42	-19.17	-12.40
	-16.61	-12.10	-10.78	-13.46	-21.22	-12.78
	-13.28	-12.40	-9.81	-14.34	-22.84	-13.77
	-11.55	-12.82	-9.13	-14.57	-23.62	-14.06
	-11.96	-13.32	-9.58	-16.71	-22.70	-15.73
	-13.57	-13.89	-10.72	-16.48	-20.62	-15.06
	-15.92	-14.60	-12.20	-17.96	-18.51	-15.21
	-17.74	-15.18	-13.26	-19.02	-16.14	-14.34
	-18.73	-15.77	-13.99	-24.74	-14.40	-14.01
	-20.46	-16.39	-14.96	-27.05	-13.01	-12.84
	-18.76	-17.04	-14.81	-25.88	-11.60	-11.44
	-17.75	-17.45	-14.59	-23.76	-10.39	-10.19

ピーク値	3.25	0.79	5.15	0.79	3.25	5.20
平均値	-4.69	-6.50	-2.49	-7.21	-2.72	-1.40

平均化

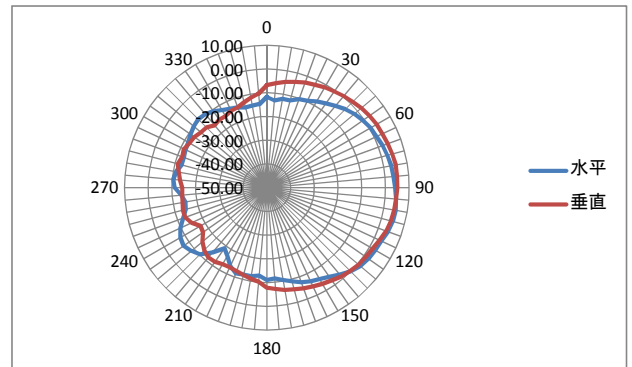


ピーク値	水平平均	垂直平均	平均化利得
5.20	-2.49	-1.40	-1.40 dBi

サブ1784.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-13.74	-8.23	-7.15	-23.37	-7.93	-7.81
	-14.46	-8.21	-7.29	-22.76	-6.88	-6.77
	-13.08	-8.16	-6.95	-18.62	-5.89	-5.66
	-12.60	-8.08	-6.77	-18.32	-4.90	-4.71
	-11.66	-8.01	-6.45	-14.72	-4.11	-3.75
30	-11.92	-7.85	-6.42	-14.35	-3.27	-2.94
	-11.16	-7.70	-6.08	-12.47	-2.50	-2.08
	-10.50	-7.41	-5.67	-13.45	-1.77	-1.49
	-8.27	-7.04	-4.60	-12.30	-1.06	-0.74
	-6.12	-6.59	-3.34	-12.84	-0.52	-0.28
60	-4.50	-6.00	-2.17	-8.51	0.12	0.68
	-3.36	-5.28	-1.21	-6.47	0.64	1.42
	-3.10	-4.58	-0.77	-3.86	1.07	2.28
	-3.27	-3.84	-0.54	-3.40	1.43	2.66
	-2.83	-3.02	0.09	-1.98	1.69	3.24
90	-2.23	-2.33	0.73	-1.58	1.89	3.50
	-1.37	-1.65	1.50	-0.11	2.00	4.08
	-0.77	-1.10	2.08	-0.11	1.99	4.08
	0.00	-0.57	2.74	0.09	1.91	4.10
	0.92	-0.22	3.40	-0.57	1.71	3.72
120	1.77	-0.01	3.98	-0.31	1.41	3.65
	2.00	0.09	4.16	-0.15	1.03	3.49
	1.09	0.02	3.60	-0.12	0.62	3.28
	-0.53	-0.20	2.65	-1.55	0.07	2.34
	-1.46	-0.50	2.06	-3.41	-0.56	1.25
150	-2.29	-0.96	1.44	-5.24	-1.22	0.23
	-3.00	-1.57	0.78	-5.74	-1.90	-0.40
	-5.41	-2.24	-0.53	-6.61	-2.64	-1.18
	-10.77	-3.06	-2.38	-7.04	-3.26	-1.74
	-23.82	-3.90	-3.86	-8.99	-3.96	-2.77
180	-18.58	-4.92	-4.73	-9.10	-4.65	-3.32
	-14.51	-5.79	-5.24	-10.02	-5.30	-4.04
	-13.92	-6.74	-5.98	-9.99	-6.08	-4.60
	-15.13	-7.74	-7.01	-10.75	-6.79	-5.32
	-17.56	-8.60	-8.08	-11.08	-7.57	-5.97
210	-19.88	-9.46	-9.08	-12.34	-8.30	-6.86
	-15.77	-10.25	-9.17	-12.24	-9.20	-7.45
	-10.42	-10.85	-7.62	-19.23	-10.08	-9.58
	-8.62	-11.54	-6.83	-21.12	-11.00	-10.60
	-8.01	-12.28	-6.63	-24.06	-12.01	-11.75
240	-8.18	-12.98	-6.94	-26.32	-13.16	-12.95
	-10.16	-13.74	-8.58	-27.74	-14.46	-14.26
	-13.69	-14.44	-11.04	-21.99	-15.80	-14.87
	-17.95	-15.22	-13.37	-18.05	-17.23	-14.61
	-12.20	-16.17	-10.74	-16.58	-18.90	-14.58
270	-8.43	-17.07	-7.87	-17.99	-20.65	-16.11
	-8.66	-17.38	-8.11	-20.28	-21.73	-17.93
	-9.61	-17.50	-8.95	-24.07	-22.11	-19.97
	-12.46	-17.38	-11.25	-23.35	-21.58	-19.37
	-15.04	-17.26	-13.00	-18.58	-20.75	-16.52
300	-18.90	-17.34	-15.04	-15.84	-19.99	-14.43
	-18.51	-18.04	-15.26	-16.59	-19.18	-14.69
	-13.24	-19.20	-12.26	-17.74	-18.51	-15.10
	-10.63	-21.73	-10.31	-19.11	-18.14	-15.59
	-9.32	-26.79	-9.24	-20.11	-17.83	-15.81
330	-10.13	-46.94	-10.13	-15.92	-18.01	-13.83
	-13.06	-25.78	-12.84	-14.42	-18.09	-12.87
	-17.69	-20.11	-15.72	-11.83	-18.42	-10.97
	-23.26	-16.65	-15.79	-11.75	-19.04	-11.01
	-23.92	-14.54	-14.06	-11.35	-19.78	-10.77
	-22.69	-13.16	-12.70	-13.83	-20.75	-13.03
	-15.17	-12.35	-10.53	-16.00	-22.16	-15.06
	-11.38	-11.87	-8.61	-18.33	-23.58	-17.19
	-10.00	-11.67	-7.74	-17.08	-24.29	-16.32
	-10.78	-11.43	-8.08	-16.95	-24.02	-16.17
	-11.90	-11.42	-8.64	-16.05	-22.93	-15.24
	-12.76	-11.36	-9.00	-16.34	-20.53	-14.94
	-13.92	-11.38	-9.45	-16.01	-18.40	-14.03
	-15.39	-11.31	-9.88	-18.09	-16.56	-14.24
	-17.92	-11.29	-10.44	-20.78	-14.61	-13.67
	-17.40	-11.36	-10.40	-24.42	-12.95	-12.65
	-16.04	-11.36	-10.08	-28.91	-11.52	-11.44

ピーク値	2.00	0.09	4.16	0.09	2.00	4.10
平均値	-6.16	-6.02	-3.08	-7.38	-3.86	-2.26

平均化

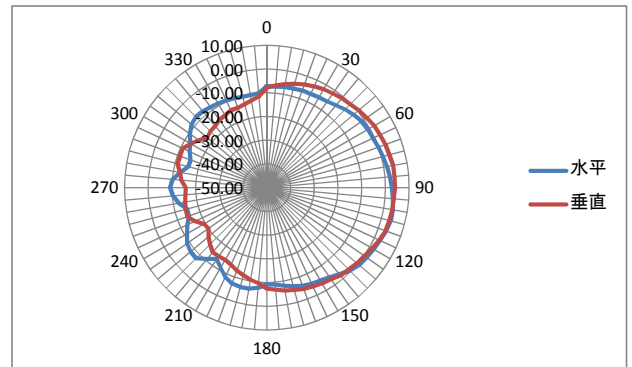


ピーク値	水平平均	垂直平均	平均化利得
4.16	-3.08	-2.26	-2.26 dBi

サブ1920MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-15.31	-10.01	-8.89	-14.73	-18.33	-13.16
	-13.60	-9.62	-8.16	-14.50	-18.96	-13.17
	-12.73	-9.03	-7.49	-13.48	-19.34	-12.48
	-11.76	-8.47	-6.80	-12.75	-19.46	-11.91
	-11.19	-7.64	-6.05	-11.88	-19.72	-11.22
	-10.60	-6.85	-5.32	-11.26	-19.58	-10.66
30	-10.02	-5.92	-4.49	-9.52	-18.88	-9.04
	-9.06	-4.95	-3.53	-7.45	-18.22	-7.10
	-7.85	-4.08	-2.56	-5.21	-16.63	-4.90
	-6.90	-3.11	-1.59	-3.49	-15.32	-3.21
	-6.20	-2.23	-0.77	-2.24	-13.96	-1.95
	-6.11	-1.51	-0.21	-1.68	-12.66	-1.34
60	-6.27	-0.80	0.29	-1.14	-11.41	-0.75
	-6.55	-0.29	0.63	-0.80	-10.34	-0.34
	-6.83	0.05	0.86	-0.36	-9.24	0.17
	-7.27	0.27	0.98	-0.11	-8.41	0.49
	-8.09	0.32	0.90	0.00	-7.70	0.68
	-9.39	0.16	0.62	0.16	-7.13	0.90
90	-11.58	-0.19	0.12	0.29	-6.65	1.09
	-15.24	-0.63	-0.48	0.32	-6.36	1.16
	-19.09	-1.26	-1.18	-0.09	-6.18	0.86
	-14.24	-1.92	-1.67	-0.39	-6.11	0.64
	-11.79	-2.78	-2.26	-0.87	-6.13	0.26
	-11.54	-3.70	-3.04	-0.91	-6.22	0.21
120	-12.55	-4.69	-4.03	-1.70	-6.38	-0.42
	-12.04	-5.63	-4.74	-2.57	-6.68	-1.14
	-10.32	-6.59	-5.05	-4.08	-6.92	-2.26
	-10.42	-7.72	-5.85	-5.14	-7.27	-3.07
	-11.86	-8.72	-7.00	-6.74	-7.58	-4.13
	-14.28	-9.78	-8.46	-8.22	-7.97	-5.08
150	-20.02	-10.53	-10.07	-10.32	-8.38	-6.23
	-28.30	-11.37	-11.28	-12.41	-8.72	-7.18
	-31.57	-12.04	-11.99	-14.73	-9.15	-8.09
	-32.23	-12.52	-12.47	-16.80	-9.54	-8.79
	-34.75	-13.13	-13.10	-19.88	-10.01	-9.58
	-25.72	-13.63	-13.37	-22.49	-10.61	-10.34
180	-20.30	-14.12	-13.18	-24.23	-11.35	-11.13
	-16.46	-14.76	-12.52	-30.11	-12.09	-12.02
	-15.54	-15.72	-12.62	-26.50	-13.08	-12.89
	-15.28	-16.94	-13.02	-23.56	-14.46	-13.95
	-15.44	-18.57	-13.72	-21.28	-16.02	-14.88
	-17.60	-20.67	-15.86	-18.50	-17.63	-15.03
210	-21.73	-22.94	-19.28	-17.17	-19.92	-15.32
	-20.88	-25.80	-19.67	-16.24	-21.58	-15.13
	-14.72	-24.88	-14.32	-17.08	-22.65	-16.02
	-11.60	-23.02	-11.30	-16.54	-22.76	-15.61
	-11.25	-21.05	-10.82	-17.94	-22.24	-16.57
	-12.64	-19.79	-11.88	-17.10	-21.69	-15.81
240	-16.53	-19.05	-14.60	-17.72	-21.55	-16.22
	-20.59	-18.92	-16.67	-19.39	-21.55	-17.33
	-20.61	-19.49	-17.00	-23.75	-21.98	-19.77
	-20.45	-20.62	-17.52	-24.81	-22.67	-20.60
	-22.01	-21.82	-18.90	-24.74	-22.80	-20.65
	-22.99	-23.25	-20.11	-21.82	-22.30	-19.04
270	-21.33	-26.38	-20.15	-19.99	-21.37	-17.62
	-21.86	-29.14	-21.11	-21.94	-20.80	-18.32
	-24.35	-30.07	-23.32	-22.06	-20.04	-17.92
	-24.20	-26.25	-22.10	-24.29	-19.89	-18.54
	-23.40	-22.91	-20.14	-23.58	-19.92	-18.36
	-23.45	-19.73	-18.19	-27.93	-20.11	-19.45
300	-22.15	-17.63	-16.32	-22.52	-20.53	-18.40
	-19.89	-16.50	-14.86	-19.66	-20.99	-17.26
	-19.47	-15.37	-13.94	-21.59	-21.34	-18.45
	-20.08	-14.56	-13.49	-27.00	-21.06	-20.07
	-18.26	-13.79	-12.46	-36.89	-20.74	-20.64
	-18.20	-13.53	-12.25	-44.92	-19.97	-19.95
330	-19.60	-13.10	-12.22	-28.88	-19.68	-19.18
	-26.17	-12.87	-12.67	-23.92	-19.48	-18.15
	-36.87	-12.54	-12.53	-20.23	-18.80	-16.45
	-23.92	-12.36	-12.06	-19.31	-18.76	-16.02
	-19.44	-12.18	-11.44	-18.77	-19.08	-15.91
	-18.01	-11.93	-10.97	-18.83	-19.18	-15.99

ピーク値	-6.11	0.32	0.98	0.32	-6.11	1.16
平均値	-12.72	-6.49	-5.57	-6.36	-11.72	-5.25

平均化

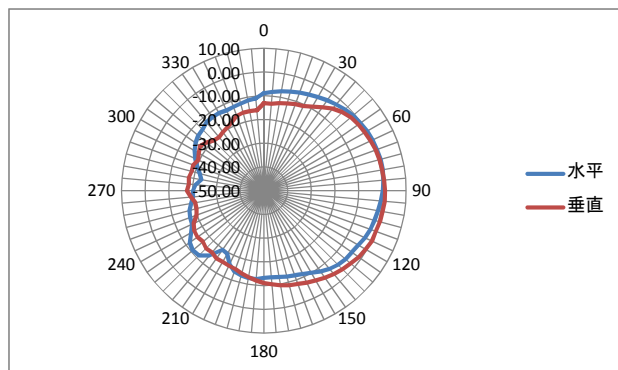


ピーク値	水平平均	垂直平均	平均化利得
1.16	-5.57	-5.25	-5.25 dBi

サブ1940MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-14.41	-14.66	-11.53	-17.87	-20.56	-16.00
	-13.35	-14.21	-10.75	-17.09	-20.81	-15.55
	-12.49	-13.69	-10.04	-15.83	-20.91	-14.66
	-12.15	-13.47	-9.75	-15.09	-20.28	-13.94
	-11.97	-12.48	-9.21	-14.13	-19.65	-13.05
	-11.80	-11.66	-8.71	-13.07	-18.43	-11.96
30	-11.30	-10.62	-7.93	-11.33	-17.05	-10.30
	-10.13	-9.48	-6.78	-9.79	-16.11	-8.88
	-8.30	-8.15	-5.21	-7.67	-14.69	-6.88
	-6.78	-7.04	-3.90	-6.01	-13.53	-5.30
	-5.91	-5.83	-2.86	-4.58	-12.43	-3.92
	-5.72	-4.75	-2.20	-3.89	-11.33	-3.17
60	-5.99	-3.88	-1.80	-3.38	-10.29	-2.58
	-6.03	-3.18	-1.37	-3.07	-9.60	-2.20
	-6.26	-2.63	-1.06	-2.62	-8.79	-1.68
	-6.60	-2.29	-0.92	-2.36	-7.93	-1.29
	-7.70	-2.10	-1.05	-2.28	-7.36	-1.10
	-8.93	-2.14	-1.32	-2.20	-6.79	-0.90
90	-9.97	-2.42	-1.72	-2.10	-6.37	-0.72
	-11.52	-2.79	-2.25	-2.14	-6.06	-0.66
	-13.96	-3.48	-3.11	-2.61	-5.85	-0.93
	-15.39	-4.22	-3.90	-2.89	-5.76	-1.08
	-15.71	-5.05	-4.69	-3.41	-5.72	-1.40
	-15.83	-6.06	-5.63	-3.47	-5.79	-1.47
120	-17.73	-7.17	-6.80	-4.25	-6.01	-2.03
	-18.74	-8.42	-8.03	-5.15	-6.29	-2.67
	-16.51	-9.90	-9.04	-6.79	-6.66	-3.71
	-15.59	-11.23	-9.88	-8.09	-7.13	-4.57
	-16.25	-12.71	-11.12	-9.86	-7.60	-5.57
	-17.30	-13.96	-12.31	-11.29	-8.10	-6.39
150	-20.35	-15.40	-14.19	-13.05	-8.79	-7.41
	-24.72	-16.57	-15.95	-14.54	-9.39	-8.23
	-29.61	-17.55	-17.29	-16.79	-10.16	-9.31
	-29.50	-18.12	-17.81	-18.75	-10.97	-10.30
	-28.97	-18.30	-17.94	-19.96	-11.89	-11.26
	-26.48	-18.74	-18.06	-21.88	-13.01	-12.48
180	-24.08	-19.14	-17.93	-24.68	-14.21	-13.84
	-24.89	-19.82	-18.64	-23.80	-15.68	-15.06
	-25.03	-20.59	-19.26	-28.19	-17.54	-17.18
	-26.44	-21.56	-20.34	-27.96	-19.36	-18.80
	-28.78	-22.93	-21.93	-25.22	-21.57	-20.01
	-35.86	-24.55	-24.24	-22.91	-25.31	-20.94
210	-30.10	-26.87	-25.18	-22.34	-29.41	-21.56
	-23.01	-29.76	-22.18	-21.43	-32.59	-21.10
	-19.64	-29.98	-19.25	-22.69	-31.64	-22.17
	-18.77	-28.06	-18.29	-22.41	-28.85	-21.52
	-19.78	-25.69	-18.79	-24.42	-26.60	-22.37
	-22.10	-24.26	-20.03	-22.35	-24.69	-20.36
240	-26.56	-22.33	-20.94	-22.66	-23.67	-20.12
	-29.17	-21.78	-21.05	-21.11	-22.78	-18.86
	-29.08	-20.79	-20.19	-21.00	-22.01	-18.46
	-29.50	-19.96	-19.50	-20.99	-20.84	-17.90
	-27.95	-19.51	-18.93	-20.42	-19.83	-17.10
	-25.62	-19.74	-18.74	-19.61	-18.74	-16.14
270	-25.94	-19.96	-18.99	-19.51	-18.06	-15.71
	-29.14	-21.02	-20.40	-21.80	-17.55	-16.16
	-33.29	-22.33	-21.99	-23.85	-17.32	-16.45
	-29.10	-25.38	-23.84	-22.01	-17.43	-16.13
	-25.19	-29.76	-23.89	-21.51	-17.65	-16.15
	-21.34	-30.35	-20.83	-17.84	-18.05	-14.93
300	-18.84	-26.81	-18.20	-16.79	-18.63	-14.60
	-17.65	-23.14	-16.57	-15.27	-19.32	-13.83
	-18.88	-20.65	-16.66	-16.66	-19.83	-14.95
	-23.45	-19.28	-17.87	-19.22	-19.97	-16.57
	-29.21	-18.25	-17.92	-20.49	-20.16	-17.31
	-28.90	-17.61	-17.30	-19.99	-19.91	-16.94
330	-31.57	-17.00	-16.85	-17.87	-20.10	-15.83
	-35.65	-16.66	-16.61	-16.50	-19.85	-14.85
	-25.62	-16.56	-16.05	-15.63	-19.75	-14.21
	-19.97	-16.39	-14.81	-15.48	-20.05	-14.18
	-17.05	-15.91	-13.43	-15.17	-20.27	-14.00
	-15.36	-15.88	-12.60	-14.78	-20.75	-13.80

ピーク値	-5.72	-2.10	-0.92	-2.10	-5.72	-0.66
平均値	-13.43	-9.42	-7.97	-8.67	-11.68	-6.91

平均化

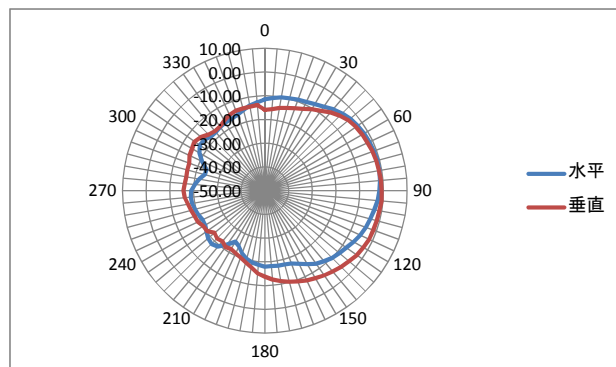


ピーク値	水平平均	垂直平均	平均化利得
-0.66	-7.97	-6.91	-6.91 dBi

サブ1960MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-15.92	-19.32	-14.29	-19.81	-23.13	-18.15
	-14.31	-19.07	-13.06	-19.05	-23.52	-17.72
	-13.29	-18.44	-12.13	-17.50	-22.92	-16.40
	-12.51	-17.53	-11.32	-16.43	-21.95	-15.36
	-11.58	-16.50	-10.36	-14.89	-21.10	-13.96
30	-11.26	-15.30	-9.81	-13.73	-19.67	-12.74
	-10.85	-13.84	-9.08	-12.03	-18.24	-11.10
	-9.72	-12.57	-7.90	-10.42	-16.85	-9.53
	-8.35	-11.34	-6.58	-8.70	-15.60	-7.89
	-7.17	-9.95	-5.33	-7.50	-14.23	-6.66
60	-6.34	-8.79	-4.38	-6.47	-13.16	-5.63
	-6.08	-7.75	-3.82	-5.95	-12.08	-5.00
	-6.16	-6.74	-3.43	-5.41	-11.13	-4.38
	-6.10	-6.04	-3.06	-5.17	-10.29	-4.00
	-6.27	-5.49	-2.85	-4.95	-9.44	-3.63
90	-6.69	-5.17	-2.85	-5.17	-8.75	-3.59
	-7.38	-4.95	-2.99	-5.46	-8.02	-3.54
	-8.13	-5.04	-3.31	-5.54	-7.51	-3.40
	-9.10	-5.37	-3.83	-5.78	-6.99	-3.33
	-9.66	-5.85	-4.34	-6.02	-6.59	-3.29
120	-10.26	-6.54	-5.00	-6.53	-6.39	-3.45
	-10.55	-7.36	-5.65	-6.60	-6.15	-3.36
	-11.16	-8.50	-6.62	-7.14	-6.08	-3.57
	-11.73	-9.75	-7.62	-7.41	-6.16	-3.73
	-13.42	-11.12	-9.10	-8.27	-6.26	-4.14
150	-15.26	-12.49	-10.65	-8.96	-6.50	-4.55
	-16.53	-13.57	-11.79	-10.33	-6.78	-5.19
	-16.59	-14.62	-12.48	-11.43	-7.14	-5.76
	-17.63	-15.30	-13.30	-13.27	-7.63	-6.58
	-18.58	-15.62	-13.84	-14.96	-8.27	-7.43
180	-21.24	-15.68	-14.61	-17.72	-8.83	-8.30
	-23.57	-15.67	-15.01	-20.14	-9.53	-9.17
	-24.65	-15.99	-15.44	-24.57	-10.17	-10.01
	-24.59	-16.26	-15.67	-28.15	-11.01	-10.92
	-23.97	-16.72	-15.97	-33.49	-11.86	-11.83
210	-23.92	-17.28	-16.43	-40.08	-12.89	-12.88
	-23.45	-18.43	-17.24	-35.60	-14.02	-13.99
	-21.34	-18.77	-16.86	-24.30	-15.25	-14.74
	-21.59	-20.26	-17.87	-23.73	-16.55	-15.79
	-22.05	-20.75	-18.34	-22.68	-18.24	-16.90
240	-22.78	-21.59	-19.14	-21.99	-20.05	-17.90
	-23.31	-21.67	-19.40	-21.44	-21.93	-18.67
	-22.10	-20.92	-18.46	-22.09	-22.38	-19.22
	-20.80	-20.11	-17.43	-21.74	-22.72	-19.19
	-17.73	-19.18	-15.38	-22.57	-22.37	-19.46
270	-16.81	-18.63	-14.62	-22.07	-21.60	-18.82
	-17.11	-18.53	-14.75	-22.16	-21.01	-18.54
	-18.32	-18.72	-15.50	-20.13	-21.16	-17.60
	-19.47	-19.70	-16.57	-19.94	-20.83	-17.35
	-20.11	-21.00	-17.52	-20.33	-21.84	-18.01
300	-20.77	-24.24	-19.16	-23.21	-23.17	-20.18
	-24.75	-28.07	-23.09	-24.89	-24.94	-21.91
	-32.85	-33.80	-30.29	-26.32	-27.46	-23.84
	-39.94	-33.52	-32.63	-31.16	-28.16	-26.39
	-26.81	-28.47	-24.55	-42.15	-26.40	-26.28
330	-25.54	-27.04	-23.22	-35.93	-24.96	-24.62
	-26.95	-26.58	-23.75	-32.26	-23.96	-23.36
	-32.45	-26.53	-25.54	-31.69	-23.33	-22.74
	-40.83	-26.64	-26.48	-33.80	-22.65	-22.33
	-37.00	-25.90	-25.58	-34.61	-22.54	-22.28
	-27.73	-24.93	-23.10	-27.26	-22.58	-21.30
	-22.65	-23.02	-19.82	-23.71	-22.72	-20.18
	-21.74	-21.90	-18.81	-21.84	-22.69	-19.23
	-23.54	-21.11	-19.15	-24.65	-22.56	-20.47
	-24.30	-20.63	-19.08	-26.45	-21.82	-20.53
	-25.20	-20.01	-18.86	-28.59	-21.41	-20.65
	-26.93	-20.16	-19.33	-25.38	-21.59	-20.08
	-29.88	-20.50	-20.03	-23.37	-21.48	-19.31
	-28.00	-20.68	-19.94	-20.71	-21.62	-18.13
	-22.80	-21.08	-18.85	-19.81	-22.05	-17.77
	-18.90	-21.70	-17.07	-18.09	-22.12	-16.64
	-17.16	-21.89	-15.90	-18.36	-22.84	-17.04

ピーク値	-6.08	-4.95	-2.85	-4.95	-6.08	-3.29
平均値	-13.06	-12.31	-9.66	-11.65	-12.15	-8.88

平均化

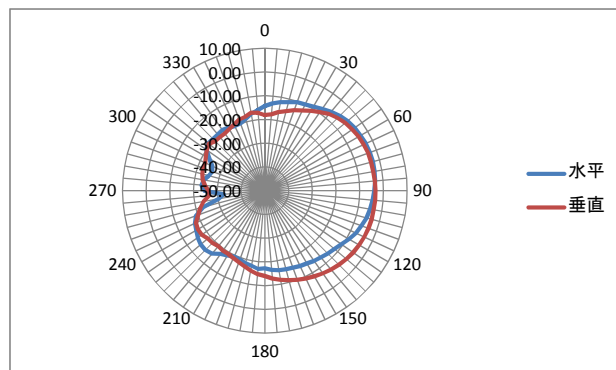


ピーク値	水平平均	垂直平均	平均化利得
-2.85	-9.66	-8.88	-8.88 dBi

サブ1980MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-17.83	-24.79	-17.04	-19.86	-15.57	-14.20
	-16.79	-24.03	-16.04	-19.57	-14.50	-13.32
	-16.02	-23.15	-15.25	-18.69	-13.44	-12.30
	-15.87	-22.30	-14.98	-18.48	-12.37	-11.42
	-15.26	-20.66	-14.16	-17.78	-11.58	-10.65
30	-15.19	-19.37	-13.79	-16.97	-10.71	-9.79
	-14.64	-17.86	-12.95	-15.04	-10.12	-8.91
	-14.55	-16.31	-12.33	-13.43	-9.46	-8.00
	-13.18	-14.90	-10.95	-11.32	-8.99	-6.99
	-12.41	-13.34	-9.84	-9.92	-8.50	-6.14
60	-11.12	-12.02	-8.54	-9.19	-8.03	-5.56
	-10.82	-10.94	-7.87	-9.35	-7.71	-5.44
	-10.50	-10.00	-7.23	-9.22	-7.42	-5.22
	-10.24	-9.21	-6.68	-8.66	-7.26	-4.89
	-9.99	-8.67	-6.27	-8.35	-7.15	-4.70
90	-9.91	-8.55	-6.17	-8.92	-7.00	-4.85
	-9.95	-8.35	-6.07	-9.80	-6.96	-5.14
	-10.22	-8.54	-6.29	-10.30	-7.13	-5.42
	-9.99	-8.82	-6.36	-10.64	-7.21	-5.58
	-8.99	-9.33	-6.15	-11.20	-7.42	-5.90
120	-7.87	-10.05	-5.81	-12.59	-7.74	-6.51
	-6.96	-10.78	-5.46	-12.60	-8.11	-6.79
	-7.19	-11.68	-5.87	-12.60	-8.40	-7.00
	-7.49	-12.49	-6.30	-12.48	-8.91	-7.33
	-8.11	-13.25	-6.95	-13.77	-9.53	-8.14
150	-8.80	-13.76	-7.60	-15.35	-10.25	-9.08
	-9.46	-14.05	-8.17	-16.67	-10.95	-9.92
	-10.46	-14.00	-8.87	-16.70	-11.72	-10.53
	-12.22	-14.17	-10.07	-17.31	-12.59	-11.33
	-14.77	-14.28	-11.51	-18.01	-13.55	-12.22
180	-17.11	-14.51	-12.61	-20.05	-14.63	-13.54
	-19.00	-14.54	-13.21	-22.09	-15.55	-14.68
	-18.88	-14.96	-13.48	-25.36	-16.71	-16.15
	-19.14	-15.50	-13.94	-28.97	-17.92	-17.60
	-18.76	-15.70	-13.95	-31.77	-19.31	-19.07
210	-19.39	-16.49	-14.69	-31.34	-20.61	-20.26
	-19.79	-17.07	-15.21	-27.44	-22.24	-21.09
	-20.96	-17.82	-16.10	-28.59	-23.53	-22.35
	-20.72	-18.59	-16.51	-26.75	-25.86	-23.27
	-20.41	-19.24	-16.77	-26.14	-28.53	-24.16
240	-21.95	-19.68	-17.66	-26.79	-32.00	-25.65
	-24.24	-20.26	-18.80	-28.33	-37.96	-27.88
	-29.76	-20.41	-19.93	-31.28	-47.10	-31.17
	-27.11	-20.50	-19.65	-32.61	-37.88	-31.48
	-21.54	-20.10	-17.75	-32.26	-32.66	-29.45
270	-18.69	-19.51	-16.07	-34.46	-30.82	-29.26
	-19.88	-19.27	-16.56	-33.51	-29.75	-28.22
	-21.92	-19.42	-17.48	-41.95	-28.11	-27.93
	-24.89	-19.65	-18.51	-29.20	-27.57	-25.30
	-27.50	-20.32	-19.56	-24.64	-27.07	-22.68
300	-26.98	-21.60	-20.49	-24.27	-26.64	-22.29
	-24.07	-23.04	-20.52	-24.89	-25.30	-22.08
	-21.90	-24.00	-19.81	-25.00	-24.07	-21.50
	-21.31	-24.68	-19.67	-22.28	-23.22	-19.71
	-22.07	-23.42	-19.68	-21.22	-22.88	-18.96
330	-22.90	-22.35	-19.60	-23.44	-22.74	-20.06
	-24.51	-21.69	-19.86	-24.18	-22.56	-20.29
	-24.92	-21.16	-19.63	-24.46	-22.54	-20.38
	-32.84	-21.01	-20.73	-24.00	-23.07	-20.50
	-31.11	-21.40	-20.95	-32.61	-23.33	-22.84
	-24.22	-21.47	-19.62	-34.42	-23.75	-23.39
	-22.09	-21.94	-19.01	-23.80	-24.59	-21.16
	-20.76	-22.61	-18.58	-23.27	-25.79	-21.34
	-21.75	-22.45	-19.08	-24.93	-28.59	-23.38
	-25.42	-23.34	-21.25	-29.61	-29.65	-26.62
	-31.43	-23.81	-23.12	-32.68	-30.00	-28.12
	-35.43	-23.82	-23.53	-27.77	-28.19	-24.96
	-29.11	-24.83	-23.45	-24.93	-24.58	-21.74
	-23.92	-26.11	-21.87	-21.28	-22.34	-18.77
	-21.05	-26.56	-19.97	-20.67	-19.84	-17.22
	-18.83	-27.62	-18.29	-19.91	-18.32	-16.03
	-18.09	-28.62	-17.72	-19.48	-16.41	-14.67

ピーク値 -6.96 -8.35 **-5.46** -8.35 -6.96 **-4.70**
 平均値 -13.96 -14.89 **-11.39** -15.62 -12.59 **-10.84**

平均化

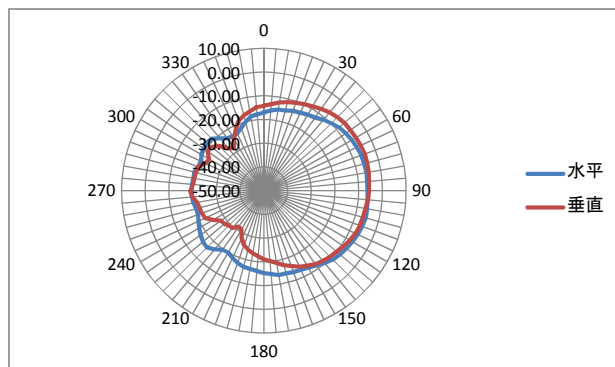


ピーク値 水平平均 垂直平均 平均化利得
 -4.70 -11.39 -10.84 -10.84 dBi

サブ2130MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-13.83	-7.23	-6.37	-18.16	-6.76	-6.45
	-13.27	-6.74	-5.87	-19.59	-5.98	-5.80
	-13.57	-6.11	-5.39	-18.96	-5.18	-5.00
	-13.49	-5.32	-4.70	-15.54	-4.45	-4.12
	-13.84	-4.54	-4.05	-11.71	-3.91	-3.24
30	-13.28	-3.58	-3.13	-9.32	-3.17	-2.23
	-12.92	-2.54	-2.16	-7.18	-2.58	-1.29
	-12.04	-1.67	-1.29	-6.18	-2.05	-0.63
	-10.72	-0.78	-0.36	-5.56	-1.48	-0.05
	-8.78	0.04	0.58	-4.63	-1.00	0.57
60	-7.44	0.71	1.33	-3.03	-0.52	1.41
	-6.56	1.29	1.95	-1.36	-0.13	2.30
	-6.02	1.70	2.38	-0.70	0.18	2.77
	-6.36	1.99	2.58	-0.67	0.48	2.96
	-6.19	2.19	2.78	-0.54	0.71	3.14
90	-6.70	2.21	2.73	0.45	0.92	3.70
	-7.69	1.98	2.42	1.08	1.11	4.10
	-8.17	1.63	2.06	1.03	1.21	4.13
	-7.20	1.08	1.68	1.17	1.28	4.23
	-6.00	0.26	1.18	1.87	1.28	4.59
120	-3.58	-0.78	1.05	2.21	1.23	4.76
	-0.61	-1.95	1.78	1.54	1.11	4.34
	0.76	-3.49	2.14	0.47	0.97	3.74
	1.28	-5.22	2.16	0.44	0.77	3.62
	0.97	-7.26	1.57	0.44	0.41	3.43
150	0.83	-9.53	1.21	-0.14	0.07	2.98
	0.77	-12.34	0.97	-1.61	-0.39	2.05
	-0.06	-16.39	0.04	-3.36	-0.93	1.03
	-2.13	-21.43	-2.07	-4.74	-1.58	0.13
	-4.93	-23.04	-4.86	-5.09	-2.47	-0.58
180	-8.09	-18.87	-7.75	-5.63	-3.29	-1.29
	-9.86	-16.10	-8.93	-6.32	-4.16	-2.10
	-9.87	-14.09	-8.47	-7.56	-5.22	-3.23
	-11.71	-12.76	-9.19	-9.22	-6.14	-4.40
	-13.97	-11.94	-9.83	-12.07	-7.26	-6.02
210	-16.57	-11.31	-10.18	-15.07	-8.42	-7.57
	-16.08	-11.15	-9.94	-19.46	-9.59	-9.17
	-12.94	-11.21	-8.98	-22.91	-11.04	-10.76
	-14.21	-11.46	-9.61	-31.85	-12.59	-12.54
	-15.81	-11.75	-10.31	-26.18	-14.29	-14.02
240	-18.62	-12.23	-11.33	-22.59	-15.94	-15.09
	-20.23	-12.83	-12.10	-20.66	-18.16	-16.22
	-15.21	-14.12	-11.62	-20.59	-20.53	-17.55
	-11.24	-14.92	-9.69	-18.78	-22.90	-17.36
	-9.47	-15.67	-8.54	-18.62	-24.98	-17.72
270	-8.81	-15.70	-8.00	-18.37	-27.43	-17.86
	-10.17	-14.66	-8.85	-19.12	-28.24	-18.62
	-13.06	-13.50	-10.26	-23.29	-27.81	-21.97
	-17.33	-12.71	-11.42	-33.42	-27.20	-26.27
	-15.82	-12.24	-10.66	-31.76	-25.04	-24.20
300	-13.98	-11.92	-9.82	-27.87	-22.47	-21.37
	-13.28	-12.16	-9.67	-16.35	-20.13	-14.83
	-11.70	-12.30	-8.98	-12.16	-18.43	-11.24
	-12.23	-12.76	-9.48	-12.40	-16.93	-11.09
	-15.60	-13.19	-11.22	-13.71	-16.13	-11.74
330	-18.61	-13.94	-12.66	-17.15	-15.82	-13.43
	-25.15	-15.19	-14.77	-16.30	-15.81	-13.04
	-22.12	-17.39	-16.13	-14.91	-16.28	-12.53
	-15.61	-20.77	-14.45	-11.74	-17.25	-10.66
	-13.82	-25.23	-13.51	-13.64	-18.52	-12.42
	-12.62	-22.70	-12.21	-14.44	-20.86	-13.55
	-12.35	-18.48	-11.40	-15.80	-24.84	-15.29
	-13.31	-15.08	-11.09	-17.76	-31.29	-17.57
	-15.32	-13.00	-11.00	-19.26	-31.86	-19.03
	-17.36	-11.69	-10.65	-18.50	-23.62	-17.33
	-21.17	-10.69	-10.32	-17.52	-19.59	-15.42
	-25.53	-10.01	-9.89	-17.97	-16.32	-14.06
	-26.48	-9.37	-9.29	-20.32	-14.12	-13.19
	-22.42	-9.13	-8.93	-23.38	-12.16	-11.84
	-19.80	-8.74	-8.42	-26.76	-10.63	-10.53
	-19.34	-8.44	-8.10	-25.49	-9.29	-9.19
	-18.43	-8.14	-7.75	-29.77	-8.13	-8.10

ピーク値	1.28	2.21	2.78	2.21	1.28	4.76
平均値	-7.14	-4.75	-2.78	-5.08	-3.90	-1.44

平均化

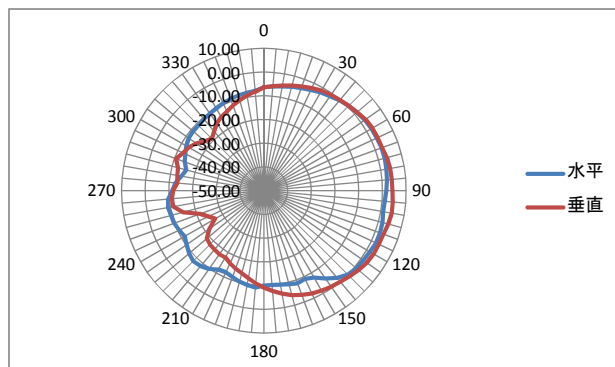


ピーク値 水平平均 垂直平均 平均化利得
4.76 -2.78 -1.44 -1.44 dBi

サブ2150MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-20.23	-6.72	-6.53	-22.61	-8.05	-7.90
	-19.62	-6.24	-6.04	-21.68	-6.95	-6.81
	-19.48	-5.58	-5.41	-18.35	-5.84	-5.60
	-18.40	-4.94	-4.75	-14.46	-4.93	-4.47
	-17.62	-4.25	-4.06	-11.25	-4.19	-3.41
30	-15.72	-3.39	-3.14	-9.10	-3.42	-2.38
	-14.63	-2.60	-2.34	-7.33	-2.83	-1.51
	-13.73	-1.89	-1.61	-6.24	-2.30	-0.83
	-13.03	-1.17	-0.90	-5.37	-1.81	-0.23
	-11.09	-0.47	-0.11	-4.69	-1.41	0.26
60	-8.97	0.06	0.57	-3.61	-1.05	0.87
	-7.19	0.58	1.25	-2.29	-0.78	1.54
	-6.30	0.96	1.71	-1.54	-0.53	2.00
	-6.78	1.28	1.91	-1.27	-0.30	2.25
	-6.85	1.44	2.04	-0.94	-0.17	2.47
90	-7.19	1.48	2.03	-0.01	-0.04	2.98
	-8.09	1.32	1.79	0.54	0.04	3.31
	-9.19	0.93	1.33	0.41	0.08	3.26
	-8.90	0.40	0.88	0.30	0.11	3.22
	-7.52	-0.37	0.39	1.03	0.06	3.58
120	-5.46	-1.35	0.08	1.48	-0.06	3.79
	-2.29	-2.44	0.65	0.84	-0.23	3.35
	-0.70	-3.87	1.01	-0.42	-0.45	2.58
	0.11	-5.62	1.14	-0.51	-0.74	2.39
	-0.10	-7.55	0.61	-0.38	-1.05	2.31
150	-0.16	-9.78	0.29	-0.78	-1.45	1.91
	-0.26	-12.27	0.00	-2.36	-1.94	0.86
	-1.02	-15.32	-0.87	-4.30	-2.49	-0.29
	-2.88	-16.84	-2.71	-5.69	-3.07	-1.17
	-5.22	-16.31	-4.89	-6.00	-3.91	-1.82
180	-7.96	-14.40	-7.07	-6.54	-4.71	-2.52
	-9.65	-12.70	-7.90	-7.54	-5.39	-3.32
	-9.72	-11.57	-7.54	-9.17	-6.25	-4.46
	-10.54	-10.61	-7.57	-11.20	-7.14	-5.70
	-11.13	-10.21	-7.64	-14.77	-8.15	-7.29
210	-12.55	-9.81	-7.96	-18.71	-9.21	-8.75
	-12.75	-9.69	-7.95	-27.53	-10.33	-10.25
	-14.23	-9.86	-8.51	-26.77	-11.68	-11.55
	-15.37	-10.16	-9.02	-28.45	-13.34	-13.21
	-17.09	-10.59	-9.71	-22.62	-15.11	-14.40
240	-20.31	-11.27	-10.75	-20.84	-17.00	-15.50
	-21.81	-12.21	-11.76	-19.14	-19.17	-16.15
	-16.90	-13.48	-11.85	-19.90	-21.10	-17.45
	-13.00	-14.61	-10.72	-18.54	-23.56	-17.35
	-12.23	-15.34	-10.50	-19.03	-25.33	-18.11
270	-11.52	-15.40	-10.03	-20.27	-26.21	-19.29
	-12.14	-14.53	-10.16	-22.50	-27.63	-21.34
	-13.35	-13.61	-10.47	-32.44	-27.54	-26.32
	-16.66	-12.77	-11.29	-27.07	-25.49	-23.20
	-14.78	-12.27	-10.33	-28.11	-23.14	-21.94
300	-11.42	-12.16	-8.76	-26.39	-20.79	-19.73
	-10.57	-12.38	-8.37	-16.09	-18.81	-14.23
	-12.33	-12.65	-9.47	-12.38	-16.86	-11.05
	-16.58	-13.05	-11.45	-13.46	-15.57	-11.38
	-25.98	-13.65	-13.40	-15.08	-14.78	-11.92
330	-36.01	-14.18	-14.15	-19.20	-14.59	-13.30
	-22.92	-15.73	-14.97	-19.24	-14.67	-13.37
	-14.13	-17.92	-12.61	-17.25	-14.96	-12.95
	-10.32	-21.25	-9.98	-12.50	-15.78	-10.83
	-10.10	-24.43	-9.95	-12.23	-16.81	-10.93
	-12.25	-20.91	-11.69	-12.53	-18.25	-11.50
	-14.78	-16.85	-12.68	-12.57	-20.24	-11.88
	-18.88	-14.00	-12.78	-12.87	-23.16	-12.49
	-28.73	-12.12	-12.03	-14.49	-27.17	-14.26
	-26.91	-10.71	-10.61	-16.99	-30.77	-16.81
	-22.85	-9.89	-9.67	-19.21	-28.34	-18.71
	-20.70	-9.11	-8.82	-19.66	-22.31	-17.77
	-18.44	-8.62	-8.19	-18.10	-18.70	-15.38
	-16.96	-8.18	-7.64	-16.38	-15.56	-12.94
	-16.32	-7.89	-7.31	-15.48	-13.28	-11.23
	-17.18	-7.57	-7.12	-14.71	-11.50	-9.80
	-17.45	-7.29	-6.89	-15.00	-9.84	-8.68

ピーク値	0.11	1.48	2.04	1.48	0.11	3.79
平均値	-8.13	-5.11	-3.35	-5.74	-4.92	-2.30

平均化

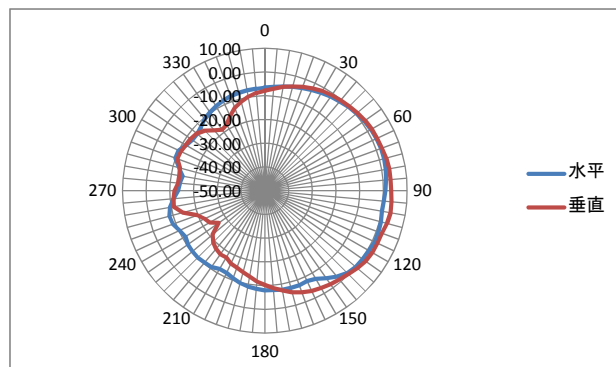


ピーク値	水平平均	垂直平均	平均化利得
3.79	-3.35	-2.30	-2.30 dBi

サブ2170MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-21.31	-7.09	-6.92	-26.22	-8.47	-8.40
	-21.75	-6.47	-6.35	-21.58	-7.40	-7.23
	-22.77	-5.72	-5.63	-18.19	-6.35	-6.07
	-21.94	-4.91	-4.82	-15.33	-5.34	-4.92
	-22.42	-4.24	-4.18	-13.51	-4.48	-3.97
30	-18.81	-3.28	-3.16	-10.74	-3.65	-2.88
	-16.07	-2.57	-2.38	-8.63	-2.90	-1.87
	-13.67	-1.91	-1.63	-6.73	-2.39	-1.03
	-11.98	-1.29	-0.94	-5.58	-1.86	-0.32
	-9.88	-0.68	-0.18	-4.69	-1.44	0.24
60	-8.03	-0.19	0.48	-3.81	-1.17	0.72
	-7.07	0.31	1.04	-2.29	-0.94	1.45
	-6.45	0.73	1.49	-1.46	-0.77	1.91
	-7.02	1.05	1.68	-1.18	-0.63	2.11
	-7.08	1.26	1.85	-1.06	-0.56	2.21
90	-7.89	1.34	1.83	0.10	-0.51	2.82
	-9.77	1.25	1.58	0.94	-0.42	3.32
	-13.31	0.90	1.06	1.02	-0.42	3.37
	-12.30	0.36	0.59	0.80	-0.43	3.24
	-8.85	-0.39	0.19	1.11	-0.44	3.41
120	-6.08	-1.38	-0.11	1.34	-0.51	3.52
	-2.64	-2.50	0.44	0.65	-0.61	3.07
	-1.06	-3.87	0.77	-0.81	-0.69	2.26
	-0.42	-5.63	0.72	-1.17	-0.89	1.98
	-0.88	-7.62	-0.04	-0.87	-1.16	2.00
150	-1.35	-10.04	-0.80	-1.39	-1.49	1.57
	-1.65	-13.02	-1.35	-2.87	-1.93	0.64
	-2.86	-17.88	-2.73	-5.04	-2.42	-0.52
	-5.27	-24.48	-5.22	-5.97	-2.98	-1.21
	-8.34	-25.45	-8.25	-6.21	-3.75	-1.80
180	-11.48	-19.33	-10.82	-6.82	-4.40	-2.43
	-13.70	-16.49	-11.86	-7.85	-5.05	-3.22
	-13.93	-14.39	-11.14	-9.32	-5.90	-4.27
	-16.97	-12.96	-11.50	-11.48	-6.66	-5.42
	-17.90	-12.10	-11.09	-14.17	-7.49	-6.64
210	-17.26	-11.48	-10.46	-16.96	-8.47	-7.89
	-14.90	-11.30	-9.72	-23.03	-9.49	-9.30
	-15.06	-11.18	-9.69	-17.33	-10.65	-9.80
	-15.82	-11.27	-9.97	-20.20	-12.27	-11.62
	-17.45	-11.64	-10.63	-23.71	-14.08	-13.63
240	-20.28	-12.04	-11.43	-25.01	-15.81	-15.31
	-24.76	-12.72	-12.46	-23.15	-18.14	-16.95
	-19.96	-13.78	-12.84	-21.42	-20.32	-17.82
	-14.15	-14.90	-11.50	-20.08	-22.71	-18.19
	-11.87	-15.97	-10.44	-19.11	-26.34	-18.36
270	-10.09	-16.42	-9.18	-20.23	-29.55	-19.75
	-11.82	-16.07	-10.43	-21.84	-35.50	-21.66
	-15.41	-14.97	-12.17	-31.44	-45.02	-31.26
	-20.01	-14.22	-13.20	-23.78	-32.65	-23.25
	-16.59	-13.53	-11.79	-27.52	-28.28	-24.88
300	-12.57	-13.42	-9.96	-24.19	-23.20	-20.66
	-11.49	-13.20	-9.25	-15.15	-20.36	-14.01
	-12.67	-13.05	-9.85	-13.20	-18.52	-12.08
	-17.41	-12.97	-11.63	-16.61	-16.59	-13.59
	-27.07	-13.08	-12.91	-24.25	-15.77	-15.20
330	-29.85	-13.52	-13.42	-30.35	-15.17	-15.04
	-20.02	-14.47	-13.40	-21.99	-15.01	-14.22
	-13.37	-16.55	-11.67	-13.16	-15.30	-11.09
	-11.46	-20.42	-10.94	-9.54	-15.89	-8.64
	-12.49	-29.68	-12.40	-10.08	-16.98	-9.27
	-15.61	-29.09	-15.42	-10.51	-18.52	-9.87
	-19.21	-19.92	-16.54	-11.30	-20.98	-10.85
	-23.59	-15.71	-15.06	-12.81	-24.83	-12.55
	-26.65	-13.41	-13.21	-16.59	-30.84	-16.43
	-24.83	-11.73	-11.52	-20.75	-33.19	-20.51
	-25.04	-10.76	-10.60	-19.73	-25.63	-18.74
	-23.45	-9.91	-9.72	-21.27	-20.87	-18.06
	-22.76	-9.39	-9.20	-20.06	-17.74	-15.74
	-22.35	-8.98	-8.79	-20.17	-15.31	-14.08
	-22.73	-8.66	-8.50	-18.88	-13.40	-12.32
	-23.16	-8.16	-8.03	-18.46	-11.85	-10.99
	-31.36	-7.85	-7.83	-18.04	-10.45	-9.75

ピーク値 -0.42 1.34 1.85 1.34 -0.42 3.52
 平均値 -9.25 -5.34 -3.86 -5.82 -5.12 -2.45

平均化

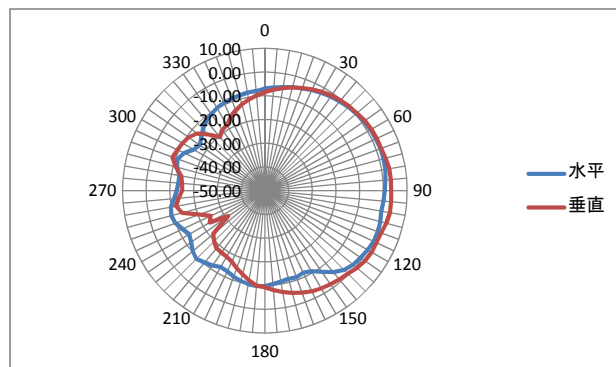

ピーク値 水平平均 垂直平均 平均化利得
 3.52 -3.86 -2.45 -2.45 dBi