
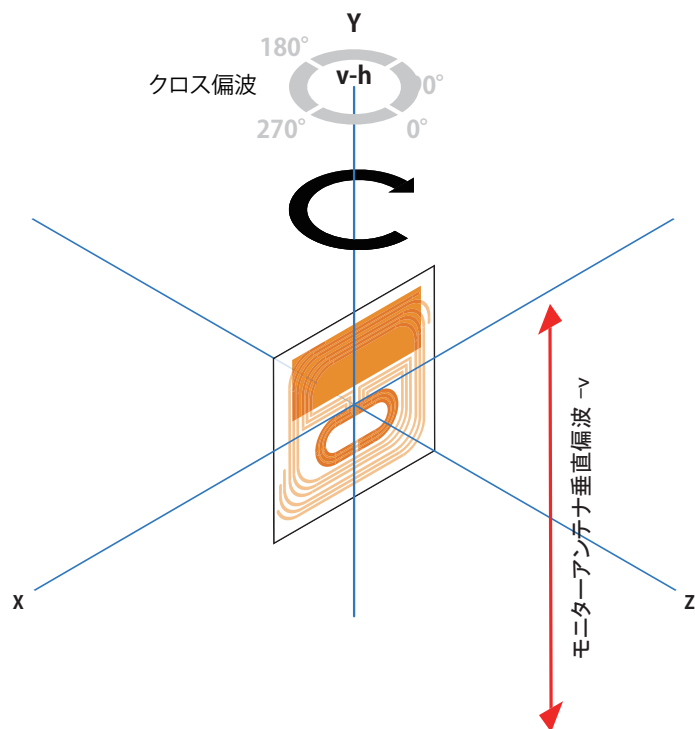
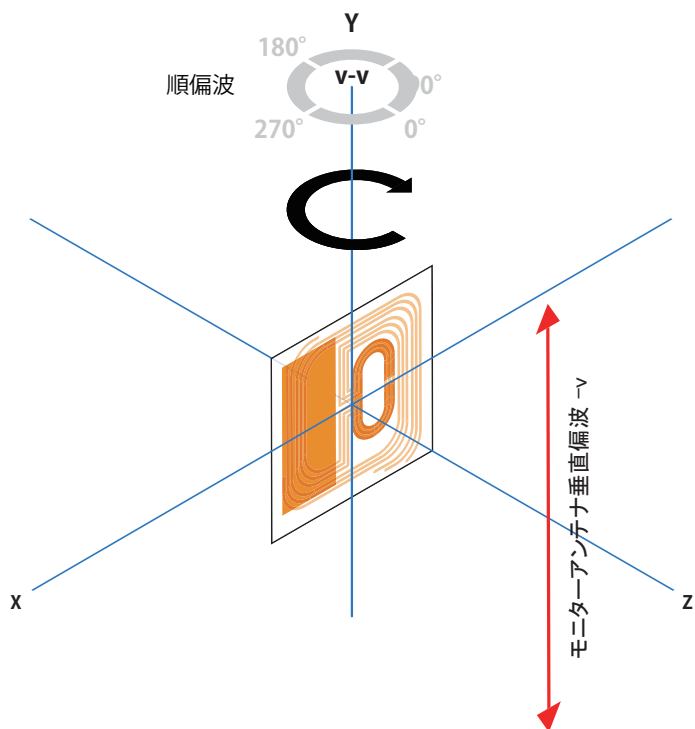
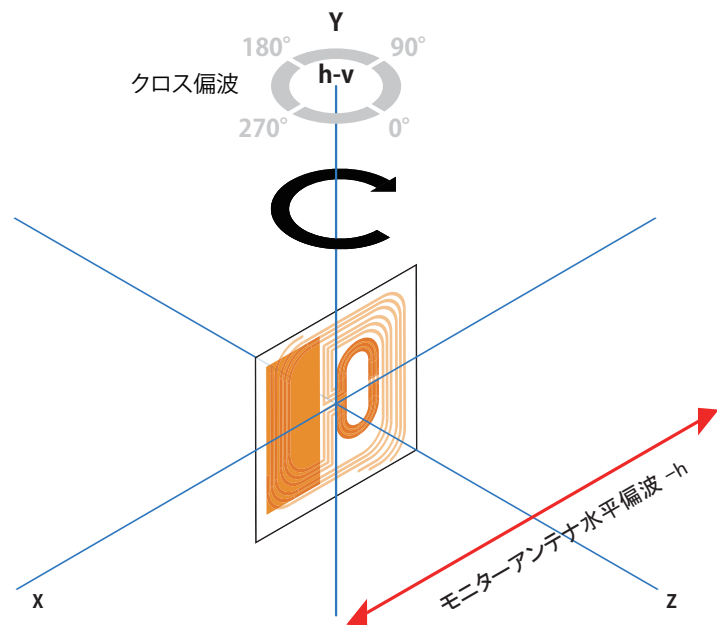


h-h、v-v の利得測定方法

(h-h、v-v 共に順偏波とクロス偏波を合成して h-h、v-v としています。)

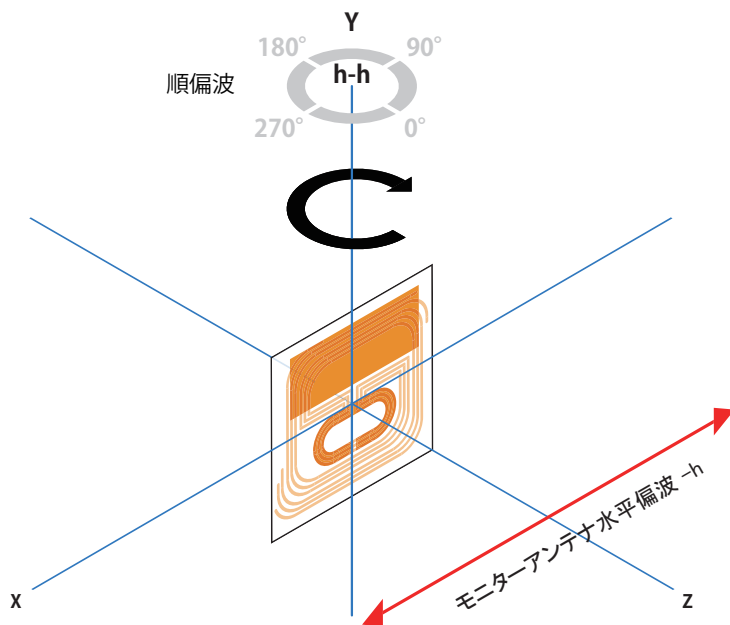


メイン815MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-6.98	-9.52	-5.06	-13.92	-1.72	-1.47
	-6.76	-9.57	-4.93	-14.43	-1.69	-1.47
	-7.05	-9.51	-5.10	-13.55	-1.70	-1.42
	-7.46	-9.44	-5.33	-13.66	-1.73	-1.46
	-7.97	-9.43	-5.63	-12.81	-1.74	-1.41
30	-8.63	-9.45	-6.01	-12.98	-1.77	-1.45
	-9.54	-9.41	-6.46	-12.49	-1.83	-1.48
	-10.37	-9.41	-6.85	-12.59	-1.89	-1.54
	-11.44	-9.42	-7.30	-12.13	-1.96	-1.56
	-12.50	-9.39	-7.66	-12.25	-2.02	-1.63
60	-13.53	-9.46	-8.02	-12.08	-2.10	-1.68
	-14.27	-9.44	-8.20	-12.24	-2.20	-1.79
	-14.10	-9.52	-8.22	-12.49	-2.32	-1.92
	-13.43	-9.50	-8.02	-12.99	-2.41	-2.05
	-11.64	-9.50	-7.43	-13.65	-2.53	-2.20
90	-10.13	-9.55	-6.82	-15.07	-2.62	-2.38
	-8.62	-9.53	-6.04	-19.55	-2.78	-2.69
	-7.61	-9.58	-5.47	-23.01	-2.91	-2.87
	-6.93	-9.60	-5.05	-36.99	-3.01	-3.01
	-6.88	-9.65	-5.04	-27.66	-3.17	-3.15
120	-7.58	-9.76	-5.52	-21.92	-3.32	-3.26
	-9.20	-9.77	-6.46	-20.16	-3.46	-3.37
	-11.45	-9.72	-7.49	-17.81	-3.57	-3.41
	-12.92	-9.71	-8.02	-16.73	-3.71	-3.49
	-11.23	-9.72	-7.39	-16.28	-3.82	-3.58
150	-8.05	-9.70	-5.79	-16.05	-3.94	-3.68
	-5.37	-9.65	-3.99	-17.63	-4.07	-3.88
	-3.60	-9.66	-2.64	-18.01	-4.21	-4.04
	-2.45	-9.61	-1.69	-21.49	-4.31	-4.22
	-1.82	-9.55	-1.14	-21.57	-4.42	-4.33
180	-1.69	-9.46	-1.02	-25.28	-4.55	-4.52
	-1.98	-9.51	-1.27	-20.98	-4.69	-4.59
	-2.75	-9.42	-1.90	-17.78	-4.74	-4.53
	-3.99	-9.36	-2.89	-15.19	-4.84	-4.46
	-6.15	-9.29	-4.43	-12.23	-4.92	-4.17
210	-9.13	-9.29	-6.20	-10.90	-4.97	-3.99
	-14.16	-9.21	-8.01	-9.03	-5.01	-3.56
	-18.58	-9.09	-8.62	-10.69	-5.08	-4.02
	-12.89	-9.12	-7.59	-11.40	-5.06	-4.15
	-8.61	-9.07	-5.82	-12.57	-5.10	-4.38
240	-6.91	-9.04	-4.84	-12.64	-5.09	-4.39
	-5.57	-9.04	-3.95	-12.61	-5.06	-4.35
	-5.08	-9.05	-3.61	-11.88	-5.03	-4.22
	-5.01	-9.03	-3.56	-11.54	-4.98	-4.11
	-5.38	-9.08	-3.83	-11.41	-4.94	-4.06
270	-6.61	-9.08	-4.66	-12.08	-4.85	-4.10
	-8.15	-9.22	-5.64	-12.83	-4.76	-4.13
	-11.12	-9.26	-7.08	-14.32	-4.68	-4.24
	-15.06	-9.32	-8.29	-16.08	-4.54	-4.24
	-21.67	-9.41	-9.16	-18.67	-4.43	-4.27
300	-19.73	-9.50	-9.10	-20.68	-4.29	-4.19
	-14.83	-9.74	-8.57	-19.73	-4.15	-4.03
	-11.38	-9.81	-7.52	-17.38	-4.06	-3.86
	-10.62	-9.94	-7.26	-14.35	-3.90	-3.52
	-10.04	-10.01	-7.01	-13.15	-3.78	-3.30
330	-11.11	-10.16	-7.60	-12.23	-3.66	-3.09
	-11.18	-10.42	-7.78	-12.29	-3.54	-2.99
	-12.05	-10.67	-8.30	-12.70	-3.35	-2.87
	-11.97	-10.68	-8.26	-13.81	-3.20	-2.84
	-12.21	-10.72	-8.39	-15.57	-3.03	-2.79
	-12.17	-10.83	-8.44	-17.72	-2.88	-2.74
	-12.69	-10.90	-8.70	-21.59	-2.76	-2.70
	-13.12	-11.03	-8.94	-24.56	-2.62	-2.60
	-14.51	-11.00	-9.40	-28.09	-2.47	-2.46
	-15.13	-10.92	-9.52	-26.72	-2.39	-2.37
	-17.43	-10.96	-10.07	-20.19	-2.24	-2.17
	-18.47	-10.96	-10.25	-18.51	-2.15	-2.05
	-22.32	-10.94	-10.63	-15.89	-2.08	-1.91
	-23.65	-10.88	-10.66	-15.49	-1.97	-1.78
	-30.74	-10.98	-10.94	-14.35	-1.95	-1.70
	-28.99	-10.87	-10.81	-14.08	-1.90	-1.64
	-43.83	-10.77	-10.77	-13.02	-1.85	-1.53

ピーク値	-1.69	-9.03	-1.02	-9.03	-1.69	-1.41
平均値	-8.27	-9.73	-5.93	-14.41	-3.24	-2.92

平均化

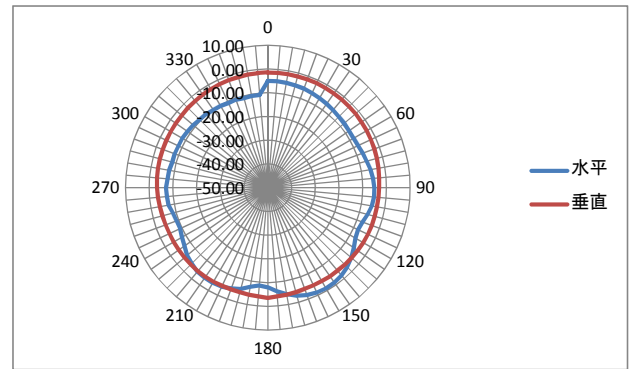


ピーク値	水平平均	垂直平均	平均化利得
-1.02	-5.93	-2.92	-2.92 dBi

メイン830MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-8.54	-13.53	-7.35	-9.22	-1.52	-0.83
	-8.16	-13.70	-7.09	-10.18	-1.49	-0.94
	-8.32	-13.82	-7.24	-10.94	-1.47	-1.00
	-8.17	-13.89	-7.14	-12.01	-1.46	-1.09
	-8.47	-13.72	-7.33	-12.26	-1.44	-1.09
	-8.09	-13.54	-7.00	-12.79	-1.47	-1.16
30	-8.81	-13.36	-7.50	-12.21	-1.50	-1.15
	-8.64	-13.13	-7.31	-12.34	-1.53	-1.19
	-10.13	-12.86	-8.27	-11.82	-1.59	-1.20
	-10.28	-12.64	-8.29	-11.68	-1.66	-1.25
	-12.53	-12.43	-9.47	-11.53	-1.71	-1.28
	-12.47	-12.40	-9.43	-11.60	-1.80	-1.36
60	-13.73	-12.24	-9.91	-12.01	-1.90	-1.50
	-12.60	-12.15	-9.36	-12.60	-2.00	-1.64
	-11.47	-12.16	-8.79	-14.32	-2.12	-1.87
	-9.82	-12.15	-7.82	-16.29	-2.25	-2.08
	-8.47	-12.28	-6.96	-20.11	-2.37	-2.30
	-7.34	-12.42	-6.17	-21.56	-2.49	-2.43
90	-6.72	-12.60	-5.72	-22.92	-2.61	-2.57
	-6.55	-12.84	-5.63	-20.32	-2.79	-2.71
	-7.35	-13.12	-6.33	-21.63	-2.94	-2.88
	-8.55	-13.27	-7.29	-20.96	-3.05	-2.98
	-10.48	-13.77	-8.81	-19.89	-3.22	-3.13
	-11.03	-14.27	-9.34	-22.21	-3.35	-3.29
120	-9.14	-14.83	-8.10	-17.95	-3.46	-3.31
	-6.84	-15.49	-6.28	-21.46	-3.58	-3.51
	-4.53	-16.15	-4.24	-17.27	-3.68	-3.49
	-3.09	-16.93	-2.92	-20.62	-3.76	-3.67
	-1.95	-17.70	-1.84	-18.14	-3.90	-3.74
	-1.52	-18.32	-1.43	-22.50	-3.99	-3.93
150	-1.44	-18.95	-1.36	-23.47	-4.10	-4.05
	-2.06	-19.49	-1.98	-33.40	-4.15	-4.14
	-3.02	-19.71	-2.93	-29.66	-4.19	-4.18
	-4.73	-19.46	-4.58	-20.35	-4.27	-4.16
	-7.17	-18.88	-6.89	-16.24	-4.30	-4.03
	-11.22	-18.35	-10.45	-13.64	-4.32	-3.84
180	-17.03	-17.47	-14.23	-11.21	-4.34	-3.53
	-16.78	-16.62	-13.69	-12.76	-4.35	-3.76
	-11.45	-15.69	-10.06	-12.99	-4.36	-3.80
	-7.65	-14.82	-6.89	-13.40	-4.34	-3.83
	-5.81	-13.98	-5.19	-12.62	-4.32	-3.72
	-4.57	-13.32	-4.02	-12.37	-4.24	-3.61
210	-4.32	-12.65	-3.73	-11.49	-4.23	-3.48
	-4.48	-12.06	-3.78	-11.69	-4.17	-3.46
	-5.63	-11.54	-4.64	-11.67	-4.09	-3.39
	-7.29	-11.19	-5.81	-13.33	-4.04	-3.55
	-10.13	-10.79	-7.44	-13.96	-3.94	-3.53
	-13.61	-10.34	-8.66	-17.44	-3.84	-3.65
240	-17.74	-10.09	-9.40	-18.39	-3.76	-3.61
	-16.16	-9.83	-8.92	-23.14	-3.66	-3.61
	-12.96	-9.62	-7.97	-22.63	-3.54	-3.49
	-10.21	-9.45	-6.80	-22.63	-3.44	-3.39
	-9.17	-9.32	-6.24	-19.23	-3.37	-3.26
	-8.91	-9.28	-6.08	-15.40	-3.21	-2.96
270	-9.65	-9.22	-6.42	-13.98	-3.12	-2.78
	-10.96	-9.25	-7.01	-12.16	-3.01	-2.51
	-12.13	-9.24	-7.43	-11.81	-2.95	-2.42
	-12.96	-9.44	-7.84	-10.96	-2.80	-2.18
	-12.70	-9.60	-7.87	-10.86	-2.67	-2.05
	-13.81	-9.79	-8.34	-10.97	-2.53	-1.95
300	-13.55	-9.94	-8.37	-10.55	-2.42	-1.80
	-15.61	-10.21	-9.11	-11.89	-2.35	-1.89
	-15.01	-10.51	-9.19	-12.13	-2.21	-1.79
	-17.10	-10.90	-9.96	-14.85	-2.11	-1.88
	-15.96	-11.25	-9.98	-15.21	-2.01	-1.81
	-18.08	-11.68	-10.79	-16.51	-1.91	-1.76
330	-17.42	-12.01	-10.91	-15.70	-1.83	-1.65
	-21.72	-12.39	-11.91	-13.88	-1.73	-1.47
	-22.26	-12.67	-12.21	-13.24	-1.65	-1.36
	-32.70	-12.98	-12.94	-11.82	-1.62	-1.22
	-32.46	-13.23	-13.18	-12.01	-1.56	-1.18
	-32.25	-13.39	-13.33	-11.54	-1.52	-1.10

ピーク値	-1.44	-9.22	-1.36	-9.22	-1.44	-0.83
平均値	-8.08	-12.32	-6.69	-13.80	-2.78	-2.45

平均化

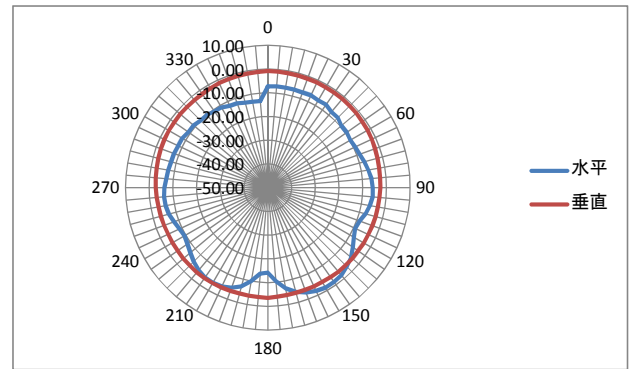


ピーク値	水平平均	垂直平均	平均化利得
-0.83	-6.69	-2.45	-2.45 dBi

メイン845MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-8.54	-10.61	-6.44	-7.63	-1.95	-0.91
	-7.92	-10.38	-5.97	-7.69	-1.94	-0.91
	-7.49	-10.15	-5.61	-8.81	-1.96	-1.14
	-7.10	-9.86	-5.25	-9.23	-1.93	-1.19
	-6.68	-9.59	-4.88	-11.07	-1.96	-1.46
30	-6.46	-9.29	-4.64	-11.64	-1.99	-1.54
	-6.37	-9.00	-4.48	-14.69	-2.04	-1.81
	-6.37	-8.71	-4.38	-15.89	-2.10	-1.92
	-6.56	-8.52	-4.42	-20.08	-2.15	-2.08
	-6.82	-8.23	-4.46	-19.85	-2.23	-2.15
60	-7.34	-8.00	-4.65	-16.34	-2.35	-2.18
	-7.94	-7.89	-4.91	-14.47	-2.44	-2.18
	-8.87	-7.76	-5.27	-11.07	-2.58	-2.00
	-9.40	-7.68	-5.45	-10.80	-2.71	-2.08
	-9.75	-7.66	-5.57	-9.36	-2.85	-1.97
90	-9.16	-7.63	-5.32	-10.00	-3.00	-2.21
	-8.31	-7.68	-4.97	-10.73	-3.14	-2.45
	-7.72	-7.80	-4.75	-12.33	-3.34	-2.83
	-7.16	-7.91	-4.51	-14.74	-3.47	-3.16
	-7.33	-8.09	-4.69	-16.87	-3.65	-3.45
120	-7.68	-8.34	-4.98	-21.07	-3.83	-3.74
	-8.70	-8.57	-5.62	-22.40	-3.97	-3.91
	-10.49	-8.90	-6.62	-18.86	-4.16	-4.02
	-11.47	-9.28	-7.23	-17.07	-4.27	-4.05
	-10.50	-9.72	-7.08	-13.79	-4.45	-3.97
150	-8.13	-10.21	-6.03	-13.66	-4.60	-4.09
	-5.75	-10.72	-4.55	-12.16	-4.72	-4.00
	-4.22	-11.35	-3.45	-11.71	-4.82	-4.01
	-2.88	-12.03	-2.38	-10.84	-4.95	-3.95
	-2.28	-12.75	-1.91	-10.45	-5.00	-3.91
180	-1.93	-13.51	-1.63	-10.62	-5.08	-4.01
	-2.27	-14.46	-2.01	-11.01	-5.16	-4.16
	-2.97	-15.32	-2.73	-11.77	-5.19	-4.33
	-4.42	-16.19	-4.14	-12.15	-5.20	-4.40
	-6.45	-16.89	-6.07	-12.63	-5.22	-4.49
210	-9.77	-17.45	-9.08	-12.49	-5.16	-4.42
	-15.17	-17.69	-13.24	-11.89	-5.16	-4.32
	-17.18	-17.43	-14.29	-16.98	-5.14	-4.86
	-11.67	-16.89	-10.53	-19.55	-5.07	-4.92
	-8.34	-16.15	-7.67	-19.30	-5.03	-4.87
240	-6.29	-15.39	-5.78	-20.73	-4.90	-4.79
	-5.37	-14.69	-4.89	-19.66	-4.83	-4.69
	-5.03	-13.94	-4.50	-19.14	-4.75	-4.60
	-5.46	-13.31	-4.80	-20.02	-4.64	-4.51
	-6.37	-12.66	-5.45	-18.08	-4.55	-4.36
270	-7.96	-11.99	-6.51	-19.74	-4.48	-4.35
	-9.98	-11.61	-7.71	-15.98	-4.32	-4.03
	-13.10	-11.23	-9.06	-18.21	-4.25	-4.08
	-16.79	-10.86	-9.87	-15.17	-4.14	-3.81
	-18.57	-10.53	-9.90	-19.73	-4.03	-3.91
300	-16.11	-10.27	-9.26	-18.70	-3.92	-3.78
	-13.97	-10.11	-8.62	-27.03	-3.82	-3.80
	-12.50	-9.92	-8.01	-23.78	-3.75	-3.71
	-12.33	-9.88	-7.92	-25.22	-3.62	-3.59
	-11.54	-9.85	-7.60	-20.98	-3.51	-3.43
330	-12.08	-9.95	-7.88	-16.50	-3.44	-3.23
	-12.19	-9.97	-7.93	-13.80	-3.38	-3.01
	-13.83	-10.13	-8.59	-11.30	-3.24	-2.61
	-13.84	-10.26	-8.68	-10.03	-3.13	-2.32
	-14.49	-10.41	-8.98	-9.70	-3.06	-2.20
	-12.69	-10.75	-8.60	-9.34	-2.94	-2.04
	-12.98	-10.93	-8.83	-9.95	-2.90	-2.12
	-11.84	-11.18	-8.49	-9.42	-2.80	-1.94
	-14.03	-11.39	-9.50	-10.01	-2.71	-1.96
	-14.09	-11.62	-9.67	-9.12	-2.66	-1.78
	-19.18	-11.85	-11.12	-9.86	-2.59	-1.85
	-20.99	-11.97	-11.45	-9.11	-2.51	-1.65
	-26.59	-12.00	-11.85	-10.29	-2.43	-1.77
	-25.40	-11.87	-11.68	-9.77	-2.40	-1.67
	-18.63	-11.73	-10.93	-11.17	-2.38	-1.84
	-17.96	-11.51	-10.62	-10.65	-2.33	-1.73
	-15.01	-11.25	-9.72	-11.35	-2.32	-1.81

ピーク値	-1.93	-7.63	-1.63	-7.63	-1.93	-0.91
平均値	-8.08	-10.45	-6.10	-12.41	-3.43	-2.91

平均化

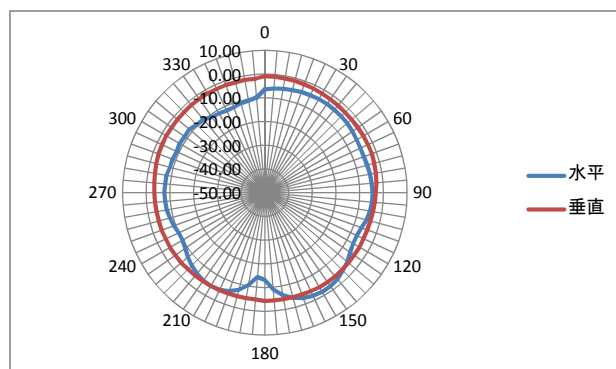


ピーク値	水平平均	垂直平均	平均化利得
-0.91	-6.10	-2.91	-2.91 dBi

メイン860MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-7.73	-9.47	-5.51	-6.51	-0.87	0.18
	-7.15	-9.17	-5.03	-6.56	-0.87	0.17
	-6.68	-8.93	-4.65	-7.10	-0.86	0.07
	-6.31	-8.63	-4.30	-7.29	-0.89	0.01
	-5.76	-8.33	-3.84	-8.45	-0.91	-0.20
30	-5.36	-8.02	-3.48	-9.28	-0.92	-0.33
	-5.00	-7.73	-3.14	-12.06	-0.98	-0.66
	-5.00	-7.52	-3.07	-14.45	-1.03	-0.83
	-4.92	-7.28	-2.93	-23.14	-1.09	-1.06
	-5.39	-7.02	-3.12	-38.10	-1.15	-1.15
60	-5.69	-6.84	-3.22	-20.59	-1.23	-1.18
	-6.74	-6.74	-3.73	-18.79	-1.30	-1.22
	-7.86	-6.61	-4.17	-14.22	-1.40	-1.18
	-9.60	-6.55	-4.80	-13.46	-1.49	-1.22
	-10.91	-6.51	-5.17	-10.19	-1.59	-1.03
90	-10.81	-6.52	-5.14	-9.22	-1.68	-0.98
	-9.44	-6.58	-4.77	-8.55	-1.80	-0.97
	-8.13	-6.64	-4.31	-9.72	-1.89	-1.23
	-7.11	-6.74	-3.91	-12.88	-1.97	-1.63
	-6.91	-6.88	-3.88	-18.31	-2.09	-1.99
120	-7.30	-7.08	-4.18	-37.76	-2.19	-2.18
	-8.34	-7.28	-4.76	-29.12	-2.26	-2.25
	-10.42	-7.45	-5.68	-20.78	-2.41	-2.35
	-12.41	-7.77	-6.49	-18.45	-2.47	-2.36
	-11.88	-8.10	-6.58	-13.61	-2.57	-2.24
150	-8.19	-8.49	-5.33	-12.14	-2.66	-2.19
	-5.24	-8.89	-3.68	-11.32	-2.74	-2.17
	-3.22	-9.32	-2.27	-11.63	-2.81	-2.27
	-1.83	-9.79	-1.18	-11.82	-2.90	-2.38
	-1.16	-10.33	-0.66	-11.90	-2.94	-2.42
180	-0.86	-10.85	-0.44	-11.45	-3.00	-2.42
	-1.12	-11.46	-0.73	-11.80	-3.06	-2.52
	-1.88	-12.02	-1.48	-12.30	-3.07	-2.58
	-3.13	-12.67	-2.67	-13.62	-3.11	-2.74
	-5.17	-13.20	-4.54	-14.89	-3.13	-2.85
210	-8.08	-13.74	-7.04	-16.17	-3.13	-2.92
	-12.98	-14.26	-10.56	-16.09	-3.11	-2.89
	-13.59	-14.71	-11.10	-18.79	-3.10	-2.98
	-9.12	-14.97	-8.11	-22.25	-3.09	-3.04
	-6.06	-15.09	-5.55	-24.75	-3.06	-3.03
240	-4.44	-14.98	-4.08	-36.85	-3.04	-3.04
	-3.40	-14.68	-3.09	-31.90	-3.02	-3.02
	-3.09	-14.45	-2.78	-33.12	-2.96	-2.96
	-3.30	-14.09	-2.95	-34.17	-2.90	-2.89
	-4.12	-13.68	-3.66	-20.49	-2.82	-2.75
270	-5.58	-13.24	-4.89	-20.04	-2.80	-2.71
	-7.77	-12.89	-6.61	-15.07	-2.71	-2.47
	-11.33	-12.60	-8.91	-18.52	-2.64	-2.53
	-16.28	-12.21	-10.77	-16.55	-2.58	-2.41
	-18.20	-11.90	-10.98	-23.74	-2.51	-2.48
300	-15.01	-11.70	-10.04	-17.80	-2.46	-2.33
	-11.95	-11.43	-8.67	-22.43	-2.35	-2.31
	-10.17	-11.16	-7.62	-20.48	-2.31	-2.24
	-9.47	-11.05	-7.18	-30.16	-2.21	-2.20
	-9.22	-10.93	-6.98	-23.71	-2.17	-2.13
330	-10.62	-10.91	-7.75	-18.08	-2.11	-2.00
	-11.75	-11.03	-8.36	-16.30	-2.02	-1.86
	-14.40	-10.94	-9.32	-14.92	-1.92	-1.71
	-13.70	-10.91	-9.07	-12.51	-1.84	-1.48
	-13.32	-11.09	-9.05	-11.02	-1.76	-1.27
	-12.25	-11.21	-8.68	-9.30	-1.69	-0.99
	-12.56	-11.17	-8.80	-9.12	-1.69	-0.97
	-12.83	-11.37	-9.02	-8.48	-1.59	-0.78
	-15.58	-11.47	-10.04	-9.89	-1.52	-0.93
	-17.37	-11.58	-10.56	-9.71	-1.49	-0.88
	-24.96	-11.72	-11.52	-11.91	-1.45	-1.07
	-23.41	-11.62	-11.34	-11.16	-1.38	-0.95
	-17.59	-11.60	-10.62	-13.32	-1.30	-1.04
	-15.39	-11.40	-9.94	-11.92	-1.26	-0.90
	-12.09	-11.15	-8.59	-13.48	-1.26	-1.01
	-11.34	-10.86	-8.08	-11.94	-1.25	-0.89
	-9.69	-10.48	-7.05	-13.10	-1.21	-0.94

ピーク値	-0.86	-6.51	-0.44	-6.51	-0.86	0.18
平均値	-6.91	-9.66	-5.06	-12.66	-2.01	-1.65

平均化

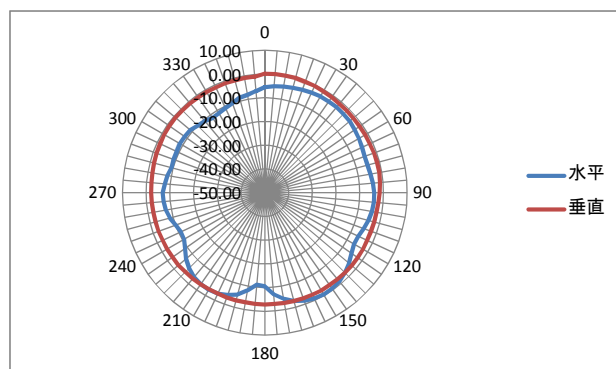


ピーク値	水平平均	垂直平均	平均化利得
0.18	-5.06	-1.65	-1.65 dBi

メイン875MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-9.02	-10.79	-6.81	-6.83	-1.35	-0.27
	-8.96	-10.47	-6.64	-6.79	-1.34	-0.25
	-8.46	-10.03	-6.16	-7.35	-1.35	-0.37
	-7.98	-9.68	-5.73	-7.90	-1.34	-0.47
	-7.03	-9.29	-5.01	-9.44	-1.33	-0.70
30	-6.35	-8.87	-4.42	-10.58	-1.34	-0.85
	-5.40	-8.52	-3.67	-13.34	-1.33	-1.07
	-4.77	-8.21	-3.15	-15.21	-1.35	-1.17
	-4.12	-7.96	-2.62	-19.99	-1.37	-1.31
	-3.96	-7.69	-2.43	-24.01	-1.40	-1.37
60	-4.08	-7.41	-2.42	-26.54	-1.43	-1.42
	-4.79	-7.24	-2.83	-19.57	-1.49	-1.42
	-5.94	-7.10	-3.47	-13.31	-1.51	-1.23
	-7.76	-6.97	-4.33	-12.44	-1.59	-1.25
	-10.37	-6.85	-5.25	-10.49	-1.62	-1.09
90	-13.47	-6.81	-5.96	-11.36	-1.67	-1.23
	-13.48	-6.79	-5.94	-12.17	-1.72	-1.34
	-9.93	-6.79	-5.07	-13.21	-1.79	-1.49
	-6.90	-6.80	-3.84	-15.21	-1.84	-1.65
	-5.00	-6.88	-2.83	-16.48	-1.89	-1.74
120	-4.39	-6.96	-2.48	-22.62	-1.96	-1.92
	-4.73	-7.08	-2.74	-27.69	-2.02	-2.01
	-6.43	-7.25	-3.81	-24.85	-2.08	-2.06
	-8.97	-7.47	-5.14	-22.33	-2.12	-2.08
	-11.38	-7.73	-6.17	-15.76	-2.18	-2.00
150	-9.48	-8.02	-5.68	-12.98	-2.22	-1.87
	-5.99	-8.33	-3.99	-10.41	-2.28	-1.65
	-3.51	-8.70	-2.36	-10.10	-2.32	-1.65
	-1.95	-9.09	-1.18	-10.11	-2.35	-1.67
	-1.24	-9.60	-0.65	-11.38	-2.41	-1.89
180	-1.07	-10.13	-0.56	-12.55	-2.42	-2.01
	-1.44	-10.71	-0.95	-14.28	-2.43	-2.15
	-2.13	-11.30	-1.63	-15.50	-2.47	-2.26
	-3.21	-12.00	-2.67	-17.43	-2.48	-2.35
	-4.68	-12.76	-4.05	-18.95	-2.50	-2.40
210	-6.55	-13.60	-5.77	-21.36	-2.49	-2.43
	-9.34	-14.56	-8.20	-21.70	-2.51	-2.46
	-13.21	-15.57	-11.22	-21.72	-2.52	-2.47
	-9.31	-16.76	-8.59	-16.46	-2.49	-2.32
	-6.13	-18.02	-5.86	-19.02	-2.51	-2.41
240	-4.46	-19.37	-4.32	-20.38	-2.48	-2.41
	-3.12	-20.99	-3.05	-26.92	-2.48	-2.46
	-2.49	-22.73	-2.45	-29.07	-2.45	-2.44
	-2.45	-24.41	-2.42	-27.16	-2.44	-2.42
	-2.94	-26.05	-2.92	-25.20	-2.41	-2.39
270	-4.24	-26.98	-4.21	-17.24	-2.41	-2.27
	-6.33	-27.39	-6.29	-19.35	-2.35	-2.27
	-9.57	-26.40	-9.48	-16.13	-2.31	-2.13
	-14.45	-25.59	-14.12	-20.77	-2.29	-2.23
	-17.92	-24.27	-17.01	-16.81	-2.25	-2.10
300	-15.36	-23.38	-14.73	-20.77	-2.18	-2.12
	-11.87	-22.46	-11.51	-16.79	-2.13	-1.98
	-10.26	-21.72	-9.96	-23.86	-2.10	-2.07
	-9.97	-20.99	-9.64	-20.59	-2.03	-1.97
	-10.65	-20.42	-10.21	-29.30	-1.97	-1.97
330	-12.18	-19.98	-11.51	-29.16	-1.93	-1.92
	-12.85	-19.58	-12.02	-19.88	-1.88	-1.81
	-14.15	-19.15	-12.96	-13.99	-1.81	-1.55
	-14.22	-18.70	-12.90	-11.02	-1.73	-1.24
	-17.09	-18.29	-14.64	-9.24	-1.67	-0.97
	-18.90	-17.84	-15.33	-9.88	-1.58	-0.98
	-20.46	-17.45	-15.69	-9.91	-1.53	-0.94
	-19.85	-16.84	-15.08	-11.58	-1.44	-1.03
	-17.80	-16.38	-14.02	-10.95	-1.38	-0.92
	-17.09	-15.86	-13.42	-12.33	-1.32	-0.99
	-16.30	-15.20	-12.71	-11.33	-1.26	-0.85
	-15.34	-14.57	-11.93	-13.75	-1.23	-0.99
	-13.34	-13.98	-10.64	-13.73	-1.17	-0.93
	-12.63	-13.32	-9.95	-17.81	-1.14	-1.04
	-10.96	-12.77	-8.76	-18.47	-1.11	-1.03
	-10.76	-12.20	-8.41	-23.83	-1.09	-1.07
	-9.80	-11.56	-7.58	-21.34	-1.07	-1.03

ピーク値	-1.07	-6.79	-0.56	-6.79	-1.07	-0.25
平均値	-6.62	-10.82	-5.22	-13.57	-1.85	-1.57

平均化

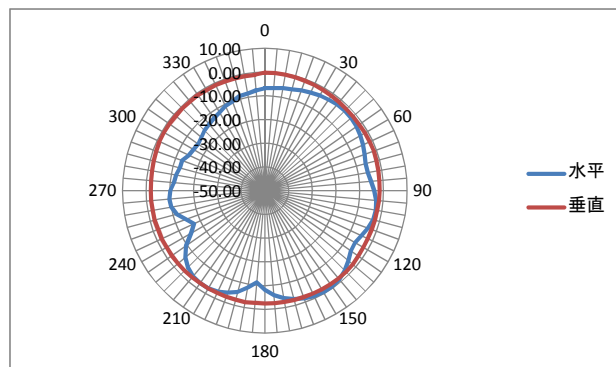


ピーク値	水平平均	垂直平均	平均化利得
-0.25	-5.22	-1.57	-1.57 dBi

メイン890MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-11.98	-12.58	-9.26	-7.00	-3.42	-1.84
	-12.25	-11.87	-9.04	-7.19	-3.39	-1.88
	-12.22	-11.36	-8.76	-7.70	-3.39	-2.02
	-11.80	-10.80	-8.26	-7.89	-3.38	-2.06
	-11.13	-10.24	-7.65	-8.31	-3.35	-2.15
30	-10.10	-9.72	-6.90	-8.64	-3.37	-2.24
	-8.83	-9.28	-6.04	-9.74	-3.40	-2.50
	-7.63	-8.85	-5.19	-11.06	-3.43	-2.74
	-6.59	-8.51	-4.43	-13.98	-3.49	-3.12
	-5.80	-8.15	-3.80	-16.84	-3.53	-3.33
60	-5.46	-7.86	-3.48	-21.47	-3.62	-3.54
	-5.44	-7.64	-3.39	-21.13	-3.66	-3.58
	-5.96	-7.44	-3.62	-17.42	-3.77	-3.59
	-6.98	-7.26	-4.10	-15.45	-3.88	-3.59
	-8.64	-7.13	-4.81	-12.91	-3.99	-3.46
90	-10.59	-7.01	-5.43	-11.67	-4.09	-3.39
	-11.61	-7.04	-5.74	-11.70	-4.21	-3.50
	-10.88	-7.00	-5.51	-12.44	-4.31	-3.69
	-8.67	-7.02	-4.76	-16.34	-4.46	-4.18
	-7.05	-7.07	-4.05	-19.82	-4.57	-4.45
120	-5.90	-7.14	-3.47	-27.31	-4.72	-4.70
	-5.89	-7.31	-3.53	-26.77	-4.83	-4.80
	-6.71	-7.51	-4.08	-24.45	-4.94	-4.89
	-8.65	-7.70	-5.14	-28.14	-5.07	-5.05
	-10.98	-7.95	-6.19	-21.52	-5.18	-5.08
150	-11.11	-8.28	-6.46	-16.79	-5.31	-5.01
	-8.61	-8.63	-5.61	-12.96	-5.42	-4.72
	-6.26	-9.04	-4.42	-11.72	-5.49	-4.56
	-4.37	-9.45	-3.19	-10.96	-5.60	-4.49
	-3.49	-9.93	-2.60	-11.38	-5.64	-4.61
180	-2.99	-10.49	-2.28	-12.28	-5.71	-4.84
	-3.18	-11.21	-2.54	-13.29	-5.76	-5.05
	-3.56	-11.86	-2.96	-14.69	-5.81	-5.28
	-4.47	-12.64	-3.86	-15.87	-5.83	-5.42
	-5.58	-13.53	-4.93	-16.97	-5.85	-5.52
210	-7.21	-14.54	-6.47	-17.94	-5.85	-5.59
	-9.27	-15.68	-8.38	-17.62	-5.84	-5.56
	-17.55	-16.91	-14.21	-13.11	-5.80	-5.06
	-12.61	-18.40	-11.59	-14.51	-5.79	-5.24
	-9.73	-19.92	-9.33	-15.82	-5.74	-5.33
240	-7.72	-21.71	-7.55	-19.51	-5.69	-5.51
	-6.62	-23.06	-6.53	-22.79	-5.62	-5.53
	-5.85	-24.41	-5.79	-22.27	-5.62	-5.53
	-6.02	-25.00	-5.97	-20.03	-5.48	-5.33
	-6.47	-24.55	-6.41	-15.13	-5.46	-5.01
270	-8.18	-23.33	-8.05	-16.31	-5.37	-5.03
	-10.09	-22.28	-9.83	-14.46	-5.30	-4.80
	-13.88	-21.14	-13.13	-17.36	-5.15	-4.90
	-18.70	-20.20	-16.38	-16.65	-5.10	-4.81
	-23.94	-19.36	-18.06	-20.71	-5.01	-4.89
300	-19.24	-18.76	-15.98	-20.42	-4.88	-4.76
	-16.55	-18.24	-14.31	-29.56	-4.78	-4.76
	-14.99	-17.77	-13.15	-27.89	-4.70	-4.67
	-15.46	-17.63	-13.40	-31.10	-4.58	-4.57
	-15.66	-17.48	-13.47	-29.09	-4.46	-4.44
330	-15.68	-17.65	-13.54	-20.82	-4.35	-4.25
	-15.60	-17.86	-13.58	-18.59	-4.28	-4.12
	-16.66	-18.00	-14.27	-15.88	-4.15	-3.87
	-16.82	-18.20	-14.44	-13.71	-4.01	-3.57
	-18.20	-18.48	-15.33	-13.41	-3.92	-3.46
	-17.70	-18.91	-15.25	-12.22	-3.80	-3.21
	-17.49	-19.18	-15.24	-13.24	-3.66	-3.20
	-18.92	-19.56	-16.22	-13.38	-3.56	-3.13
	-21.34	-19.71	-17.44	-15.94	-3.46	-3.22
	-29.41	-19.50	-19.08	-16.53	-3.39	-3.18
	-26.67	-19.32	-18.59	-18.53	-3.29	-3.16
	-19.32	-18.60	-15.93	-17.29	-3.21	-3.04
	-14.84	-17.92	-13.10	-18.11	-3.13	-2.99
	-12.91	-16.98	-11.47	-16.65	-3.06	-2.87
	-11.06	-16.07	-9.87	-17.31	-3.04	-2.88
	-10.39	-15.08	-9.12	-16.81	-3.02	-2.84
	-9.72	-14.26	-8.41	-18.17	-2.99	-2.86

ピーク値	-2.99	-7.00	-2.28	-7.00	-2.99	-1.84
平均値	-8.66	-11.34	-6.79	-13.99	-4.37	-3.92

平均化

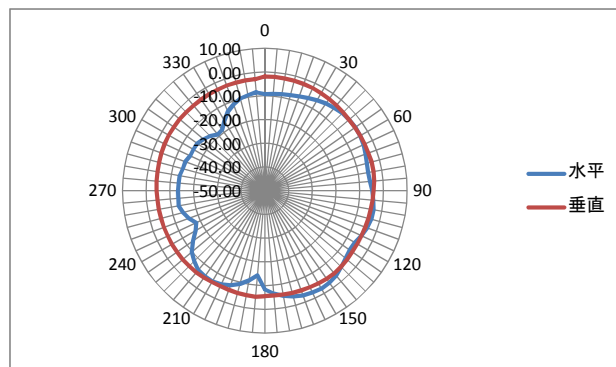


ピーク値	水平平均	垂直平均	平均化利得
-1.84	-6.79	-3.92	-3.92 dBi

メイン900MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-14.22	-13.70	-10.94	-7.22	-4.50	-2.64
	-15.01	-12.83	-10.77	-7.13	-4.55	-2.64
	-15.18	-12.07	-10.34	-7.12	-4.59	-2.66
	-14.92	-11.36	-9.77	-7.22	-4.66	-2.74
	-14.01	-10.70	-9.04	-7.68	-4.68	-2.91
30	-12.93	-10.09	-8.27	-8.43	-4.70	-3.16
	-11.76	-9.62	-7.55	-9.89	-4.78	-3.61
	-10.57	-9.14	-6.79	-11.59	-4.81	-3.98
	-9.71	-8.75	-6.19	-14.27	-4.88	-4.41
	-8.93	-8.36	-5.62	-16.69	-4.93	-4.65
60	-8.36	-8.07	-5.20	-21.36	-5.02	-4.92
	-7.80	-7.83	-4.80	-23.34	-5.10	-5.03
	-7.51	-7.61	-4.55	-21.89	-5.18	-5.08
	-7.51	-7.41	-4.45	-17.96	-5.26	-5.03
	-8.10	-7.30	-4.67	-15.01	-5.38	-4.93
90	-9.55	-7.22	-5.22	-13.54	-5.50	-4.87
	-11.70	-7.16	-5.85	-13.20	-5.55	-4.86
	-13.33	-7.12	-6.19	-13.99	-5.64	-5.05
	-11.64	-7.15	-5.83	-16.69	-5.74	-5.41
	-9.59	-7.15	-5.19	-18.80	-5.86	-5.64
120	-7.89	-7.20	-4.52	-18.82	-5.99	-5.77
	-7.54	-7.36	-4.44	-19.41	-6.05	-5.85
	-7.87	-7.53	-4.68	-21.75	-6.10	-5.98
	-9.53	-7.74	-5.53	-33.67	-6.18	-6.17
	-12.39	-7.96	-6.62	-24.41	-6.23	-6.17
150	-14.59	-8.24	-7.34	-19.47	-6.32	-6.12
	-12.03	-8.57	-6.96	-16.35	-6.33	-5.91
	-8.92	-8.89	-5.90	-15.74	-6.40	-5.92
	-6.45	-9.32	-4.64	-14.11	-6.41	-5.73
	-5.24	-9.75	-3.92	-13.48	-6.42	-5.64
180	-4.42	-10.23	-3.41	-12.50	-6.42	-5.46
	-4.29	-10.77	-3.40	-12.93	-6.45	-5.57
	-4.46	-11.40	-3.66	-13.32	-6.44	-5.63
	-5.08	-12.04	-4.28	-14.47	-6.42	-5.78
	-6.16	-12.73	-5.30	-15.04	-6.39	-5.84
210	-7.74	-13.51	-6.72	-15.88	-6.35	-5.89
	-10.11	-14.36	-8.72	-15.52	-6.30	-5.81
	-14.04	-15.29	-11.61	-19.38	-6.29	-6.08
	-11.59	-16.37	-10.34	-17.49	-6.26	-5.94
	-9.05	-17.38	-8.45	-20.69	-6.21	-6.06
240	-7.52	-18.49	-7.19	-24.52	-6.15	-6.09
	-6.35	-19.50	-6.15	-25.43	-6.13	-6.08
	-5.65	-20.58	-5.51	-23.00	-6.05	-5.96
	-5.59	-21.38	-5.47	-17.91	-5.98	-5.71
	-5.81	-22.00	-5.71	-17.75	-5.88	-5.61
270	-7.05	-22.20	-6.92	-14.85	-5.86	-5.34
	-8.57	-22.09	-8.38	-16.04	-5.78	-5.38
	-11.79	-21.84	-11.38	-14.43	-5.71	-5.16
	-15.60	-21.44	-14.60	-17.92	-5.68	-5.43
	-20.08	-20.97	-17.49	-19.92	-5.59	-5.43
300	-17.73	-20.71	-15.96	-30.24	-5.50	-5.48
	-14.74	-20.64	-13.74	-29.04	-5.42	-5.40
	-12.54	-20.50	-11.89	-27.26	-5.33	-5.30
	-12.35	-20.56	-11.74	-23.99	-5.26	-5.21
	-12.51	-20.65	-11.89	-29.17	-5.21	-5.19
330	-13.93	-20.70	-13.10	-28.78	-5.09	-5.07
	-14.17	-20.87	-13.32	-19.10	-5.04	-4.87
	-15.15	-21.62	-14.26	-16.33	-4.94	-4.64
	-15.38	-22.51	-14.61	-14.49	-4.85	-4.40
	-18.96	-23.59	-17.68	-13.57	-4.79	-4.25
	-22.02	-24.86	-20.20	-14.89	-4.69	-4.29
	-34.12	-26.17	-25.52	-15.11	-4.67	-4.30
	-23.83	-27.43	-22.25	-17.17	-4.59	-4.35
	-17.45	-28.25	-17.10	-17.15	-4.52	-4.29
	-14.88	-27.14	-14.63	-19.17	-4.48	-4.34
	-12.98	-25.30	-12.74	-19.91	-4.43	-4.31
	-11.58	-23.52	-11.31	-18.96	-4.37	-4.22
	-10.45	-21.46	-10.12	-19.38	-4.35	-4.22
	-9.72	-19.85	-9.31	-17.52	-4.34	-4.14
	-8.90	-18.39	-8.43	-19.27	-4.31	-4.17
	-8.58	-16.85	-7.98	-18.20	-4.32	-4.14
	-8.12	-15.74	-7.42	-20.56	-4.29	-4.18

ピーク値	-4.29	-7.12	-3.40	-7.12	-4.29	-2.64
平均値	-9.42	-11.55	-7.34	-14.54	-5.37	-4.87

平均化

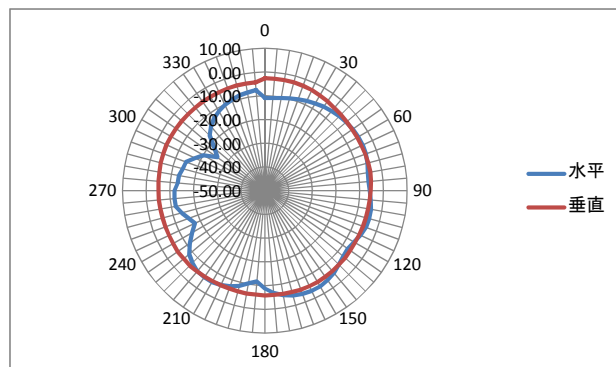


ピーク値	水平平均	垂直平均	平均化利得
-2.64	-7.34	-4.87	-4.87 dBi

メイン915MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-18.36	-16.97	-14.60	-8.89	-5.60	-3.93
	-17.93	-15.81	-13.73	-9.07	-5.63	-4.01
	-16.43	-14.98	-12.64	-9.56	-5.62	-4.15
	-15.61	-14.14	-11.80	-9.97	-5.63	-4.27
	-14.64	-13.40	-10.97	-10.66	-5.68	-4.48
30	-13.92	-12.69	-10.25	-11.04	-5.69	-4.58
	-13.22	-12.08	-9.60	-11.93	-5.72	-4.78
	-12.19	-11.53	-8.84	-12.70	-5.76	-4.96
	-11.39	-11.04	-8.20	-14.69	-5.77	-5.25
	-10.57	-10.57	-7.56	-16.78	-5.83	-5.49
60	-9.97	-10.18	-7.07	-20.57	-5.87	-5.72
	-9.59	-9.94	-6.75	-21.90	-5.92	-5.82
	-9.41	-9.58	-6.49	-19.97	-6.01	-5.84
	-9.63	-9.46	-6.53	-19.07	-6.05	-5.84
	-10.12	-9.23	-6.64	-17.32	-6.13	-5.81
90	-11.31	-9.13	-7.08	-16.40	-6.23	-5.83
	-12.73	-8.97	-7.44	-15.44	-6.29	-5.79
	-13.76	-8.93	-7.69	-15.71	-6.39	-5.91
	-13.12	-8.89	-7.50	-16.56	-6.49	-6.08
	-11.19	-8.93	-6.90	-19.01	-6.59	-6.35
120	-9.60	-9.00	-6.28	-20.95	-6.66	-6.50
	-8.73	-9.07	-5.89	-23.20	-6.77	-6.67
	-8.91	-9.26	-6.07	-25.52	-6.85	-6.79
	-9.89	-9.42	-6.64	-32.32	-6.94	-6.93
	-12.16	-9.67	-7.73	-27.09	-7.07	-7.02
150	-14.38	-9.95	-8.62	-20.21	-7.14	-6.93
	-14.21	-10.27	-8.80	-15.73	-7.15	-6.58
	-11.28	-10.63	-7.93	-15.06	-7.23	-6.57
	-8.60	-11.04	-6.64	-14.51	-7.31	-6.55
	-6.99	-11.49	-5.67	-15.52	-7.36	-6.74
180	-5.98	-11.96	-5.00	-15.66	-7.42	-6.81
	-5.56	-12.55	-4.77	-16.30	-7.47	-6.93
	-5.74	-13.10	-5.01	-16.29	-7.50	-6.96
	-6.27	-13.78	-5.56	-17.16	-7.54	-7.09
	-7.40	-14.51	-6.63	-18.16	-7.57	-7.20
210	-8.86	-15.29	-7.97	-19.85	-7.61	-7.35
	-10.98	-16.22	-9.84	-21.64	-7.62	-7.45
	-15.15	-17.12	-13.02	-18.11	-7.59	-7.22
	-12.95	-18.12	-11.80	-19.43	-7.61	-7.34
	-10.13	-19.22	-9.62	-21.06	-7.61	-7.41
240	-8.81	-20.08	-8.50	-25.21	-7.62	-7.54
	-7.57	-21.18	-7.38	-32.24	-7.60	-7.58
	-7.14	-22.07	-7.00	-29.17	-7.57	-7.54
	-7.21	-22.74	-7.09	-23.89	-7.46	-7.36
	-7.79	-23.01	-7.66	-18.44	-7.43	-7.09
270	-9.39	-23.11	-9.21	-20.09	-7.46	-7.23
	-11.38	-22.71	-11.07	-18.74	-7.37	-7.06
	-15.05	-22.37	-14.31	-23.89	-7.28	-7.18
	-19.55	-21.93	-17.57	-22.56	-7.23	-7.11
	-22.59	-21.57	-19.04	-24.74	-7.16	-7.08
300	-19.64	-21.19	-17.34	-24.54	-7.06	-6.99
	-17.22	-20.99	-15.69	-31.98	-6.97	-6.96
	-15.92	-20.91	-14.72	-35.16	-6.90	-6.90
	-16.57	-20.91	-15.21	-35.97	-6.82	-6.81
	-16.82	-20.99	-15.41	-31.65	-6.69	-6.68
330	-18.02	-20.96	-16.24	-22.16	-6.60	-6.48
	-17.94	-21.13	-16.24	-18.71	-6.55	-6.30
	-19.91	-21.70	-17.70	-15.72	-6.40	-5.92
	-21.66	-22.45	-19.03	-14.36	-6.32	-5.68
	-32.12	-23.27	-22.74	-13.96	-6.25	-5.57
	-36.75	-24.23	-23.99	-14.38	-6.14	-5.53
	-22.94	-25.49	-21.02	-15.87	-6.06	-5.63
	-20.82	-26.62	-19.80	-17.72	-5.98	-5.70
	-17.59	-27.97	-17.21	-20.15	-5.91	-5.75
	-16.49	-29.05	-16.26	-22.33	-5.83	-5.74
	-14.70	-28.78	-14.54	-21.89	-5.73	-5.63
	-13.67	-27.47	-13.49	-21.33	-5.71	-5.60
	-12.56	-25.77	-12.36	-18.70	-5.72	-5.50
	-11.95	-23.97	-11.68	-18.02	-5.69	-5.45
	-11.09	-22.31	-10.78	-16.71	-5.64	-5.31
	-10.80	-20.72	-10.38	-17.54	-5.56	-5.29
	-10.01	-19.38	-9.54	-17.95	-5.60	-5.36

ピーク値	-5.56	-8.89	-4.77	-8.89	-5.56	-3.93
平均値	-11.07	-13.47	-9.10	-16.37	-6.54	-6.11

平均化

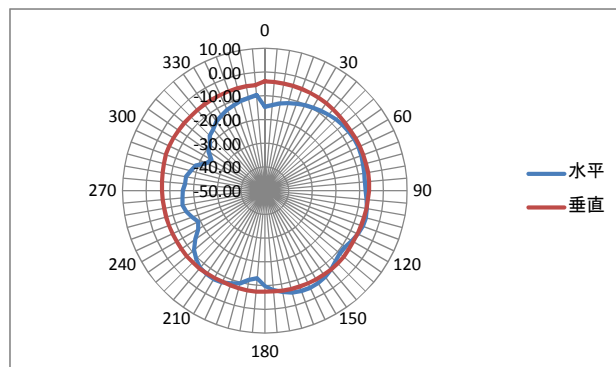


ピーク値	水平平均	垂直平均	平均化利得
-3.93	-9.10	-6.11	-6.11 dBi

メイン945MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-17.27	-26.24	-16.75	-11.85	-8.95	-7.16
	-17.02	-23.40	-16.12	-12.08	-8.95	-7.23
	-16.25	-21.56	-15.13	-12.55	-9.06	-7.45
	-15.99	-19.95	-14.52	-12.96	-9.10	-7.61
	-15.47	-18.62	-13.75	-13.64	-9.20	-7.86
30	-15.54	-17.41	-13.36	-14.24	-9.32	-8.10
	-15.27	-16.47	-12.82	-15.31	-9.47	-8.47
	-15.37	-15.61	-12.47	-16.35	-9.64	-8.80
	-14.78	-14.92	-11.84	-18.41	-9.83	-9.26
	-14.48	-14.23	-11.34	-20.43	-10.07	-9.69
60	-13.71	-13.71	-10.70	-23.70	-10.23	-10.04
	-13.14	-13.33	-10.22	-24.90	-10.50	-10.35
	-12.33	-12.92	-9.61	-23.31	-10.86	-10.62
	-11.82	-12.55	-9.16	-22.16	-11.13	-10.80
	-11.49	-12.29	-8.86	-19.88	-11.51	-10.92
90	-11.44	-12.15	-8.77	-18.88	-11.89	-11.10
	-11.58	-11.90	-8.73	-18.42	-12.31	-11.36
	-11.97	-11.91	-8.93	-20.20	-12.69	-11.98
	-12.10	-11.85	-8.96	-24.76	-13.10	-12.81
	-12.10	-11.88	-8.98	-26.28	-13.55	-13.33
120	-11.82	-11.95	-8.87	-22.53	-14.01	-13.43
	-11.47	-12.09	-8.75	-20.11	-14.48	-13.43
	-11.59	-12.27	-8.91	-21.71	-14.96	-14.13
	-11.83	-12.49	-9.14	-24.33	-15.43	-14.90
	-12.59	-12.78	-9.68	-29.53	-15.93	-15.75
150	-13.50	-13.16	-10.32	-27.81	-16.41	-16.11
	-13.85	-13.57	-10.70	-21.78	-16.89	-15.67
	-13.12	-14.10	-10.57	-19.36	-17.35	-15.23
	-11.76	-14.66	-9.96	-16.64	-17.75	-14.15
	-10.46	-15.30	-9.22	-15.80	-18.13	-13.80
180	-9.41	-16.00	-8.55	-15.26	-18.41	-13.54
	-8.88	-16.95	-8.25	-15.55	-18.68	-13.83
	-8.78	-17.83	-8.27	-16.30	-18.88	-14.39
	-9.11	-18.95	-8.68	-17.10	-18.97	-14.92
	-9.85	-20.29	-9.47	-18.08	-19.02	-15.51
210	-10.93	-21.71	-10.58	-18.91	-18.99	-15.94
	-12.43	-23.46	-12.10	-19.56	-18.90	-16.21
	-24.01	-25.25	-21.57	-14.59	-18.70	-13.16
	-26.33	-26.99	-23.64	-15.09	-18.44	-13.44
	-20.97	-27.87	-20.16	-16.21	-18.19	-14.08
240	-18.99	-27.38	-18.41	-17.42	-17.85	-14.62
	-17.09	-26.02	-16.56	-18.61	-17.54	-15.03
	-16.75	-24.18	-16.03	-19.17	-17.18	-15.06
	-16.71	-22.70	-15.73	-19.47	-16.79	-14.91
	-17.49	-21.49	-16.03	-18.70	-16.37	-14.37
270	-19.26	-20.45	-16.81	-19.12	-15.99	-14.26
	-22.15	-19.45	-17.59	-18.38	-15.52	-13.71
	-27.61	-18.69	-18.16	-20.36	-15.09	-13.96
	-30.74	-17.99	-17.77	-21.07	-14.67	-13.77
	-31.16	-17.43	-17.25	-25.13	-14.23	-13.89
300	-31.11	-16.98	-16.82	-27.64	-13.85	-13.67
	-36.15	-16.67	-16.62	-32.48	-13.38	-13.33
	-29.78	-16.41	-16.21	-33.69	-13.01	-12.97
	-24.58	-16.27	-15.68	-31.95	-12.72	-12.67
	-21.95	-16.18	-15.16	-28.23	-12.27	-12.16
330	-20.20	-16.13	-14.69	-25.81	-11.86	-11.69
	-19.31	-16.16	-14.45	-23.25	-11.58	-11.30
	-19.00	-16.34	-14.46	-21.66	-11.33	-10.94
	-19.66	-16.66	-14.90	-19.57	-10.95	-10.39
	-20.41	-16.95	-15.33	-18.88	-10.66	-10.05
	-20.45	-17.34	-15.61	-18.21	-10.40	-9.74
	-19.83	-17.89	-15.74	-18.27	-10.14	-9.52
	-18.50	-18.42	-15.45	-17.99	-9.91	-9.28
	-17.26	-19.21	-15.11	-18.30	-9.71	-9.15
	-16.29	-20.18	-14.80	-17.94	-9.49	-8.91
	-15.35	-21.24	-14.35	-17.34	-9.29	-8.66
	-15.02	-22.65	-14.33	-16.63	-9.11	-8.40
	-14.40	-24.22	-13.97	-15.71	-9.04	-8.19
	-14.33	-26.20	-14.06	-15.47	-8.97	-8.09
	-13.71	-28.94	-13.58	-15.09	-8.82	-7.90
	-13.56	-32.07	-13.50	-15.36	-8.80	-7.94
	-12.87	-33.29	-12.83	-15.55	-8.78	-7.95

ピーク値	-8.78	-11.85	-8.25	-11.85	-8.78	-7.16
平均値	-14.12	-16.15	-12.01	-17.76	-12.03	-11.00

平均化

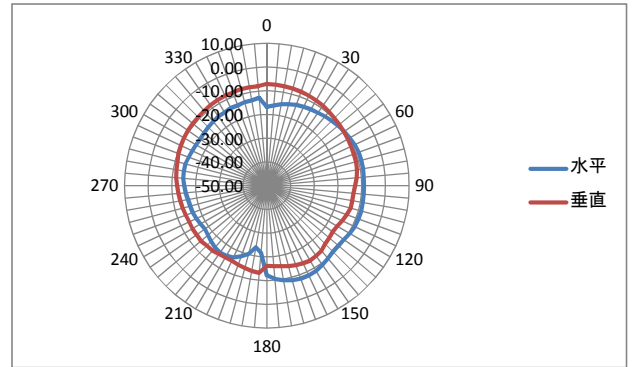


ピーク値	水平平均	垂直平均	平均化利得
-7.16	-12.01	-11.00	-11.00 dBi

メイン960MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-16.72	-27.78	-16.40	-14.19	-8.94	-7.81
	-16.37	-25.31	-15.85	-14.28	-9.01	-7.88
	-15.99	-23.39	-15.27	-14.22	-9.05	-7.90
	-15.70	-21.89	-14.76	-14.18	-9.09	-7.92
	-15.53	-20.45	-14.32	-14.12	-9.16	-7.95
30	-15.29	-19.41	-13.87	-14.43	-9.25	-8.10
	-15.07	-18.44	-13.43	-15.16	-9.33	-8.33
	-14.86	-17.66	-13.02	-16.54	-9.45	-8.67
	-14.65	-17.04	-12.67	-18.48	-9.56	-9.04
	-14.53	-16.43	-12.36	-20.77	-9.69	-9.37
60	-14.16	-15.91	-11.94	-23.22	-9.91	-9.71
	-13.78	-15.50	-11.55	-23.85	-10.04	-9.86
	-13.23	-15.15	-11.07	-22.14	-10.34	-10.06
	-12.72	-14.83	-10.64	-20.44	-10.53	-10.10
	-12.18	-14.58	-10.21	-18.52	-10.75	-10.08
90	-11.83	-14.39	-9.91	-18.00	-11.00	-10.21
	-11.79	-14.25	-9.83	-17.80	-11.32	-10.44
	-11.94	-14.17	-9.90	-18.80	-11.62	-10.86
	-12.11	-14.12	-9.99	-20.73	-11.83	-11.30
	-12.39	-14.12	-10.16	-24.70	-12.19	-11.95
120	-12.29	-14.22	-10.14	-35.04	-12.49	-12.46
	-12.22	-14.33	-10.14	-30.58	-12.84	-12.77
	-12.21	-14.46	-10.18	-28.61	-13.15	-13.02
	-12.48	-14.68	-10.43	-29.36	-13.52	-13.41
	-13.19	-14.93	-10.96	-47.43	-13.86	-13.85
150	-13.86	-15.27	-11.49	-34.57	-14.17	-14.13
	-14.11	-15.64	-11.80	-25.26	-14.49	-14.14
	-13.15	-16.06	-11.36	-22.72	-14.78	-14.14
	-11.61	-16.61	-10.42	-18.88	-15.06	-13.55
	-10.32	-17.19	-9.51	-17.43	-15.31	-13.23
180	-9.36	-17.87	-8.78	-15.87	-15.59	-12.72
	-8.94	-18.67	-8.50	-15.80	-15.76	-12.76
	-9.08	-19.63	-8.72	-15.96	-15.94	-12.94
	-9.75	-20.59	-9.40	-16.67	-16.12	-13.37
	-10.87	-21.82	-10.54	-17.68	-16.21	-13.87
210	-12.48	-23.19	-12.12	-18.46	-16.37	-14.28
	-14.69	-24.70	-14.27	-19.12	-16.40	-14.54
	-20.75	-26.34	-19.69	-18.59	-16.43	-14.36
	-21.78	-27.73	-20.80	-19.92	-16.42	-14.81
	-19.30	-28.53	-18.81	-22.04	-16.44	-15.38
240	-17.50	-28.07	-17.13	-24.77	-16.36	-15.77
	-16.40	-27.08	-16.04	-25.44	-16.27	-15.77
	-16.13	-25.30	-15.63	-24.96	-16.09	-15.56
	-16.64	-23.93	-15.90	-23.40	-15.95	-15.23
	-17.73	-22.61	-16.51	-21.20	-15.78	-14.68
270	-20.25	-21.46	-17.80	-21.22	-15.52	-14.49
	-23.40	-20.49	-18.69	-20.36	-15.29	-14.11
	-29.96	-19.72	-19.33	-22.80	-15.04	-14.37
	-40.04	-19.07	-19.04	-24.39	-14.76	-14.31
	-33.89	-18.46	-18.34	-28.00	-14.49	-14.30
300	-29.70	-17.93	-17.65	-31.10	-14.12	-14.04
	-29.30	-17.65	-17.36	-29.07	-13.83	-13.70
	-28.81	-17.25	-16.95	-29.08	-13.62	-13.50
	-30.11	-17.11	-16.90	-27.76	-13.21	-13.06
	-28.01	-16.96	-16.64	-31.72	-12.81	-12.75
330	-24.44	-16.83	-16.13	-39.75	-12.49	-12.48
	-23.36	-16.79	-15.93	-28.42	-12.18	-12.07
	-22.62	-16.88	-15.85	-23.96	-11.85	-11.59
	-22.19	-17.07	-15.90	-21.56	-11.51	-11.10
	-21.85	-17.35	-16.03	-21.57	-11.24	-10.86
	-20.36	-17.71	-15.83	-21.36	-10.98	-10.60
	-19.47	-18.14	-15.74	-21.58	-10.72	-10.38
	-18.12	-18.70	-15.39	-21.16	-10.50	-10.14
	-17.18	-19.33	-15.11	-20.56	-10.27	-9.88
	-16.31	-20.04	-14.77	-19.72	-10.12	-9.66
	-15.53	-21.12	-14.47	-18.63	-9.87	-9.33
	-15.10	-22.16	-14.32	-18.14	-9.74	-9.16
	-14.51	-23.66	-14.01	-17.18	-9.53	-8.84
	-14.41	-25.47	-14.08	-16.83	-9.50	-8.76
	-14.01	-27.63	-13.83	-16.03	-9.40	-8.54
	-14.03	-29.91	-13.92	-16.02	-9.27	-8.44
	-13.72	-31.71	-13.65	-15.78	-9.23	-8.36

ピーク値	-8.94	-14.12	-8.50	-14.12	-8.94	-7.81
平均値	-14.47	-17.88	-12.84	-19.16	-11.83	-11.10

平均化

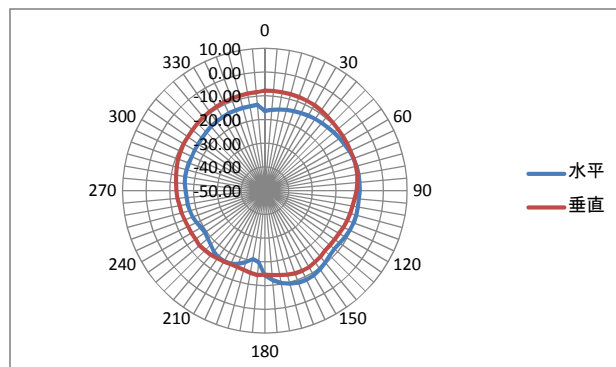

ピーク値	水平平均	垂直平均	平均化利得
-7.81	-12.84	-11.10	-11.10 dBi


ca

メイン1447.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-17.90	-24.35	-17.01	-19.06	-12.80	-11.88
	-18.30	-24.53	-17.37	-18.61	-12.88	-11.85
	-19.29	-24.17	-18.07	-19.15	-12.99	-12.05
	-20.96	-23.57	-19.06	-20.09	-13.16	-12.35
	-23.57	-22.96	-20.24	-22.19	-13.33	-12.80
	-26.78	-21.80	-20.60	-23.89	-13.54	-13.16
30	-29.97	-21.24	-20.70	-26.34	-13.76	-13.52
	-32.49	-20.53	-20.26	-26.14	-14.03	-13.77
	-34.07	-19.86	-19.70	-24.93	-14.31	-13.95
	-35.88	-19.37	-19.27	-22.31	-14.60	-13.92
	-33.65	-18.75	-18.61	-20.10	-14.90	-13.75
	-31.31	-18.42	-18.20	-19.15	-15.31	-13.81
60	-28.10	-18.11	-17.69	-19.37	-15.58	-14.06
	-25.00	-17.90	-17.13	-21.76	-15.90	-14.90
	-22.96	-17.81	-16.65	-24.15	-16.17	-15.52
	-22.22	-17.71	-16.40	-22.70	-16.34	-15.44
	-21.53	-17.78	-16.25	-20.01	-16.48	-14.88
	-20.66	-17.91	-16.06	-18.81	-16.58	-14.54
90	-19.81	-18.11	-15.87	-18.85	-16.56	-14.55
	-20.23	-18.30	-16.15	-18.30	-16.41	-14.24
	-22.27	-18.76	-17.16	-16.48	-16.27	-13.36
	-22.29	-19.18	-17.45	-15.39	-16.10	-12.72
	-18.90	-19.90	-16.36	-15.87	-15.77	-12.81
	-16.11	-20.56	-14.78	-17.90	-15.56	-13.57
120	-15.04	-21.52	-14.16	-18.47	-15.34	-13.62
	-15.53	-22.32	-14.70	-16.22	-15.10	-12.61
	-17.12	-23.82	-16.28	-14.02	-14.84	-11.40
	-17.32	-25.59	-16.71	-14.67	-14.57	-11.61
	-15.54	-27.77	-15.29	-16.41	-14.40	-12.28
	-13.61	-30.58	-13.52	-19.09	-14.35	-13.09
150	-12.44	-37.14	-12.43	-18.78	-14.20	-12.90
	-12.12	-47.20	-12.11	-15.85	-14.10	-11.88
	-12.40	-38.93	-12.39	-14.42	-14.08	-11.23
	-12.86	-31.78	-12.80	-13.44	-14.04	-10.72
	-13.33	-27.93	-13.18	-13.57	-14.14	-10.84
	-13.38	-25.07	-13.10	-13.54	-14.18	-10.83
180	-13.03	-23.17	-12.62	-13.76	-14.31	-11.02
	-15.24	-21.62	-14.34	-17.51	-14.43	-12.69
	-13.85	-20.29	-12.96	-17.93	-14.56	-12.92
	-13.36	-19.19	-12.35	-17.78	-14.83	-13.05
	-13.37	-18.32	-12.16	-17.79	-15.01	-13.17
	-14.18	-17.33	-12.46	-16.88	-15.26	-12.99
210	-15.84	-16.68	-13.23	-16.23	-15.54	-12.86
	-18.11	-15.95	-13.89	-15.91	-15.84	-12.87
	-20.43	-15.46	-14.26	-16.03	-16.10	-13.05
	-18.89	-14.99	-13.50	-17.22	-16.34	-13.74
	-16.49	-14.56	-12.41	-17.19	-16.60	-13.88
	-15.02	-14.22	-11.59	-16.16	-16.76	-13.44
240	-14.70	-13.98	-11.31	-15.05	-16.92	-12.87
	-16.03	-13.77	-11.74	-14.38	-17.00	-12.49
	-18.61	-13.56	-12.38	-15.28	-17.05	-13.06
	-19.79	-13.52	-12.60	-18.11	-16.89	-14.44
	-18.71	-13.44	-12.31	-20.45	-16.72	-15.19
	-16.62	-13.44	-11.73	-19.38	-16.55	-14.73
270	-16.12	-13.55	-11.63	-19.03	-16.22	-14.39
	-16.32	-13.67	-11.79	-20.56	-15.93	-14.64
	-17.11	-13.89	-12.20	-22.42	-15.54	-14.73
	-17.49	-14.13	-12.48	-22.28	-15.15	-14.38
	-17.08	-14.39	-12.52	-19.22	-14.83	-13.48
	-16.85	-14.67	-12.62	-18.39	-14.43	-12.96
300	-16.78	-15.10	-12.85	-18.92	-14.09	-12.86
	-17.11	-15.57	-13.26	-22.45	-13.68	-13.14
	-17.20	-16.12	-13.62	-25.78	-13.38	-13.14
	-17.27	-16.66	-13.94	-25.99	-13.11	-12.90
	-16.90	-17.37	-14.12	-23.39	-12.88	-12.51
	-16.64	-18.08	-14.29	-20.46	-12.61	-11.95
330	-16.09	-18.99	-14.29	-18.26	-12.50	-11.48
	-15.68	-19.80	-14.26	-17.27	-12.38	-11.16
	-15.63	-20.75	-14.47	-17.03	-12.25	-11.00
	-15.65	-21.71	-14.69	-17.28	-12.14	-10.98
	-15.93	-22.67	-15.09	-17.31	-12.15	-10.99
	-16.32	-23.48	-15.56	-17.27	-12.12	-10.96

ピーク値	-12.12	-13.44	-11.31	-13.44	-12.12	-10.72
平均値	-16.70	-17.69	-14.16	-17.68	-14.56	-12.83

平均化

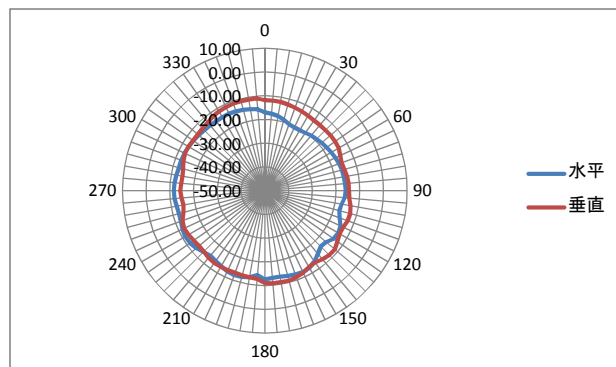


ピーク値	水平平均	垂直平均	平均化利得
-10.72	-14.16	-12.83	-12.83 dBi

メイン1462.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-19.73	-46.54	-19.72	-19.03	-12.78	-11.86
	-19.79	-36.03	-19.68	-19.33	-12.79	-11.92
	-20.20	-31.23	-19.87	-20.46	-12.83	-12.14
	-21.09	-28.32	-20.34	-21.19	-12.99	-12.38
	-22.74	-26.12	-21.10	-21.99	-13.14	-12.61
30	-25.10	-24.68	-21.87	-23.30	-13.29	-12.87
	-27.98	-23.30	-22.03	-25.55	-13.49	-13.23
	-30.52	-22.37	-21.75	-26.90	-13.77	-13.56
	-31.55	-21.51	-21.10	-27.25	-13.95	-13.75
	-31.05	-20.81	-20.41	-23.45	-14.29	-13.79
60	-30.21	-20.20	-19.79	-20.80	-14.56	-13.64
	-30.80	-19.67	-19.35	-19.09	-14.99	-13.56
	-30.25	-19.27	-18.94	-19.13	-15.28	-13.78
	-26.38	-18.90	-18.19	-21.07	-15.62	-14.53
	-22.97	-18.59	-17.24	-23.14	-15.94	-15.18
90	-21.89	-18.36	-16.77	-22.58	-16.21	-15.31
	-21.63	-18.20	-16.57	-19.31	-16.44	-14.64
	-21.56	-18.04	-16.44	-17.50	-16.62	-14.03
	-20.70	-18.04	-16.16	-17.25	-16.74	-13.98
	-20.46	-17.93	-16.00	-17.29	-16.81	-14.03
120	-21.37	-17.95	-16.32	-16.51	-16.82	-13.65
	-21.98	-18.32	-16.76	-15.64	-16.76	-13.15
	-19.62	-18.58	-16.06	-15.64	-16.61	-13.09
	-17.11	-18.84	-14.88	-16.98	-16.49	-13.72
	-15.90	-19.31	-14.27	-18.10	-16.35	-14.13
150	-16.15	-19.91	-14.63	-16.52	-16.15	-13.32
	-17.72	-20.57	-15.90	-14.45	-15.95	-12.13
	-18.24	-21.53	-16.57	-14.92	-15.81	-12.33
	-16.26	-22.44	-15.32	-16.36	-15.73	-13.02
	-14.05	-23.72	-13.60	-20.17	-15.52	-14.24
180	-12.57	-25.05	-12.33	-21.78	-15.45	-14.54
	-12.03	-26.14	-11.86	-18.31	-15.35	-13.57
	-12.27	-27.39	-12.14	-16.32	-15.28	-12.76
	-12.81	-27.96	-12.68	-14.98	-15.34	-12.15
	-13.34	-26.98	-13.15	-15.03	-15.29	-12.15
210	-13.43	-25.81	-13.19	-15.02	-15.35	-12.17
	-12.97	-24.51	-12.68	-15.62	-15.44	-12.52
	-16.26	-22.86	-15.40	-17.48	-15.50	-13.37
	-15.02	-21.44	-14.13	-17.95	-15.66	-13.64
	-14.60	-20.26	-13.55	-18.14	-15.80	-13.80
240	-14.60	-19.13	-13.29	-17.99	-16.01	-13.88
	-15.35	-18.43	-13.61	-17.00	-16.20	-13.57
	-17.38	-17.55	-14.46	-16.35	-16.43	-13.38
	-20.13	-16.92	-15.22	-15.95	-16.62	-13.26
	-22.77	-16.37	-15.47	-16.16	-16.79	-13.45
270	-20.72	-15.86	-14.64	-17.77	-17.07	-14.39
	-18.03	-15.50	-13.57	-18.20	-17.22	-14.67
	-17.05	-15.14	-12.98	-17.16	-17.24	-14.19
	-17.34	-14.82	-12.89	-16.00	-17.45	-13.66
	-19.38	-14.67	-13.40	-15.45	-17.37	-13.29
300	-22.28	-14.52	-13.85	-16.77	-17.38	-14.05
	-21.67	-14.46	-13.70	-20.79	-17.29	-15.69
	-19.65	-14.45	-13.31	-23.02	-17.10	-16.11
	-18.08	-14.49	-12.91	-21.13	-16.89	-15.50
	-18.21	-14.65	-13.06	-21.25	-16.64	-15.35
330	-19.01	-14.81	-13.41	-23.84	-16.25	-15.55
	-19.74	-15.17	-13.87	-26.02	-15.88	-15.48
	-20.13	-15.39	-14.13	-23.01	-15.44	-14.74
	-19.61	-15.75	-14.25	-19.89	-15.11	-13.86
	-19.39	-16.15	-14.46	-19.66	-14.72	-13.51
	-19.08	-16.68	-14.71	-20.87	-14.37	-13.49
	-19.10	-17.44	-15.18	-23.87	-13.99	-13.57
	-18.89	-18.12	-15.48	-23.41	-13.69	-13.25
	-19.18	-19.01	-16.09	-21.53	-13.37	-12.75
	-19.04	-19.99	-16.48	-19.72	-13.09	-12.24
	-18.49	-21.44	-16.71	-18.69	-12.78	-11.79
	-17.81	-22.80	-16.61	-17.72	-12.59	-11.43
	-17.26	-25.00	-16.58	-16.87	-12.45	-11.11
	-17.02	-27.46	-16.64	-16.21	-12.28	-10.80
	-16.84	-31.23	-16.69	-15.90	-12.15	-10.62
	-16.68	-36.27	-16.63	-16.00	-12.07	-10.59
	-16.49	-44.97	-16.48	-16.30	-12.03	-10.65

ピーク値	-12.03	-14.45	-11.86	-14.45	-12.03	-10.59
平均値	-17.69	-18.70	-15.16	-18.11	-14.91	-13.21

平均化

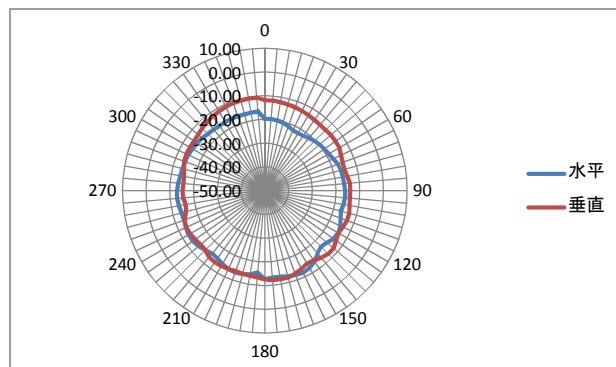


ピーク値	水平平均	垂直平均	平均化利得
-10.59	-15.16	-13.21	-13.21 dBi

メイン1495.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-17.52	-33.77	-17.41	-16.43	-11.05	-9.94
	-17.78	-35.82	-17.71	-16.76	-11.17	-10.11
	-18.27	-31.78	-18.08	-17.22	-11.34	-10.34
	-19.42	-28.90	-18.95	-18.12	-11.49	-10.63
	-20.89	-26.33	-19.80	-18.32	-11.69	-10.84
	-23.22	-24.40	-20.76	-19.46	-11.97	-11.26
30	-26.55	-22.86	-21.30	-20.22	-12.26	-11.62
	-30.55	-21.56	-21.05	-22.00	-12.55	-12.08
	-32.67	-20.70	-20.44	-21.94	-12.88	-12.37
	-31.84	-19.85	-19.58	-21.38	-13.28	-12.65
	-30.79	-19.08	-18.80	-19.26	-13.67	-12.61
	-31.40	-18.69	-18.47	-17.88	-14.05	-12.55
60	-32.24	-18.09	-17.92	-17.37	-14.43	-12.65
	-29.33	-17.79	-17.49	-17.87	-14.79	-13.05
	-26.98	-17.52	-17.05	-18.68	-15.12	-13.53
	-24.35	-17.25	-16.48	-19.68	-15.46	-14.06
	-22.31	-17.02	-15.90	-18.30	-15.65	-13.76
	-20.70	-16.92	-15.40	-16.74	-15.78	-13.22
90	-19.93	-16.87	-15.12	-15.73	-15.88	-12.79
	-19.46	-16.82	-14.93	-15.14	-15.76	-12.43
	-18.75	-16.93	-14.73	-14.76	-15.65	-12.17
	-18.24	-17.03	-14.58	-14.30	-15.47	-11.84
	-17.87	-17.36	-14.60	-14.19	-15.39	-11.74
	-16.40	-17.79	-14.03	-15.38	-15.14	-12.25
120	-14.83	-18.35	-13.23	-16.15	-14.97	-12.51
	-14.33	-18.95	-13.04	-15.14	-14.75	-11.93
	-14.97	-19.71	-13.71	-12.85	-14.63	-10.64
	-16.17	-20.72	-14.86	-13.30	-14.39	-10.80
	-16.08	-21.81	-15.05	-14.17	-14.24	-11.19
	-13.66	-23.07	-13.19	-17.68	-14.06	-12.49
150	-11.40	-24.30	-11.18	-20.58	-13.96	-13.10
	-10.20	-25.58	-10.07	-17.42	-13.92	-12.31
	-9.85	-26.09	-9.75	-15.11	-13.77	-11.37
	-10.13	-25.70	-10.01	-13.75	-13.76	-10.74
	-10.68	-24.59	-10.51	-13.42	-13.74	-10.57
	-11.05	-23.06	-10.79	-13.55	-13.75	-10.64
180	-10.91	-21.58	-10.55	-14.10	-13.78	-10.92
	-17.30	-20.20	-15.50	-15.93	-13.77	-11.70
	-15.34	-18.87	-13.75	-16.83	-13.90	-12.11
	-14.14	-17.90	-12.61	-16.90	-14.04	-12.23
	-13.74	-16.95	-12.05	-16.73	-14.05	-12.17
	-14.43	-16.15	-12.19	-15.18	-14.17	-11.64
210	-16.55	-15.47	-12.97	-14.14	-14.31	-11.21
	-19.51	-14.85	-13.58	-14.20	-14.41	-11.29
	-21.31	-14.40	-13.59	-14.70	-14.52	-11.60
	-19.21	-13.95	-12.82	-17.12	-14.59	-12.66
	-17.22	-13.66	-12.07	-17.02	-14.67	-12.68
	-17.07	-13.39	-11.84	-15.11	-14.60	-11.84
240	-17.53	-13.12	-11.78	-14.01	-14.55	-11.26
	-19.26	-12.94	-12.03	-14.15	-14.51	-11.31
	-20.20	-12.89	-12.15	-16.13	-14.39	-12.16
	-18.53	-12.86	-11.82	-19.80	-14.18	-13.12
	-17.57	-12.85	-11.59	-20.17	-13.99	-13.05
	-17.24	-12.95	-11.58	-17.95	-13.67	-12.29
270	-17.27	-13.14	-11.72	-17.60	-13.40	-12.00
	-17.73	-13.29	-11.95	-20.05	-13.11	-12.31
	-18.69	-13.54	-12.38	-21.66	-12.79	-12.26
	-19.32	-13.92	-12.81	-20.87	-12.44	-11.86
	-19.62	-14.26	-13.15	-19.24	-12.13	-11.36
	-18.96	-14.69	-13.31	-19.76	-11.80	-11.15
300	-17.88	-15.16	-13.30	-20.32	-11.47	-10.94
	-17.00	-15.76	-13.33	-22.25	-11.20	-10.87
	-16.96	-16.44	-13.68	-21.71	-10.91	-10.56
	-17.24	-17.18	-14.20	-20.55	-10.67	-10.25
	-17.78	-18.20	-14.98	-19.85	-10.48	-10.00
	-17.76	-19.37	-15.48	-19.00	-10.27	-9.72
330	-17.65	-20.49	-15.83	-17.92	-10.15	-9.48
	-17.60	-22.02	-16.26	-16.88	-10.01	-9.19
	-17.67	-23.86	-16.73	-16.19	-9.96	-9.03
	-17.91	-26.39	-17.33	-15.92	-9.87	-8.90
	-18.08	-29.24	-17.76	-15.87	-9.85	-8.88
	-18.10	-33.52	-17.98	-15.91	-9.89	-8.92

ピーク値	-9.85	-12.85	-9.75	-12.85	-9.85	-8.88
平均値	-16.44	-17.14	-13.76	-16.58	-12.94	-11.38

平均化

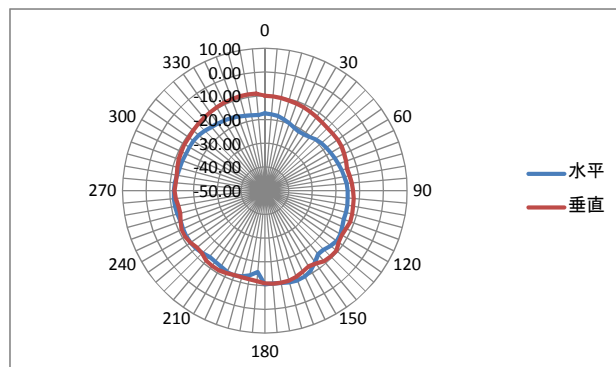


ピーク値	水平平均	垂直平均	平均化利得
-8.88	-13.76	-11.38	-11.38 dBi

メイン1510.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-15.45	-31.07	-15.33	-16.84	-11.76	-10.58
	-15.92	-31.98	-15.82	-16.61	-11.94	-10.67
	-16.80	-29.38	-16.57	-16.32	-12.04	-10.66
	-18.11	-26.66	-17.54	-16.99	-12.24	-10.99
	-19.51	-24.54	-18.32	-17.82	-12.47	-11.35
30	-21.29	-22.71	-18.93	-19.72	-12.73	-11.94
	-22.34	-21.41	-18.84	-20.34	-13.00	-12.26
	-23.97	-20.27	-18.72	-21.59	-13.33	-12.72
	-25.70	-19.51	-18.58	-20.68	-13.71	-12.92
	-27.55	-18.72	-18.19	-20.95	-14.17	-13.34
60	-30.22	-18.12	-17.86	-19.96	-14.54	-13.44
	-36.35	-17.79	-17.73	-19.61	-15.02	-13.72
	-33.54	-17.33	-17.23	-19.72	-15.46	-14.08
	-27.15	-17.18	-16.76	-19.42	-15.93	-14.33
	-25.68	-16.99	-16.44	-19.09	-16.28	-14.45
90	-25.05	-16.87	-16.25	-18.40	-16.55	-14.37
	-24.18	-16.80	-16.07	-16.62	-16.79	-13.69
	-21.93	-16.77	-15.62	-15.78	-16.95	-13.32
	-20.64	-16.93	-15.39	-15.45	-17.00	-13.15
	-19.68	-16.99	-15.12	-14.91	-16.98	-12.81
120	-18.88	-17.20	-14.95	-14.15	-16.78	-12.26
	-18.17	-17.54	-14.83	-13.22	-16.59	-11.57
	-17.62	-17.80	-14.69	-13.02	-16.35	-11.36
	-16.57	-18.27	-14.33	-14.17	-16.07	-12.01
	-15.43	-19.03	-13.86	-15.14	-15.80	-12.45
150	-14.33	-19.60	-13.20	-14.19	-15.44	-11.76
	-14.20	-20.47	-13.28	-11.89	-15.20	-10.23
	-15.11	-21.60	-14.23	-11.80	-14.95	-10.09
	-16.28	-22.97	-15.44	-12.26	-14.73	-10.31
	-14.70	-24.72	-14.29	-14.94	-14.52	-11.71
180	-12.39	-26.97	-12.24	-17.41	-14.37	-12.62
	-11.07	-29.61	-11.01	-15.95	-14.19	-11.97
	-10.46	-32.98	-10.44	-14.32	-14.19	-11.25
	-10.59	-32.84	-10.57	-12.83	-14.11	-10.41
	-11.12	-30.02	-11.07	-12.72	-14.04	-10.31
210	-11.62	-26.17	-11.47	-12.75	-14.09	-10.36
	-11.67	-23.77	-11.41	-13.21	-14.11	-10.63
	-17.08	-21.82	-15.82	-16.15	-14.15	-12.03
	-16.81	-20.02	-15.11	-17.05	-14.16	-12.36
	-16.81	-18.53	-14.57	-17.26	-14.35	-12.56
240	-16.92	-17.37	-14.13	-16.80	-14.40	-12.43
	-17.35	-16.40	-13.84	-15.29	-14.55	-11.89
	-17.84	-15.56	-13.54	-14.29	-14.64	-11.45
	-17.89	-14.81	-13.07	-14.47	-14.80	-11.62
	-17.32	-14.19	-12.47	-15.03	-14.92	-11.96
270	-16.55	-13.59	-11.81	-16.77	-14.94	-12.75
	-15.89	-13.14	-11.29	-16.05	-14.98	-12.48
	-15.82	-12.75	-11.01	-14.18	-15.06	-11.59
	-16.80	-12.43	-11.08	-13.32	-14.96	-11.05
	-18.66	-12.22	-11.33	-13.89	-14.89	-11.35
300	-20.47	-11.98	-11.40	-15.55	-14.81	-12.15
	-21.36	-11.94	-11.47	-18.62	-14.64	-13.18
	-20.85	-11.86	-11.34	-18.50	-14.42	-12.98
	-19.54	-11.80	-11.13	-16.73	-14.13	-12.23
	-18.56	-11.86	-11.02	-16.67	-13.86	-12.03
330	-17.86	-12.01	-11.01	-18.36	-13.58	-12.33
	-18.09	-12.11	-11.14	-19.22	-13.34	-12.35
	-18.88	-12.33	-11.46	-18.72	-13.05	-12.01
	-21.15	-12.61	-12.04	-17.23	-12.66	-11.36
	-21.74	-12.97	-12.43	-17.27	-12.34	-11.13
	-19.99	-13.34	-12.49	-17.32	-12.07	-10.94
	-18.72	-13.85	-12.62	-18.40	-11.82	-10.95
	-18.10	-14.39	-12.85	-18.89	-11.51	-10.78
	-19.60	-15.07	-13.76	-19.07	-11.25	-10.59
	-21.73	-15.76	-14.78	-18.75	-11.05	-10.37
	-20.40	-16.75	-15.19	-17.24	-10.85	-9.95
	-17.34	-17.79	-14.54	-16.33	-10.73	-9.67
	-15.06	-18.93	-13.56	-15.90	-10.59	-9.47
	-14.11	-20.50	-13.21	-15.79	-10.53	-9.40
	-14.18	-22.45	-13.57	-15.85	-10.46	-9.36
	-15.18	-24.52	-14.70	-15.88	-10.50	-9.40
	-17.14	-27.53	-16.76	-16.09	-10.51	-9.45

ピーク値	-10.46	-11.80	-10.44	-11.80	-10.46	-9.36
平均値	-16.64	-16.34	-13.48	-15.82	-13.56	-11.53

平均化

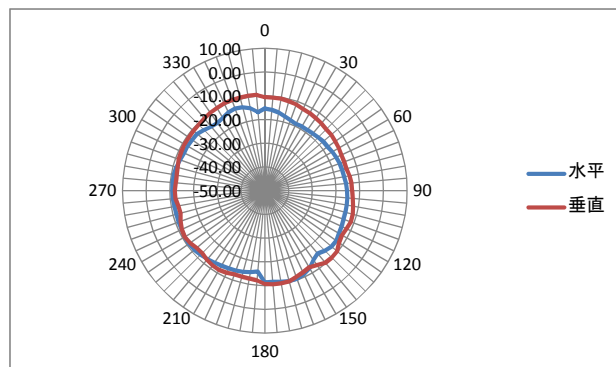


ピーク値	水平平均	垂直平均	平均化利得
-9.36	-13.48	-11.53	-11.53 dBi

メイン1575.42MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-10.93	-20.92	-10.52	-11.95	-9.96	-7.83
	-11.00	-22.19	-10.68	-12.44	-9.99	-8.03
	-11.08	-23.16	-10.82	-12.65	-10.12	-8.19
	-11.57	-23.01	-11.27	-13.49	-10.26	-8.57
	-12.29	-22.15	-11.87	-14.24	-10.48	-8.96
30	-13.70	-20.79	-12.92	-15.50	-10.78	-9.51
	-15.36	-19.55	-13.96	-16.55	-11.14	-10.04
	-17.05	-18.34	-14.64	-16.83	-11.54	-10.41
	-17.96	-17.38	-14.65	-16.34	-12.10	-10.71
	-17.40	-16.45	-13.89	-15.04	-12.64	-10.66
60	-16.38	-15.64	-12.99	-13.73	-13.27	-10.48
	-16.20	-14.98	-12.54	-13.11	-14.00	-10.52
	-17.80	-14.48	-12.82	-13.11	-14.91	-10.90
	-21.28	-14.03	-13.28	-14.08	-15.84	-11.86
	-24.83	-13.61	-13.29	-15.26	-16.89	-12.99
90	-22.70	-13.44	-12.95	-15.66	-18.00	-13.66
	-19.91	-13.15	-12.32	-13.90	-19.15	-12.76
	-18.95	-13.07	-12.07	-11.84	-20.16	-11.25
	-19.41	-12.95	-12.06	-10.87	-21.14	-10.48
	-19.25	-12.96	-12.04	-11.34	-21.43	-10.94
120	-18.77	-13.05	-12.02	-11.85	-21.04	-11.35
	-18.33	-13.18	-12.02	-11.00	-20.42	-10.53
	-17.71	-13.40	-12.03	-10.07	-19.37	-9.58
	-15.86	-13.63	-11.59	-10.35	-18.24	-9.70
	-14.28	-14.06	-11.16	-11.47	-17.15	-10.43
150	-13.68	-14.42	-11.02	-11.43	-16.34	-10.21
	-13.96	-14.95	-11.42	-9.87	-15.60	-8.84
	-14.17	-15.57	-11.80	-9.41	-14.87	-8.32
	-13.66	-16.32	-11.78	-9.76	-14.26	-8.44
	-12.53	-17.01	-11.20	-11.51	-13.66	-9.44
180	-11.30	-17.75	-10.41	-12.90	-13.24	-10.06
	-10.40	-18.55	-9.78	-12.20	-12.85	-9.50
	-9.89	-19.35	-9.43	-10.88	-12.59	-8.65
	-9.67	-19.77	-9.27	-9.71	-12.34	-7.82
	-9.67	-19.84	-9.27	-9.10	-12.19	-7.36
210	-9.64	-19.53	-9.22	-8.85	-12.05	-7.15
	-9.47	-18.89	-9.00	-8.80	-12.07	-7.12
	-11.98	-17.84	-10.98	-13.09	-12.13	-9.57
	-11.53	-16.77	-10.39	-13.68	-12.20	-9.86
	-11.88	-15.70	-10.37	-13.73	-12.43	-10.02
240	-12.31	-14.84	-10.38	-13.97	-12.72	-10.29
	-13.76	-13.98	-10.86	-13.57	-13.03	-10.28
	-15.73	-13.11	-11.21	-13.88	-13.46	-10.66
	-17.51	-12.40	-11.23	-14.68	-13.96	-11.29
	-17.27	-11.68	-10.62	-15.64	-14.55	-12.05
270	-16.08	-11.18	-9.96	-16.02	-15.32	-12.65
	-14.90	-10.67	-9.28	-13.94	-16.00	-11.84
	-15.03	-10.22	-8.98	-11.64	-16.96	-10.52
	-16.08	-9.88	-8.94	-11.04	-17.96	-10.23
	-17.65	-9.51	-8.89	-11.85	-18.96	-11.08
300	-19.42	-9.29	-8.89	-14.25	-19.98	-13.22
	-20.52	-9.08	-8.77	-16.31	-20.72	-14.96
	-20.89	-8.96	-8.69	-14.42	-21.08	-13.57
	-22.18	-8.84	-8.64	-12.74	-20.89	-12.12
	-22.77	-8.80	-8.63	-13.36	-19.91	-12.49
330	-23.81	-8.81	-8.67	-16.35	-18.85	-14.41
	-23.32	-8.91	-8.76	-17.53	-17.74	-14.62
	-24.21	-9.00	-8.87	-14.94	-16.58	-12.67
	-23.77	-9.18	-9.03	-12.90	-15.49	-11.00
	-21.59	-9.46	-9.20	-12.49	-14.65	-10.43
	-20.05	-9.75	-9.36	-13.27	-13.74	-10.49
	-18.64	-10.13	-9.56	-14.68	-12.87	-10.68
	-17.43	-10.51	-9.70	-15.36	-12.24	-10.52
	-16.51	-11.09	-9.99	-14.87	-11.70	-9.99
	-16.10	-11.57	-10.25	-14.26	-11.24	-9.48
	-15.34	-12.35	-10.58	-13.48	-10.73	-8.88
	-14.36	-12.98	-10.61	-12.97	-10.45	-8.52
	-13.42	-13.90	-10.64	-12.95	-10.11	-8.29
	-12.68	-14.77	-10.59	-13.05	-9.88	-8.17
	-12.42	-15.82	-10.78	-13.17	-9.67	-8.07
	-12.36	-17.00	-11.08	-13.28	-9.55	-8.01
	-12.51	-18.03	-11.44	-13.47	-9.47	-8.02

ピーク値	-9.47	-8.80	-8.63	-8.80	-9.47	-7.12
平均値	-14.37	-12.89	-10.56	-12.63	-13.34	-9.96

平均化

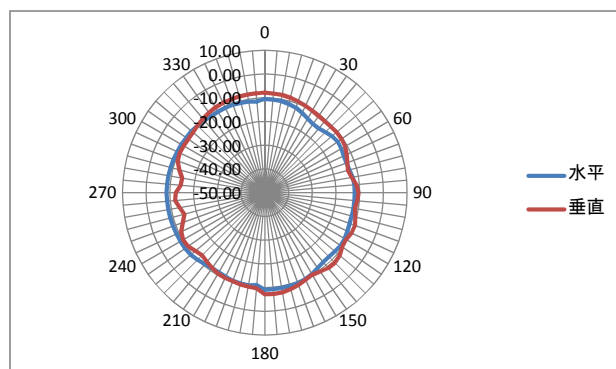


ピーク値	水平平均	垂直平均	平均化利得
-7.12	-10.56	-9.96	-9.96 dBi

メイン1744.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-18.32	-20.01	-16.07	-16.60	-10.44	-9.50
	-16.02	-19.91	-14.53	-15.81	-10.73	-9.55
	-14.86	-19.70	-13.62	-15.07	-10.94	-9.52
	-12.68	-19.37	-11.84	-15.23	-11.19	-9.75
	-11.42	-18.74	-10.68	-16.16	-11.40	-10.14
30	-10.42	-18.18	-9.75	-17.10	-11.60	-10.52
	-10.77	-17.70	-9.97	-16.97	-11.90	-10.72
	-10.82	-17.25	-9.93	-15.67	-12.17	-10.57
	-11.53	-16.91	-10.43	-14.49	-12.30	-10.25
	-11.30	-16.58	-10.17	-13.38	-12.51	-9.91
60	-10.86	-16.29	-9.77	-12.46	-12.60	-9.52
	-10.07	-16.26	-9.13	-13.30	-12.66	-9.96
	-9.86	-16.37	-8.98	-17.53	-12.56	-11.36
	-10.01	-16.57	-9.14	-26.15	-12.43	-12.25
	-9.94	-16.78	-9.12	-18.82	-12.35	-11.47
90	-8.41	-17.20	-7.87	-13.82	-12.19	-9.92
	-6.56	-17.83	-6.25	-12.62	-12.00	-9.29
	-6.52	-18.24	-6.24	-15.97	-11.73	-10.34
	-8.18	-19.28	-7.86	-15.34	-11.58	-10.06
	-10.06	-20.34	-9.67	-11.21	-11.31	-8.25
120	-8.81	-21.06	-8.56	-9.78	-11.06	-7.36
	-6.95	-22.56	-6.84	-10.46	-10.81	-7.62
	-7.13	-24.00	-7.04	-10.85	-10.57	-7.70
	-7.73	-24.64	-7.65	-9.67	-10.23	-6.93
	-7.00	-25.47	-6.94	-9.39	-9.76	-6.56
150	-5.06	-24.93	-5.01	-11.81	-9.31	-7.37
	-4.16	-23.54	-4.11	-12.60	-8.94	-7.39
	-4.95	-22.68	-4.88	-10.75	-8.44	-6.43
	-7.14	-20.83	-6.96	-8.22	-7.95	-5.07
	-9.23	-19.51	-8.84	-9.08	-7.45	-5.18
180	-9.02	-18.33	-8.54	-10.12	-7.01	-5.28
	-7.21	-17.01	-6.77	-10.96	-6.56	-5.21
	-6.33	-15.97	-5.88	-11.75	-6.15	-5.10
	-6.68	-15.05	-6.09	-10.54	-5.74	-4.50
	-8.26	-14.13	-7.26	-10.47	-5.41	-4.23
210	-11.43	-13.40	-9.29	-9.97	-5.08	-3.86
	-17.04	-12.60	-11.26	-9.79	-4.85	-3.64
	-13.57	-12.00	-9.70	-14.84	-4.64	-4.25
	-12.66	-11.40	-8.97	-14.65	-4.45	-4.05
	-9.31	-10.84	-7.00	-15.07	-4.33	-3.98
240	-7.18	-10.28	-5.45	-15.37	-4.22	-3.90
	-6.39	-9.90	-4.79	-14.38	-4.19	-3.80
	-6.81	-9.51	-4.94	-14.03	-4.16	-3.73
	-8.82	-9.16	-5.97	-14.29	-4.18	-3.78
	-11.89	-8.89	-7.12	-16.57	-4.22	-3.98
270	-13.05	-8.66	-7.31	-20.97	-4.33	-4.24
	-11.90	-8.38	-6.78	-15.56	-4.44	-4.11
	-11.19	-8.36	-6.54	-11.05	-4.65	-3.75
	-11.03	-8.29	-6.44	-10.26	-4.74	-3.67
	-9.22	-8.22	-5.68	-12.68	-4.93	-4.25
300	-6.62	-8.28	-4.36	-17.23	-5.12	-4.86
	-5.59	-8.27	-3.72	-18.08	-5.34	-5.11
	-6.85	-8.40	-4.55	-15.11	-5.57	-5.11
	-9.99	-8.55	-6.20	-16.10	-5.73	-5.35
	-12.50	-8.70	-7.19	-22.09	-5.95	-5.84
330	-10.60	-8.88	-6.64	-27.01	-6.18	-6.15
	-9.31	-9.09	-6.19	-22.20	-6.27	-6.16
	-9.72	-9.53	-6.61	-24.34	-6.45	-6.38
	-10.84	-9.83	-7.29	-26.88	-6.69	-6.65
	-12.43	-10.10	-8.10	-21.85	-6.81	-6.67
	-13.59	-10.54	-8.79	-16.32	-6.96	-6.48
	-15.03	-11.02	-9.57	-15.73	-7.14	-6.58
	-16.38	-11.62	-10.37	-18.84	-7.34	-7.05
	-18.10	-12.22	-11.22	-27.33	-7.47	-7.42
	-18.98	-12.98	-12.01	-27.94	-7.61	-7.57
	-18.39	-13.77	-12.48	-26.11	-7.79	-7.73
	-18.69	-14.68	-13.23	-20.99	-8.04	-7.83
	-19.65	-15.84	-14.33	-16.63	-8.17	-7.59
	-23.67	-17.04	-16.19	-14.53	-8.41	-7.46
	-28.38	-18.27	-17.87	-13.26	-8.63	-7.34
	-22.38	-19.96	-17.99	-12.15	-8.95	-7.25
	-18.27	-21.73	-16.66	-11.76	-9.22	-7.29

ピーク値	-4.16	-8.22	-3.72	-8.22	-4.16	-3.64
平均値	-9.50	-12.66	-7.79	-13.52	-7.26	-6.34

平均化

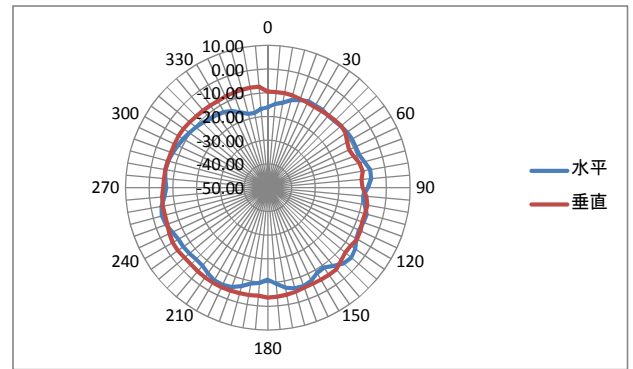


ピーク値	水平平均	垂直平均	平均化利得
-3.64	-7.79	-6.34	-6.34 dBi

メイン1784.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-15.46	-15.60	-12.52	-11.14	-10.86	-7.98
	-14.44	-17.21	-12.60	-11.22	-10.93	-8.06
	-14.37	-19.05	-13.10	-11.47	-11.06	-8.25
	-13.33	-21.02	-12.64	-12.05	-11.23	-8.61
	-12.79	-24.45	-12.50	-13.37	-11.33	-9.22
30	-11.82	-29.04	-11.73	-14.55	-11.42	-9.70
	-11.16	-34.38	-11.13	-14.97	-11.50	-9.89
	-10.13	-31.67	-10.09	-14.21	-11.66	-9.74
	-9.77	-26.56	-9.68	-12.79	-11.63	-9.16
	-8.92	-23.67	-8.78	-10.57	-11.74	-8.10
60	-8.40	-21.08	-8.17	-9.44	-11.67	-7.40
	-7.94	-19.18	-7.62	-9.36	-11.53	-7.30
	-8.14	-18.00	-7.72	-11.05	-11.49	-8.25
	-9.16	-16.65	-8.45	-13.52	-11.36	-9.29
	-10.37	-15.87	-9.29	-16.15	-11.12	-9.93
90	-10.00	-15.10	-8.83	-15.37	-10.94	-9.60
	-7.75	-14.61	-6.93	-11.65	-10.71	-8.14
	-6.30	-14.15	-5.64	-10.88	-10.55	-7.71
	-6.26	-13.69	-5.54	-12.72	-10.38	-8.39
	-8.03	-13.39	-6.92	-13.10	-10.27	-8.45
120	-9.73	-13.15	-8.10	-10.25	-10.01	-7.12
	-8.99	-13.21	-7.59	-8.59	-9.80	-6.14
	-7.70	-13.16	-6.61	-8.93	-9.58	-6.23
	-7.85	-13.06	-6.71	-8.83	-9.35	-6.07
	-7.54	-13.12	-6.48	-7.88	-9.05	-5.42
150	-5.77	-13.33	-5.07	-8.17	-8.63	-5.38
	-4.37	-13.55	-3.87	-9.67	-8.28	-5.91
	-4.99	-13.85	-4.46	-10.93	-7.80	-6.08
	-7.08	-14.21	-6.31	-9.49	-7.42	-5.32
	-9.82	-14.61	-8.57	-9.66	-6.95	-5.09
180	-9.71	-14.95	-8.57	-10.44	-6.55	-5.06
	-7.38	-15.44	-6.75	-11.40	-6.20	-5.05
	-5.99	-16.04	-5.58	-11.27	-5.83	-4.74
	-5.79	-16.32	-5.42	-9.83	-5.49	-4.13
	-6.41	-16.52	-6.00	-8.73	-5.25	-3.64
210	-8.19	-16.67	-7.61	-8.19	-5.00	-3.30
	-10.43	-16.20	-9.41	-7.42	-4.75	-2.87
	-13.05	-16.09	-11.30	-11.33	-4.61	-3.77
	-12.15	-15.32	-10.44	-10.88	-4.46	-3.57
	-9.18	-14.56	-8.07	-10.85	-4.41	-3.52
240	-7.12	-13.85	-6.29	-12.09	-4.40	-3.72
	-6.24	-13.12	-5.43	-12.42	-4.37	-3.73
	-6.47	-12.32	-5.47	-14.27	-4.45	-4.02
	-8.24	-11.70	-6.62	-15.69	-4.52	-4.20
	-10.91	-10.96	-7.92	-19.95	-4.63	-4.51
270	-11.82	-10.36	-8.02	-16.38	-4.77	-4.48
	-11.42	-9.88	-7.57	-10.62	-4.94	-3.90
	-12.34	-9.36	-7.59	-7.85	-5.12	-3.27
	-12.64	-8.93	-7.39	-7.97	-5.33	-3.44
	-10.11	-8.56	-6.25	-10.82	-5.55	-4.42
300	-7.86	-8.24	-5.04	-14.97	-5.82	-5.32
	-8.11	-7.96	-5.02	-14.15	-6.08	-5.45
	-10.64	-7.74	-5.94	-13.79	-6.30	-5.58
	-12.78	-7.61	-6.46	-16.81	-6.54	-6.15
	-10.68	-7.52	-5.81	-24.14	-6.82	-6.74
330	-9.65	-7.42	-5.38	-21.60	-7.03	-6.88
	-10.77	-7.44	-5.79	-21.97	-7.30	-7.16
	-13.47	-7.46	-6.48	-47.44	-7.51	-7.51
	-15.63	-7.51	-6.89	-34.35	-7.63	-7.62
	-16.17	-7.66	-7.08	-20.08	-7.83	-7.58
	-16.80	-7.83	-7.31	-15.94	-7.92	-7.28
	-19.13	-8.12	-7.79	-16.43	-8.10	-7.50
	-19.88	-8.47	-8.16	-20.38	-8.25	-7.99
	-19.08	-8.77	-8.38	-21.71	-8.40	-8.20
	-18.60	-9.19	-8.72	-20.01	-8.52	-8.22
	-21.67	-9.74	-9.47	-18.35	-8.73	-8.28
	-27.28	-10.28	-10.20	-15.95	-8.88	-8.10
	-22.34	-11.04	-10.73	-13.69	-9.03	-7.75
	-17.51	-11.82	-10.78	-12.69	-9.21	-7.60
	-14.05	-12.74	-10.33	-12.26	-9.48	-7.64
	-12.12	-13.67	-9.81	-11.82	-9.66	-7.60
	-10.93	-14.88	-9.46	-11.71	-9.86	-7.68

ピーク値	-4.37	-7.42	-3.87	-7.42	-4.37	-2.87
平均値	-9.49	-11.72	-7.45	-11.79	-7.46	-6.10

平均化

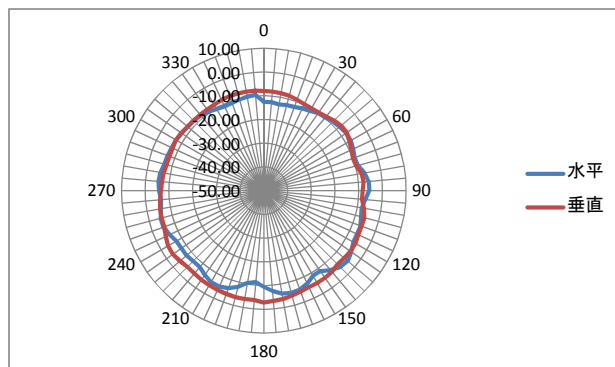


ピーク値	水平平均	垂直平均	平均化利得
-2.87	-7.45	-6.10	-6.10 dBi

メイン1920MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-18.73	-14.55	-13.15	-8.64	-7.95	-5.27
	-18.97	-13.31	-12.27	-8.75	-7.54	-5.09
	-21.48	-12.03	-11.56	-9.52	-7.06	-5.11
	-23.98	-10.87	-10.66	-10.64	-6.64	-5.19
	-37.74	-9.87	-9.87	-11.15	-6.37	-5.12
30	-24.54	-8.94	-8.83	-11.15	-6.10	-4.92
	-17.02	-8.13	-7.61	-10.38	-5.98	-4.63
	-14.32	-7.48	-6.66	-10.98	-5.77	-4.63
	-12.82	-6.94	-5.94	-10.78	-5.60	-4.45
	-13.26	-6.44	-5.62	-9.23	-5.55	-4.00
60	-13.53	-6.03	-5.32	-9.03	-5.48	-3.89
	-13.37	-5.72	-5.03	-9.31	-5.47	-3.97
	-11.83	-5.43	-4.54	-9.25	-5.43	-3.92
	-9.76	-5.30	-3.97	-9.38	-5.48	-3.99
	-8.41	-5.09	-3.43	-9.93	-5.50	-4.16
90	-8.70	-4.98	-3.44	-10.38	-5.57	-4.33
	-9.23	-4.86	-3.50	-10.29	-5.68	-4.39
	-9.14	-4.84	-3.47	-8.83	-5.73	-4.00
	-8.56	-4.92	-3.36	-9.67	-5.85	-4.34
	-8.20	-5.01	-3.31	-11.22	-6.06	-4.90
120	-7.29	-5.14	-3.07	-8.06	-6.09	-3.95
	-6.05	-5.44	-2.72	-5.87	-6.28	-3.06
	-5.43	-5.74	-2.57	-6.52	-6.53	-3.51
	-6.15	-6.06	-3.09	-7.81	-6.70	-4.20
	-7.31	-6.44	-3.84	-6.29	-6.92	-3.58
150	-7.87	-6.96	-4.38	-4.84	-7.25	-2.87
	-8.32	-7.56	-4.91	-5.21	-7.49	-3.19
	-8.85	-8.25	-5.53	-7.35	-7.81	-4.56
	-8.78	-8.84	-5.80	-10.02	-8.03	-5.90
	-7.47	-9.73	-5.44	-9.73	-8.48	-6.05
180	-6.45	-10.62	-5.04	-8.17	-8.60	-5.37
	-6.42	-11.67	-5.29	-7.21	-8.83	-4.93
	-7.22	-12.96	-6.19	-7.16	-9.04	-4.99
	-8.84	-14.70	-7.83	-7.10	-9.40	-5.09
	-10.80	-16.28	-9.71	-7.30	-9.76	-5.34
210	-11.02	-18.82	-10.35	-7.84	-10.09	-5.81
	-10.20	-22.83	-9.97	-8.99	-10.38	-6.62
	-11.25	-29.58	-11.19	-7.40	-10.95	-5.82
	-10.50	-42.71	-10.50	-8.18	-11.59	-6.55
	-9.93	-26.96	-9.84	-9.99	-12.01	-7.87
240	-11.39	-21.85	-11.02	-11.29	-12.63	-8.90
	-14.43	-18.28	-12.93	-10.62	-13.21	-8.72
	-17.26	-16.22	-13.70	-8.26	-14.03	-7.24
	-13.86	-14.66	-11.23	-6.66	-14.84	-6.04
	-11.82	-13.16	-9.43	-6.58	-15.68	-6.08
270	-11.13	-12.17	-8.60	-8.12	-16.50	-7.53
	-12.20	-11.35	-8.74	-8.27	-17.45	-7.78
	-13.75	-10.45	-8.78	-8.23	-18.01	-7.80
	-14.87	-9.89	-8.70	-8.18	-18.81	-7.82
	-15.94	-9.40	-8.53	-7.72	-19.34	-7.43
300	-18.81	-8.98	-8.55	-6.81	-19.57	-6.59
	-19.25	-8.72	-8.35	-7.26	-20.21	-7.05
	-16.05	-8.43	-7.73	-10.01	-20.36	-9.63
	-14.61	-8.23	-7.33	-12.64	-20.94	-12.04
	-15.03	-8.23	-7.41	-12.15	-21.27	-11.65
330	-14.76	-8.16	-7.30	-12.34	-21.52	-11.85
	-14.46	-8.15	-7.24	-14.12	-21.96	-13.46
	-13.69	-8.19	-7.11	-12.80	-22.05	-12.31
	-13.79	-8.35	-7.26	-10.90	-21.80	-10.56
	-13.70	-8.64	-7.46	-10.86	-22.13	-10.55
	-14.35	-8.89	-7.80	-12.01	-21.42	-11.54
	-15.30	-9.25	-8.28	-11.63	-20.65	-11.12
	-15.93	-9.67	-8.75	-10.03	-20.36	-9.64
	-15.65	-10.22	-9.13	-8.39	-19.35	-8.06
	-15.74	-10.77	-9.57	-8.58	-18.12	-8.12
	-16.45	-11.72	-10.46	-9.40	-17.15	-8.72
	-17.92	-12.57	-11.46	-10.90	-16.40	-9.82
	-19.28	-13.83	-12.74	-10.84	-15.44	-9.55
	-21.63	-14.89	-14.05	-9.47	-14.60	-8.30
	-22.74	-16.52	-15.59	-7.73	-13.63	-6.73
	-23.30	-18.43	-17.20	-6.99	-12.76	-5.97
	-23.12	-20.26	-18.45	-6.61	-11.75	-5.45

ピーク値	-5.43	-4.84	-2.57	-4.84	-5.43	-2.87
平均値	-11.19	-8.84	-6.85	-8.70	-9.18	-5.92

平均化

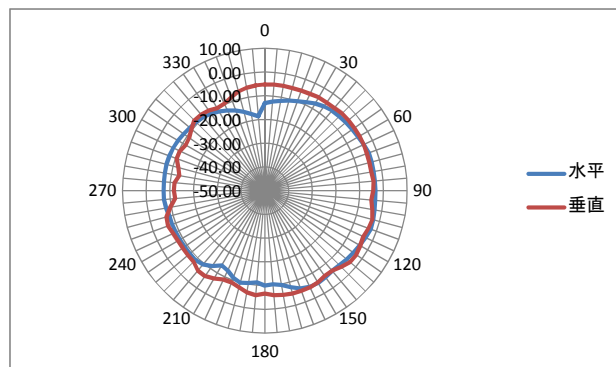


ピーク値	水平平均	垂直平均	平均化利得
-2.57	-6.85	-5.92	-5.92 dBi

メイン1940MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-18.27	-13.86	-12.52	-9.38	-7.85	-5.54
	-18.07	-13.00	-11.82	-9.61	-7.33	-5.31
	-21.04	-11.73	-11.25	-10.22	-6.99	-5.30
	-24.44	-10.67	-10.49	-11.29	-6.69	-5.40
	-27.14	-9.78	-9.70	-12.08	-6.24	-5.23
30	-20.85	-8.83	-8.57	-12.52	-5.93	-5.06
	-16.96	-8.09	-7.56	-12.63	-5.67	-4.87
	-15.43	-7.44	-6.80	-13.08	-5.49	-4.79
	-13.90	-6.90	-6.11	-12.01	-5.26	-4.43
	-12.94	-6.47	-5.58	-10.16	-5.00	-3.85
60	-11.21	-6.09	-4.92	-9.13	-4.88	-3.49
	-10.95	-5.83	-4.67	-8.99	-4.75	-3.36
	-10.66	-5.53	-4.36	-9.23	-4.74	-3.42
	-9.78	-5.25	-3.94	-9.82	-4.63	-3.48
	-8.00	-5.06	-3.27	-10.41	-4.67	-3.64
90	-7.48	-4.97	-3.03	-10.17	-4.65	-3.58
	-7.58	-4.81	-2.97	-10.15	-4.72	-3.62
	-8.22	-4.71	-3.11	-9.32	-4.83	-3.51
	-7.91	-4.73	-3.03	-10.04	-4.91	-3.74
	-7.31	-4.79	-2.86	-11.34	-5.05	-4.14
120	-6.55	-4.87	-2.62	-8.56	-5.25	-3.59
	-5.48	-5.11	-2.28	-6.26	-5.41	-2.81
	-4.63	-5.38	-1.98	-6.25	-5.76	-2.99
	-5.01	-5.67	-2.32	-6.76	-5.93	-3.31
	-6.17	-6.07	-3.11	-5.88	-6.25	-3.05
150	-7.64	-6.45	-3.99	-4.71	-6.67	-2.57
	-8.88	-6.95	-4.80	-5.12	-6.89	-2.90
	-9.80	-7.62	-5.57	-6.84	-7.22	-4.02
	-8.61	-8.14	-5.36	-8.85	-7.56	-5.15
	-6.75	-8.96	-4.70	-8.38	-8.02	-5.18
180	-5.36	-9.82	-4.03	-6.94	-8.29	-4.55
	-5.79	-10.70	-4.57	-6.12	-8.75	-4.23
	-7.27	-11.79	-5.96	-6.83	-9.11	-4.82
	-10.16	-13.20	-8.41	-7.37	-9.51	-5.30
	-14.77	-14.59	-11.67	-8.13	-9.89	-5.91
210	-16.32	-16.29	-13.29	-8.48	-10.26	-6.27
	-11.91	-18.53	-11.05	-9.39	-10.70	-6.99
	-12.46	-21.75	-11.98	-8.62	-11.11	-6.68
	-10.21	-25.83	-10.10	-9.83	-11.44	-7.55
	-9.86	-33.13	-9.84	-12.46	-11.75	-9.08
240	-10.92	-35.35	-10.90	-15.10	-12.26	-10.44
	-14.57	-26.25	-14.29	-13.33	-12.59	-9.94
	-17.46	-21.92	-16.13	-10.33	-12.81	-8.39
	-12.65	-19.83	-11.89	-8.67	-13.31	-7.39
	-10.08	-17.71	-9.38	-8.22	-13.68	-7.13
270	-9.20	-16.18	-8.41	-10.74	-14.01	-9.06
	-10.02	-14.85	-8.78	-10.80	-14.41	-9.23
	-10.99	-13.75	-9.15	-10.41	-14.93	-9.10
	-12.28	-12.87	-9.56	-9.65	-15.17	-8.58
	-13.77	-12.16	-9.88	-8.69	-15.35	-7.84
300	-15.35	-11.59	-10.06	-8.34	-16.10	-7.66
	-14.20	-11.11	-9.38	-9.25	-15.74	-8.37
	-12.53	-10.65	-8.48	-12.91	-16.04	-11.19
	-11.54	-10.41	-7.93	-15.09	-16.56	-12.75
	-11.77	-10.21	-7.91	-14.34	-16.50	-12.27
330	-12.75	-10.02	-8.16	-14.07	-16.79	-12.21
	-12.76	-10.08	-8.20	-14.16	-16.93	-12.32
	-11.83	-10.15	-7.90	-11.60	-17.31	-10.56
	-11.16	-10.28	-7.69	-9.93	-17.68	-9.25
	-11.45	-10.49	-7.93	-9.52	-17.71	-8.91
	-13.33	-10.82	-8.89	-10.40	-17.52	-9.63
	-14.91	-11.20	-9.66	-10.55	-16.88	-9.64
	-15.92	-11.79	-10.37	-9.12	-16.81	-8.44
	-15.72	-12.35	-10.71	-7.52	-16.28	-6.98
	-16.18	-13.12	-11.38	-7.44	-15.81	-6.85
	-15.86	-14.14	-11.90	-7.91	-15.12	-7.15
	-16.64	-14.94	-12.70	-9.37	-14.64	-8.24
	-18.04	-16.18	-14.00	-9.79	-14.00	-8.39
	-20.43	-17.81	-15.91	-9.01	-13.68	-7.73
	-22.00	-19.88	-17.80	-8.28	-13.19	-7.07
	-24.65	-21.89	-20.05	-7.41	-12.58	-6.26
	-30.06	-22.25	-21.59	-6.75	-12.02	-5.62

ピーク値	-4.63	-4.71	-1.98	-4.71	-4.63	-2.57
平均値	-10.49	-9.22	-6.80	-9.04	-8.53	-5.76

平均化

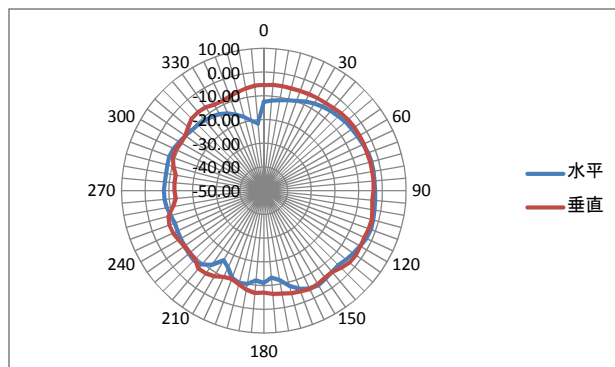


ピーク値	水平平均	垂直平均	平均化利得
-1.98	-6.80	-5.76	-5.76 dBi

メイン1960MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-21.35	-11.98	-11.51	-9.69	-5.90	-4.38
	-22.75	-11.28	-10.98	-9.84	-5.78	-4.34
	-24.95	-10.57	-10.41	-11.26	-5.66	-4.60
	-33.08	-9.95	-9.92	-12.08	-5.51	-4.65
	-28.38	-9.21	-9.16	-13.41	-5.47	-4.82
30	-22.06	-8.68	-8.48	-14.08	-5.45	-4.89
	-17.57	-8.13	-7.66	-13.81	-5.34	-4.76
	-15.24	-7.76	-7.05	-14.10	-5.36	-4.82
	-13.91	-7.37	-6.50	-13.14	-5.29	-4.63
	-13.64	-7.00	-6.14	-11.59	-5.24	-4.34
60	-12.85	-6.73	-5.78	-11.05	-5.15	-4.15
	-11.97	-6.65	-5.53	-10.95	-5.22	-4.19
	-10.61	-6.39	-4.99	-10.52	-5.18	-4.07
	-10.30	-6.34	-4.87	-10.95	-5.17	-4.15
	-9.71	-6.16	-4.57	-12.52	-5.11	-4.39
90	-9.40	-6.15	-4.47	-12.87	-5.06	-4.39
	-8.68	-6.11	-4.20	-12.25	-5.16	-4.39
	-9.29	-6.11	-4.41	-10.95	-5.07	-4.07
	-9.40	-6.14	-4.46	-12.17	-5.13	-4.34
	-8.99	-6.30	-4.43	-13.97	-5.12	-4.58
120	-8.05	-6.36	-4.11	-11.11	-5.16	-4.17
	-7.06	-6.65	-3.84	-8.43	-5.24	-3.54
	-6.26	-6.88	-3.55	-8.20	-5.32	-3.51
	-5.87	-7.24	-3.49	-8.24	-5.37	-3.56
	-6.53	-7.65	-4.04	-7.12	-5.49	-3.22
150	-7.62	-8.09	-4.84	-6.11	-5.61	-2.84
	-8.70	-8.54	-5.61	-6.54	-5.77	-3.12
	-10.84	-9.20	-6.94	-8.66	-5.98	-4.11
	-11.11	-9.76	-7.37	-11.82	-6.16	-5.12
	-8.46	-10.44	-6.33	-11.05	-6.27	-5.02
180	-5.92	-11.27	-4.80	-8.64	-6.51	-4.43
	-5.06	-11.95	-4.25	-7.18	-6.79	-3.97
	-5.75	-13.12	-5.02	-7.73	-7.00	-4.34
	-7.97	-14.11	-7.02	-8.72	-7.31	-4.95
	-11.95	-15.59	-10.39	-10.62	-7.72	-5.92
210	-19.45	-17.38	-15.29	-12.16	-8.04	-6.62
	-20.55	-19.50	-16.98	-13.77	-8.34	-7.25
	-15.36	-22.03	-14.52	-12.54	-8.85	-7.30
	-11.57	-24.67	-11.37	-14.95	-9.14	-8.13
	-10.48	-27.07	-10.38	-19.44	-9.62	-9.19
240	-10.65	-27.14	-10.55	-19.30	-10.09	-9.59
	-14.36	-23.65	-13.88	-14.65	-10.54	-9.12
	-19.50	-20.95	-17.15	-11.60	-11.10	-8.33
	-14.68	-18.73	-13.24	-10.51	-11.63	-8.02
	-12.45	-16.92	-11.12	-10.02	-11.99	-7.88
270	-11.29	-15.79	-9.97	-12.24	-12.59	-9.40
	-11.68	-14.83	-9.96	-11.97	-12.83	-9.37
	-12.77	-13.80	-10.25	-11.37	-13.38	-9.25
	-15.57	-13.09	-11.14	-10.51	-13.75	-8.82
	-18.43	-12.63	-11.61	-9.77	-14.01	-8.38
300	-17.28	-12.02	-10.89	-10.03	-14.41	-8.68
	-15.63	-11.63	-10.17	-11.48	-14.36	-9.68
	-13.81	-11.37	-9.41	-16.45	-14.44	-12.32
	-12.83	-11.28	-8.97	-19.28	-14.31	-13.11
	-12.99	-11.07	-8.91	-16.71	-13.89	-12.06
330	-14.90	-11.02	-9.53	-15.99	-13.81	-11.76
	-15.21	-10.94	-9.56	-17.44	-13.41	-11.96
	-13.21	-11.11	-9.03	-15.06	-12.79	-10.77
	-12.28	-11.11	-8.64	-11.73	-12.44	-9.06
	-13.32	-11.41	-9.25	-11.10	-11.92	-8.48
	-16.31	-11.76	-10.45	-11.90	-11.38	-8.62
	-19.76	-12.07	-11.39	-13.23	-10.61	-8.71
	-19.90	-12.64	-11.89	-11.89	-10.18	-7.94
	-17.75	-13.33	-11.99	-9.68	-9.85	-6.75
	-17.49	-13.93	-12.35	-9.16	-9.35	-6.24
	-18.94	-14.72	-13.32	-9.66	-9.01	-6.32
	-22.34	-15.54	-14.71	-11.30	-8.56	-6.71
	-27.05	-16.24	-15.90	-12.23	-8.28	-6.81
	-29.75	-17.30	-17.06	-11.26	-8.02	-6.33
	-29.42	-17.90	-17.61	-10.49	-7.71	-5.87
	-29.80	-17.66	-17.40	-9.81	-7.50	-5.49
	-25.13	-17.37	-16.69	-10.12	-7.30	-5.47

ピーク値	-5.06	-6.11	-3.49	-6.11	-5.06	-2.84
平均値	-11.51	-10.14	-7.76	-10.91	-7.45	-5.84

平均化

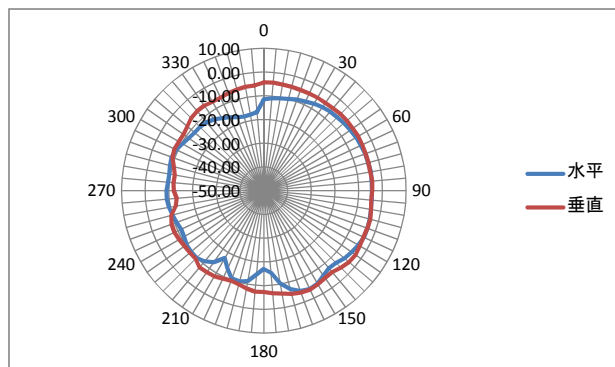


ピーク値	水平平均	垂直平均	平均化利得
-2.84	-7.76	-5.84	-5.84 dBi

メイン1980MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-16.64	-12.88	-11.36	-8.34	-7.02	-4.62
	-17.83	-12.19	-11.14	-8.56	-6.78	-4.57
	-19.39	-11.45	-10.81	-9.55	-6.73	-4.90
	-22.08	-10.76	-10.45	-11.25	-6.55	-5.28
	-29.18	-10.08	-10.02	-14.83	-6.40	-5.82
30	-27.51	-9.51	-9.44	-18.12	-6.30	-6.02
	-18.92	-8.83	-8.42	-18.18	-6.21	-5.94
	-16.82	-8.44	-7.85	-17.95	-6.00	-5.73
	-17.15	-8.00	-7.50	-16.17	-5.91	-5.52
	-17.96	-7.58	-7.20	-13.21	-5.89	-5.15
60	-16.63	-7.21	-6.74	-11.60	-5.80	-4.79
	-14.44	-7.03	-6.30	-12.28	-5.65	-4.80
	-12.51	-6.84	-5.80	-12.47	-5.64	-4.82
	-11.78	-6.71	-5.53	-11.78	-5.58	-4.65
	-11.22	-6.42	-5.18	-12.19	-5.61	-4.74
90	-10.60	-6.33	-4.95	-13.19	-5.50	-4.82
	-9.69	-6.20	-4.59	-14.65	-5.53	-5.03
	-10.15	-6.14	-4.68	-12.57	-5.56	-4.77
	-10.58	-6.05	-4.74	-13.06	-5.54	-4.83
	-10.06	-6.23	-4.72	-15.15	-5.62	-5.16
120	-8.54	-6.26	-4.24	-12.93	-5.66	-4.91
	-7.59	-6.47	-3.98	-9.89	-5.83	-4.39
	-7.11	-6.76	-3.92	-9.69	-5.91	-4.39
	-6.68	-7.00	-3.82	-9.49	-6.03	-4.42
	-6.68	-7.36	-3.99	-7.37	-6.22	-3.74
150	-7.48	-7.75	-4.61	-6.05	-6.41	-3.22
	-8.84	-8.29	-5.55	-6.38	-6.62	-3.49
	-11.66	-8.81	-7.00	-8.78	-6.93	-4.74
	-12.14	-9.50	-7.61	-12.38	-7.11	-5.98
	-8.66	-10.18	-6.34	-11.39	-7.39	-5.93
180	-6.11	-10.97	-4.88	-8.79	-7.70	-5.20
	-5.50	-11.76	-4.58	-8.16	-8.04	-5.09
	-5.89	-12.84	-5.09	-9.05	-8.38	-5.69
	-8.01	-13.88	-7.01	-9.52	-8.87	-6.17
	-11.52	-15.16	-9.96	-11.19	-9.19	-7.07
210	-19.36	-16.42	-14.63	-13.64	-9.65	-8.19
	-24.36	-18.05	-17.14	-17.53	-10.19	-9.46
	-16.64	-19.80	-14.93	-14.12	-10.68	-9.06
	-12.47	-21.79	-11.99	-17.46	-11.10	-10.19
	-11.45	-23.09	-11.16	-24.23	-11.67	-11.43
240	-11.47	-22.93	-11.17	-25.38	-12.14	-11.94
	-16.02	-22.11	-15.06	-16.25	-12.82	-11.20
	-22.30	-20.77	-18.46	-12.69	-13.21	-9.93
	-16.43	-19.54	-14.70	-12.21	-13.78	-9.92
	-12.69	-17.77	-11.51	-13.12	-14.38	-10.69
270	-10.93	-16.69	-9.90	-16.61	-14.72	-12.56
	-10.96	-15.77	-9.72	-14.96	-15.15	-12.04
	-12.54	-14.79	-10.51	-12.71	-15.45	-10.86
	-14.99	-14.23	-11.58	-12.12	-15.73	-10.55
	-16.24	-13.68	-11.76	-12.36	-15.85	-10.76
300	-15.72	-13.27	-11.31	-14.14	-16.23	-12.05
	-14.98	-13.01	-10.87	-16.11	-16.02	-13.06
	-13.39	-12.89	-10.12	-21.74	-15.74	-14.77
	-12.21	-12.77	-9.47	-16.75	-15.53	-13.08
	-12.99	-12.71	-9.84	-15.02	-15.19	-12.09
330	-15.25	-12.86	-10.88	-16.37	-14.77	-12.49
	-14.95	-13.19	-10.97	-17.32	-14.37	-12.59
	-11.93	-13.60	-9.67	-12.22	-14.03	-10.02
	-11.50	-13.73	-9.46	-9.40	-13.59	-8.00
	-13.53	-14.08	-10.79	-9.34	-13.05	-7.80
	-16.70	-14.70	-12.58	-11.08	-12.66	-8.79
	-16.80	-15.35	-13.00	-11.58	-12.07	-8.81
	-16.09	-15.95	-13.01	-10.43	-11.60	-7.96
	-15.53	-16.88	-13.14	-8.54	-11.20	-6.66
	-16.67	-17.61	-14.10	-8.28	-10.84	-6.36
	-18.27	-18.64	-15.44	-9.51	-10.37	-6.91
	-21.34	-19.56	-17.35	-11.32	-10.05	-7.63
	-22.44	-20.65	-18.45	-12.53	-9.57	-7.79
	-23.54	-20.44	-18.71	-12.30	-9.42	-7.61
	-20.29	-20.47	-17.37	-11.72	-9.04	-7.17
	-21.17	-19.85	-17.45	-11.09	-8.76	-6.76
	-19.71	-18.57	-16.09	-10.33	-8.50	-6.31

ピーク値	-5.50	-6.05	-3.82	-6.05	-5.50	-3.22
平均値	-11.91	-10.61	-8.20	-11.49	-8.40	-6.67

平均化

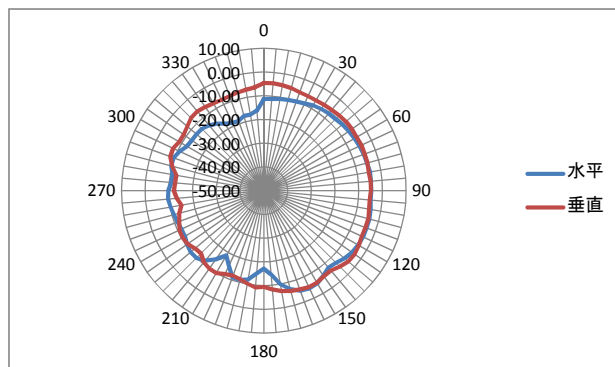


ピーク値	水平平均	垂直平均	平均化利得
-3.22	-8.20	-6.67	-6.67 dBi

メイン2130MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-4.03	-24.28	-3.99	-4.02	-3.82	-0.91
	-4.96	-22.79	-4.89	-4.29	-3.86	-1.06
	-5.78	-19.84	-5.61	-4.70	-3.93	-1.29
	-7.13	-17.12	-6.72	-5.79	-3.99	-1.79
	-9.06	-15.24	-8.12	-7.56	-4.15	-2.52
30	-12.09	-13.89	-9.89	-8.75	-4.33	-2.99
	-13.72	-12.86	-10.25	-7.98	-4.53	-2.91
	-12.54	-12.13	-9.32	-6.42	-4.81	-2.53
	-11.04	-11.51	-8.26	-5.55	-5.08	-2.30
	-11.10	-11.04	-8.06	-5.08	-5.35	-2.20
60	-13.18	-10.44	-8.59	-5.16	-5.65	-2.39
	-17.95	-10.07	-9.42	-5.17	-6.07	-2.58
	-22.69	-9.71	-9.49	-4.11	-6.37	-2.08
	-22.46	-9.30	-9.09	-3.69	-6.74	-1.94
	-34.75	-8.93	-8.92	-4.48	-7.17	-2.61
90	-24.04	-8.77	-8.64	-6.12	-7.37	-3.69
	-23.05	-8.56	-8.41	-6.43	-7.76	-4.03
	-19.26	-8.42	-8.07	-6.39	-8.14	-4.17
	-12.59	-8.28	-6.91	-6.18	-8.34	-4.12
	-9.86	-8.23	-5.96	-6.84	-8.66	-4.64
120	-9.36	-8.04	-5.64	-8.33	-8.92	-5.60
	-9.70	-7.95	-5.73	-9.01	-8.99	-5.99
	-7.83	-7.94	-4.87	-7.00	-9.24	-4.97
	-7.53	-7.96	-4.73	-5.44	-9.27	-3.94
	-9.39	-8.17	-5.73	-6.21	-9.44	-4.52
150	-9.13	-8.33	-5.70	-7.26	-9.69	-5.29
	-5.66	-8.58	-3.87	-7.67	-9.82	-5.60
	-4.20	-8.84	-2.91	-7.34	-10.13	-5.50
	-4.77	-9.20	-3.44	-7.42	-10.31	-5.62
	-6.43	-9.81	-4.79	-7.86	-10.66	-6.03
180	-7.65	-10.43	-5.81	-7.97	-10.98	-6.21
	-6.11	-11.11	-4.91	-9.25	-11.36	-7.17
	-4.06	-12.00	-3.41	-10.48	-11.82	-8.09
	-2.94	-13.22	-2.55	-10.60	-12.42	-8.40
	-2.88	-14.66	-2.60	-9.73	-12.99	-8.05
210	-3.65	-16.42	-3.43	-7.62	-13.69	-6.66
	-5.02	-18.09	-4.81	-6.29	-14.61	-5.69
	-10.65	-20.27	-10.20	-8.02	-15.59	-7.32
	-13.69	-20.58	-12.88	-6.90	-16.64	-6.46
	-15.92	-18.48	-14.00	-5.82	-18.06	-5.57
240	-17.18	-16.51	-13.82	-6.45	-20.07	-6.27
	-18.84	-14.32	-13.01	-8.18	-22.26	-8.01
	-20.13	-12.44	-11.76	-11.30	-25.42	-11.13
	-28.28	-10.97	-10.89	-12.17	-30.17	-12.11
	-18.49	-9.64	-9.10	-7.25	-34.10	-7.24
270	-15.50	-8.49	-7.71	-4.24	-28.37	-4.22
	-13.10	-7.64	-6.55	-4.01	-23.01	-3.95
	-13.38	-6.75	-5.89	-6.62	-20.30	-6.44
	-14.16	-6.04	-5.42	-9.50	-17.83	-8.90
	-13.94	-5.49	-4.91	-7.94	-15.83	-7.29
300	-13.73	-5.05	-4.50	-7.96	-14.21	-7.03
	-14.73	-4.54	-4.15	-11.09	-12.80	-8.85
	-16.62	-4.25	-4.00	-11.33	-11.47	-8.39
	-14.46	-3.97	-3.60	-8.99	-10.43	-6.64
	-12.41	-3.79	-3.23	-8.55	-9.52	-6.00
330	-13.39	-3.69	-3.25	-9.06	-8.50	-5.76
	-13.57	-3.70	-3.27	-8.83	-7.77	-5.26
	-11.64	-3.77	-3.11	-9.70	-7.02	-5.14
	-9.74	-3.93	-2.92	-9.74	-6.45	-4.78
	-9.56	-4.19	-3.08	-8.23	-5.77	-3.82
	-9.18	-4.46	-3.20	-6.94	-5.29	-3.02
	-7.60	-4.94	-3.06	-6.48	-4.73	-2.51
	-6.57	-5.51	-2.99	-7.45	-4.32	-2.60
	-6.66	-6.15	-3.39	-8.56	-3.97	-2.68
	-7.06	-6.99	-4.02	-8.13	-3.69	-2.35
	-7.61	-7.96	-4.77	-8.05	-3.43	-2.14
	-7.67	-9.12	-5.33	-7.38	-3.23	-1.82
	-6.62	-10.51	-5.13	-6.07	-3.05	-1.29
	-5.35	-12.45	-4.57	-5.05	-2.96	-0.87
	-4.42	-14.59	-4.02	-5.00	-2.90	-0.81
	-3.98	-17.68	-3.80	-4.95	-2.88	-0.78
	-4.15	-21.91	-4.08	-5.28	-2.88	-0.90

ピーク値	-2.88	-3.69	-2.55	-3.69	-2.88	-0.78
平均値	-8.42	-8.32	-5.35	-6.82	-7.14	-3.97

平均化

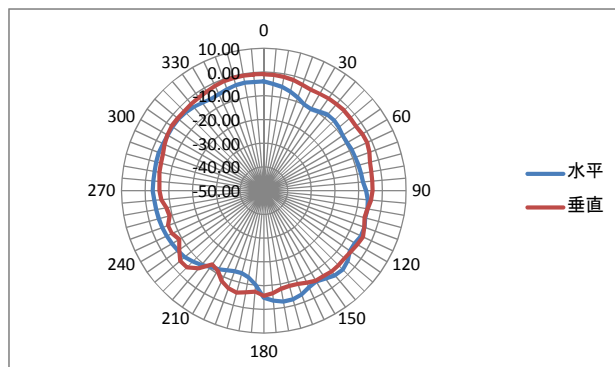


ピーク値 水平平均 垂直平均 平均化利得
 -0.78 -5.35 -3.97 -3.97 dBi

メイン2150MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-5.28	-10.89	-4.22	-3.75	-3.77	-0.75
	-5.45	-12.40	-4.65	-4.05	-3.85	-0.93
	-6.23	-14.05	-5.56	-4.58	-3.93	-1.23
	-7.75	-15.89	-7.13	-5.83	-4.04	-1.83
	-9.59	-18.05	-9.01	-7.13	-4.17	-2.39
30	-12.28	-19.85	-11.58	-8.31	-4.39	-2.91
	-13.71	-19.57	-12.71	-7.38	-4.58	-2.74
	-11.97	-18.17	-11.04	-5.96	-4.91	-2.39
	-10.58	-16.21	-9.53	-5.67	-5.24	-2.44
	-10.81	-13.96	-9.09	-6.04	-5.54	-2.77
60	-12.82	-12.28	-9.53	-6.69	-5.86	-3.24
	-16.10	-11.22	-10.00	-6.17	-6.37	-3.26
	-15.57	-10.00	-8.93	-4.98	-6.74	-2.76
	-15.13	-9.06	-8.10	-4.53	-7.17	-2.64
	-21.13	-8.33	-8.11	-5.22	-7.72	-3.28
90	-25.57	-7.69	-7.62	-6.48	-8.05	-4.18
	-23.04	-7.11	-7.00	-7.14	-8.53	-4.77
	-17.95	-6.59	-6.28	-7.15	-8.85	-4.90
	-12.92	-6.30	-5.44	-6.84	-9.10	-4.82
	-9.88	-6.01	-4.52	-6.81	-9.16	-4.82
120	-9.25	-5.84	-4.21	-7.77	-9.33	-5.47
	-10.12	-5.67	-4.33	-9.57	-9.31	-6.43
	-9.59	-5.66	-4.19	-8.19	-9.26	-5.68
	-9.16	-5.67	-4.06	-6.30	-9.11	-4.47
	-11.04	-5.72	-4.60	-6.67	-9.06	-4.69
150	-10.14	-5.86	-4.48	-7.11	-8.84	-4.88
	-6.24	-6.04	-3.12	-7.18	-8.65	-4.85
	-4.51	-6.33	-2.32	-7.20	-8.59	-4.83
	-4.99	-6.63	-2.72	-7.58	-8.58	-5.04
	-6.71	-7.10	-3.89	-8.11	-8.62	-5.35
180	-7.46	-7.70	-4.56	-8.49	-8.65	-5.56
	-5.88	-8.44	-3.96	-9.34	-8.82	-6.06
	-3.89	-9.22	-2.77	-10.08	-9.06	-6.53
	-2.89	-10.04	-2.12	-10.34	-9.26	-6.75
	-2.85	-11.16	-2.25	-9.93	-9.72	-6.81
210	-3.44	-12.33	-2.91	-8.34	-10.14	-6.14
	-4.51	-13.56	-4.00	-6.90	-10.71	-5.39
	-8.66	-14.57	-7.67	-8.33	-11.41	-6.59
	-10.14	-15.14	-8.95	-7.47	-12.18	-6.20
	-13.16	-15.06	-10.99	-6.83	-13.08	-5.90
240	-17.31	-14.23	-12.49	-7.25	-14.42	-6.49
	-27.59	-13.13	-12.98	-9.25	-15.79	-8.38
	-25.55	-11.74	-11.56	-12.22	-17.75	-11.15
	-18.09	-10.56	-9.85	-12.63	-19.88	-11.88
	-13.31	-9.53	-8.01	-7.60	-23.59	-7.49
270	-13.49	-8.50	-7.31	-4.94	-30.06	-4.93
	-15.69	-7.70	-7.06	-5.00	-35.07	-4.99
	-16.70	-6.94	-6.50	-7.66	-27.20	-7.61
	-18.52	-6.42	-6.16	-11.04	-21.80	-10.69
	-20.69	-5.78	-5.64	-9.56	-18.16	-9.00
300	-23.76	-5.30	-5.24	-9.95	-16.03	-8.99
	-25.49	-4.91	-4.87	-12.55	-13.94	-10.18
	-21.35	-4.56	-4.47	-10.56	-12.50	-8.42
	-16.20	-4.29	-4.02	-8.97	-11.16	-6.92
	-15.94	-4.05	-3.78	-9.32	-10.16	-6.71
330	-18.38	-3.93	-3.77	-9.93	-9.03	-6.44
	-16.17	-3.77	-3.53	-8.92	-8.22	-5.55
	-12.67	-3.75	-3.22	-9.11	-7.38	-5.15
	-11.55	-3.80	-3.12	-8.99	-6.70	-4.69
	-11.87	-3.79	-3.17	-8.13	-6.14	-4.01
	-11.72	-3.98	-3.30	-7.92	-5.59	-3.59
	-10.13	-4.11	-3.14	-7.81	-5.01	-3.18
	-9.40	-4.30	-3.13	-8.17	-4.51	-2.96
	-9.00	-4.57	-3.23	-6.97	-4.20	-2.35
	-8.41	-5.02	-3.38	-6.56	-3.88	-2.01
	-8.50	-5.37	-3.65	-6.89	-3.54	-1.89
	-8.61	-6.02	-4.12	-6.85	-3.35	-1.74
	-7.85	-6.52	-4.12	-6.06	-3.16	-1.36
	-6.81	-7.21	-4.00	-5.38	-3.03	-1.04
	-6.18	-8.04	-4.00	-5.34	-2.93	-0.96
	-5.86	-9.00	-4.14	-5.29	-2.94	-0.94
	-6.04	-10.05	-4.59	-5.52	-2.85	-0.97

ピーク値	-2.85	-3.75	-2.12	-3.75	-2.85	-0.75
平均値	-9.07	-7.26	-5.06	-7.17	-7.08	-4.11

平均化

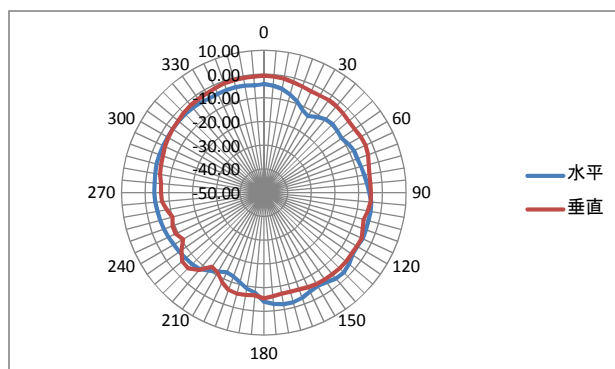


ピーク値	水平平均	垂直平均	平均化利得
-0.75	-5.06	-4.11	-4.11 dBi

メイン2170MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-5.84	-23.17	-5.76	-5.22	-3.92	-1.51
	-6.26	-27.38	-6.22	-5.30	-3.98	-1.58
	-6.54	-27.29	-6.51	-5.69	-4.07	-1.79
	-8.20	-22.72	-8.05	-7.20	-4.15	-2.40
	-10.44	-19.87	-9.98	-8.05	-4.38	-2.83
30	-12.92	-17.64	-11.66	-8.67	-4.53	-3.11
	-13.06	-16.36	-11.40	-7.91	-4.75	-3.04
	-12.49	-15.28	-10.66	-6.31	-4.99	-2.59
	-11.57	-14.05	-9.63	-5.44	-5.31	-2.37
	-11.78	-13.24	-9.44	-6.41	-5.68	-3.02
60	-13.04	-12.80	-9.91	-8.33	-6.07	-4.04
	-15.55	-11.90	-10.34	-8.02	-6.46	-4.16
	-15.72	-11.50	-10.10	-5.89	-6.87	-3.34
	-14.06	-10.86	-9.16	-4.39	-7.23	-2.57
	-16.58	-10.33	-9.40	-4.73	-7.66	-2.94
90	-22.60	-9.96	-9.73	-6.23	-8.08	-4.05
	-23.61	-9.65	-9.48	-6.76	-8.53	-4.54
	-21.18	-9.37	-9.09	-7.45	-8.80	-5.06
	-16.66	-9.05	-8.36	-7.40	-9.09	-5.15
	-12.36	-8.92	-7.30	-6.75	-9.32	-4.84
120	-9.77	-8.67	-6.17	-6.87	-9.42	-4.95
	-9.98	-8.56	-6.20	-8.96	-9.56	-6.24
	-10.99	-8.52	-6.57	-8.36	-9.49	-5.88
	-11.25	-8.42	-6.60	-5.77	-9.58	-4.26
	-11.98	-8.37	-6.80	-5.42	-9.49	-3.99
150	-10.50	-8.43	-6.33	-6.20	-9.42	-4.50
	-6.45	-8.61	-4.39	-6.99	-9.42	-5.02
	-4.64	-8.77	-3.22	-6.72	-9.49	-4.88
	-5.17	-9.10	-3.70	-6.62	-9.41	-4.78
	-7.22	-9.39	-5.16	-7.29	-9.59	-5.28
180	-8.15	-10.02	-5.98	-7.81	-9.70	-5.64
	-6.23	-10.63	-4.88	-9.22	-9.93	-6.55
	-4.10	-11.36	-3.36	-10.00	-10.05	-7.01
	-3.17	-12.57	-2.70	-10.76	-10.49	-7.61
	-3.00	-13.84	-2.65	-10.44	-10.96	-7.68
210	-3.46	-15.65	-3.20	-8.67	-11.36	-6.80
	-4.54	-17.63	-4.33	-7.15	-12.11	-5.94
	-8.67	-19.85	-8.35	-7.14	-13.01	-6.14
	-10.96	-22.69	-10.67	-6.16	-13.85	-5.48
	-14.04	-21.19	-13.28	-5.62	-15.08	-5.15
240	-17.90	-18.46	-15.16	-6.23	-16.58	-5.85
	-26.33	-16.14	-15.75	-8.41	-18.75	-8.03
	-20.99	-13.48	-12.77	-11.80	-21.54	-11.36
	-18.07	-11.98	-11.02	-12.35	-25.70	-12.15
	-16.74	-10.52	-9.59	-7.41	-34.31	-7.41
270	-16.91	-9.09	-8.43	-4.62	-37.13	-4.61
	-16.99	-8.33	-7.77	-4.88	-26.36	-4.85
	-16.13	-7.35	-6.81	-7.65	-21.44	-7.47
	-16.41	-6.60	-6.17	-10.47	-18.42	-9.82
	-18.38	-6.16	-5.91	-9.42	-16.14	-8.58
300	-21.35	-5.58	-5.46	-10.73	-14.36	-9.17
	-22.27	-5.20	-5.12	-13.32	-12.81	-10.05
	-21.06	-4.90	-4.80	-10.41	-11.46	-7.89
	-18.93	-4.64	-4.48	-9.54	-10.35	-6.91
	-21.07	-4.45	-4.36	-11.08	-9.44	-7.17
330	-32.79	-4.39	-4.38	-10.93	-8.48	-6.52
	-22.74	-4.39	-4.32	-10.00	-7.73	-5.71
	-16.93	-4.48	-4.24	-10.28	-7.04	-5.35
	-14.35	-4.55	-4.12	-9.80	-6.37	-4.75
	-13.42	-4.79	-4.23	-8.92	-5.79	-4.07
	-14.43	-5.08	-4.60	-9.00	-5.32	-3.77
	-13.67	-5.50	-4.88	-9.64	-4.88	-3.62
	-11.28	-6.02	-4.88	-8.78	-4.50	-3.12
	-8.91	-6.58	-4.58	-6.44	-4.15	-2.14
	-7.91	-7.17	-4.51	-6.01	-3.82	-1.77
	-8.61	-7.94	-5.25	-7.22	-3.54	-1.99
	-9.36	-8.93	-6.13	-7.79	-3.40	-2.05
	-8.57	-9.97	-6.21	-7.28	-3.25	-1.80
	-7.51	-11.43	-6.03	-6.55	-3.07	-1.46
	-7.12	-12.96	-6.11	-6.59	-3.01	-1.43
	-6.55	-15.03	-5.97	-6.70	-3.00	-1.45
	-6.56	-17.89	-6.25	-6.82	-3.01	-1.50

ピーク値	-3.00	-4.39	-2.65	-4.39	-3.00	-1.43
平均値	-9.61	-8.92	-6.24	-7.39	-7.21	-4.29

平均化

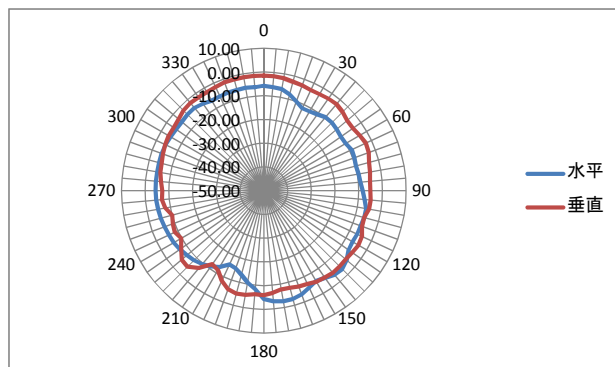


ピーク値	水平平均	垂直平均	平均化利得
-1.43	-6.24	-4.29	-4.29 dBi

サブ815MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-12.23	-9.53	-7.67	-23.36	-6.26	-6.18
	-11.99	-9.70	-7.69	-24.81	-6.17	-6.11
	-12.26	-9.94	-7.93	-24.57	-6.09	-6.03
	-12.26	-10.20	-8.10	-22.92	-6.00	-5.91
	-13.10	-10.40	-8.54	-22.01	-5.92	-5.81
30	-13.59	-10.62	-8.84	-20.98	-5.79	-5.66
	-15.23	-10.81	-9.47	-21.02	-5.66	-5.54
	-16.76	-11.01	-9.98	-19.76	-5.60	-5.43
	-20.52	-11.13	-10.66	-19.19	-5.46	-5.28
	-24.16	-11.19	-10.97	-17.47	-5.34	-5.08
60	-39.82	-11.28	-11.27	-17.08	-5.22	-4.94
	-24.98	-11.24	-11.06	-16.20	-5.07	-4.75
	-19.46	-11.35	-10.73	-16.23	-4.93	-4.62
	-15.55	-11.34	-9.94	-16.01	-4.82	-4.50
	-12.50	-11.39	-8.90	-15.90	-4.71	-4.39
90	-10.70	-11.24	-7.95	-15.80	-4.57	-4.26
	-9.19	-11.26	-7.09	-15.82	-4.47	-4.16
	-8.76	-11.22	-6.81	-15.93	-4.35	-4.06
	-8.64	-11.19	-6.72	-16.61	-4.28	-4.03
	-9.49	-11.10	-7.21	-18.21	-4.19	-4.02
120	-10.83	-11.13	-7.96	-20.39	-4.09	-3.99
	-12.74	-11.08	-8.82	-24.09	-3.97	-3.93
	-13.58	-11.09	-9.15	-25.12	-3.91	-3.87
	-12.27	-11.13	-8.65	-29.70	-3.82	-3.81
	-9.71	-11.08	-7.33	-31.29	-3.76	-3.75
150	-7.55	-11.07	-5.95	-33.83	-3.68	-3.68
	-5.77	-11.12	-4.65	-25.08	-3.67	-3.63
	-4.61	-11.17	-3.74	-19.79	-3.65	-3.54
	-3.94	-11.19	-3.19	-17.17	-3.63	-3.44
	-3.58	-11.21	-2.89	-14.90	-3.60	-3.29
180	-3.77	-11.26	-3.06	-13.85	-3.61	-3.22
	-4.09	-11.21	-3.32	-12.64	-3.58	-3.07
	-5.03	-11.32	-4.12	-11.95	-3.62	-3.03
	-6.22	-11.33	-5.06	-11.05	-3.64	-2.91
	-8.38	-11.39	-6.62	-10.41	-3.73	-2.88
210	-11.30	-11.40	-8.34	-9.71	-3.75	-2.77
	-16.78	-11.38	-10.28	-9.19	-3.85	-2.73
	-17.36	-11.35	-10.38	-11.97	-3.93	-3.29
	-13.17	-11.28	-9.11	-13.19	-4.04	-3.54
	-10.13	-11.21	-7.62	-14.92	-4.13	-3.79
240	-8.40	-11.08	-6.53	-17.15	-4.23	-4.01
	-7.20	-11.05	-5.70	-20.62	-4.41	-4.30
	-6.64	-10.89	-5.26	-24.22	-4.52	-4.48
	-6.45	-10.81	-5.09	-27.75	-4.71	-4.69
	-6.74	-10.71	-5.28	-24.64	-4.85	-4.80
270	-7.74	-10.50	-5.90	-22.19	-5.02	-4.94
	-9.24	-10.40	-6.77	-20.67	-5.20	-5.07
	-12.03	-10.26	-8.05	-19.90	-5.32	-5.18
	-15.55	-10.12	-9.03	-20.17	-5.53	-5.38
	-19.39	-9.95	-9.48	-21.12	-5.71	-5.59
300	-17.04	-9.88	-9.12	-23.31	-5.89	-5.81
	-13.06	-9.72	-8.06	-24.32	-6.05	-5.98
	-10.84	-9.55	-7.13	-22.78	-6.17	-6.07
	-9.40	-9.49	-6.43	-18.86	-6.32	-6.09
	-9.27	-9.38	-6.31	-18.28	-6.42	-6.15
330	-9.70	-9.31	-6.49	-17.29	-6.51	-6.16
	-10.72	-9.29	-6.94	-19.16	-6.62	-6.39
	-11.65	-9.25	-7.27	-19.20	-6.67	-6.43
	-12.28	-9.19	-7.45	-20.54	-6.72	-6.55
	-12.33	-9.25	-7.51	-19.39	-6.74	-6.51
	-12.04	-9.30	-7.45	-18.79	-6.74	-6.48
	-12.30	-9.28	-7.52	-17.52	-6.79	-6.43
	-12.43	-9.36	-7.62	-17.01	-6.75	-6.36
	-13.54	-9.50	-8.06	-16.20	-6.69	-6.23
	-14.18	-9.57	-8.28	-15.64	-6.64	-6.13
	-15.35	-9.82	-8.75	-14.85	-6.57	-5.97
	-15.60	-9.95	-8.91	-14.30	-6.49	-5.83
	-15.93	-10.14	-9.12	-13.70	-6.45	-5.70
	-15.61	-10.34	-9.21	-13.57	-6.36	-5.61
	-15.66	-10.58	-9.41	-13.68	-6.34	-5.60
	-15.45	-10.84	-9.54	-14.10	-6.21	-5.55
	-15.35	-11.09	-9.70	-14.30	-6.12	-5.51

ピーク値	-3.58	-9.19	-2.89	-9.19	-3.58	-2.73
平均値	-9.87	-10.51	-7.17	-16.38	-5.03	-4.72

平均化

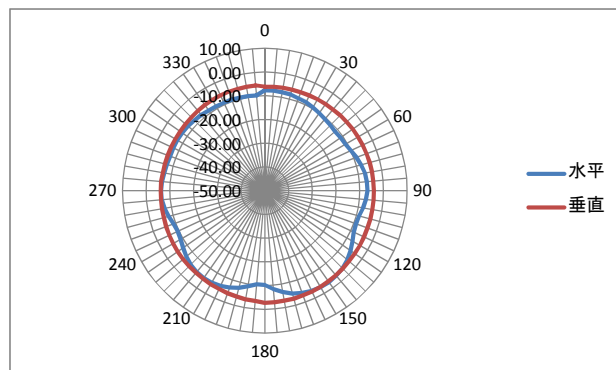


ピーク値	水平平均	垂直平均	平均化利得
-2.73	-7.17	-4.72	-4.72 dBi

サブ830MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-12.91	-14.48	-10.61	-10.39	-7.20	-5.50
	-12.31	-13.93	-10.03	-10.84	-7.15	-5.61
	-11.91	-13.42	-9.59	-11.23	-7.10	-5.68
	-11.44	-13.02	-9.15	-11.75	-7.03	-5.77
	-10.85	-12.59	-8.62	-12.02	-6.97	-5.79
	-10.57	-12.29	-8.33	-12.69	-6.90	-5.89
30	-10.56	-11.87	-8.16	-13.03	-6.80	-5.87
	-10.90	-11.57	-8.21	-13.53	-6.65	-5.84
	-11.77	-11.31	-8.53	-14.02	-6.59	-5.87
	-13.12	-11.18	-9.03	-14.88	-6.42	-5.84
	-15.65	-11.00	-9.72	-15.91	-6.30	-5.85
	-17.16	-10.85	-9.93	-17.72	-6.18	-5.89
60	-17.24	-10.75	-9.87	-19.58	-6.05	-5.86
	-13.83	-10.57	-8.89	-23.02	-5.90	-5.82
	-10.98	-10.39	-7.67	-25.75	-5.77	-5.73
	-9.10	-10.41	-6.69	-22.55	-5.62	-5.53
	-7.35	-10.67	-5.69	-22.09	-5.47	-5.37
	-6.65	-10.56	-5.17	-20.71	-5.33	-5.21
90	-6.06	-10.65	-4.77	-25.41	-5.21	-5.17
	-6.50	-10.83	-5.14	-46.14	-5.08	-5.08
	-7.32	-11.02	-5.78	-22.67	-4.92	-4.85
	-9.02	-11.16	-6.95	-16.45	-4.81	-4.52
	-10.81	-11.34	-8.06	-13.46	-4.66	-4.12
	-11.52	-11.57	-8.53	-12.02	-4.57	-3.85
120	-10.31	-11.82	-7.99	-12.09	-4.46	-3.77
	-8.52	-12.07	-6.93	-12.57	-4.34	-3.73
	-6.73	-12.36	-5.68	-14.00	-4.24	-3.80
	-5.42	-12.67	-4.67	-15.80	-4.16	-3.87
	-4.43	-13.01	-3.87	-18.62	-4.09	-3.94
	-3.89	-13.37	-3.43	-22.83	-3.98	-3.93
150	-3.74	-13.73	-3.32	-31.97	-3.93	-3.93
	-4.05	-14.19	-3.65	-30.34	-3.88	-3.87
	-4.82	-14.62	-4.38	-22.84	-3.86	-3.80
	-5.98	-15.08	-5.48	-18.63	-3.80	-3.66
	-7.98	-15.65	-7.30	-16.59	-3.75	-3.53
	-10.69	-16.22	-9.61	-14.77	-3.74	-3.41
180	-15.51	-16.38	-12.91	-13.91	-3.77	-3.37
	-18.52	-17.21	-14.80	-14.05	-3.78	-3.39
	-14.48	-17.71	-12.79	-14.34	-3.82	-3.45
	-11.02	-17.70	-10.17	-14.01	-3.87	-3.47
	-8.88	-18.58	-8.43	-14.03	-3.94	-3.53
	-7.48	-19.09	-7.19	-13.68	-4.00	-3.55
210	-6.75	-19.80	-6.54	-14.19	-4.09	-3.68
	-6.63	-20.46	-6.45	-14.69	-4.16	-3.79
	-6.93	-20.95	-6.76	-16.65	-4.32	-4.07
	-7.78	-21.55	-7.60	-19.40	-4.42	-4.28
	-8.86	-21.91	-8.65	-24.68	-4.53	-4.49
	-10.74	-22.36	-10.45	-28.16	-4.69	-4.67
240	-13.03	-22.76	-12.59	-21.91	-4.84	-4.76
	-16.90	-23.02	-15.95	-19.15	-5.03	-4.87
	-18.68	-23.26	-17.38	-17.69	-5.13	-4.90
	-14.68	-23.42	-14.14	-17.22	-5.35	-5.07
	-11.68	-23.66	-11.41	-16.76	-5.47	-5.15
	-9.96	-23.81	-9.78	-16.38	-5.64	-5.29
270	-9.45	-24.31	-9.31	-16.08	-5.75	-5.37
	-9.59	-24.26	-9.44	-15.94	-5.92	-5.50
	-10.38	-23.83	-10.19	-16.95	-6.03	-5.69
	-11.43	-23.55	-11.17	-17.58	-6.18	-5.87
	-13.07	-22.68	-12.62	-18.64	-6.25	-6.01
	-15.12	-22.40	-14.38	-18.29	-6.38	-6.11
300	-17.11	-21.97	-15.89	-17.78	-6.52	-6.21
	-16.83	-21.15	-15.46	-17.25	-6.53	-6.18
	-15.10	-20.38	-13.98	-17.75	-6.62	-6.30
	-13.78	-19.73	-12.79	-18.66	-6.69	-6.42
	-12.50	-19.05	-11.63	-21.63	-6.69	-6.55
	-12.28	-18.22	-11.29	-25.14	-6.74	-6.68
330	-12.18	-17.38	-11.03	-31.89	-6.71	-6.69
	-12.73	-16.77	-11.28	-28.55	-6.77	-6.74
	-13.37	-16.06	-11.50	-23.00	-6.76	-6.66
	-14.44	-15.38	-11.88	-21.98	-6.79	-6.66
	-15.35	-14.73	-12.02	-20.83	-6.75	-6.58
	-16.16	-14.03	-11.96	-22.25	-6.75	-6.63

ピーク値	-3.74	-10.39	-3.32	-10.39	-3.74	-3.37
平均値	-9.43	-14.27	-8.20	-16.11	-5.27	-4.93

平均化

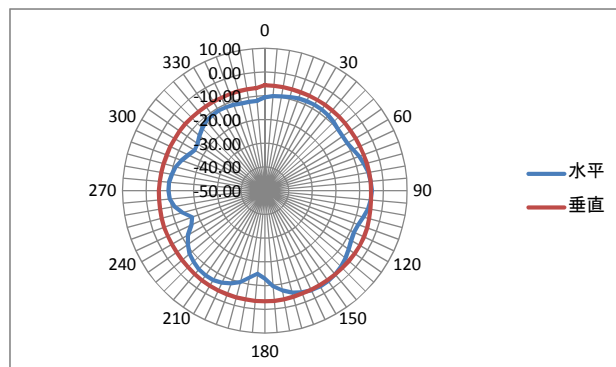


ピーク値	水平平均	垂直平均	平均化利得
-3.32	-8.20	-4.93	-4.93 dBi

サブ845MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-13.20	-18.28	-12.03	-12.50	-11.28	-8.84
	-12.39	-17.43	-11.20	-12.46	-11.24	-8.80
	-11.61	-16.65	-10.43	-12.46	-11.29	-8.82
	-11.15	-15.98	-9.92	-12.11	-11.24	-8.64
	-10.72	-15.30	-9.42	-11.94	-11.24	-8.56
30	-10.65	-14.71	-9.21	-11.52	-11.08	-8.28
	-10.73	-14.16	-9.10	-11.60	-11.05	-8.30
	-11.08	-13.59	-9.14	-11.79	-10.88	-8.30
	-11.65	-13.31	-9.39	-12.32	-10.74	-8.45
	-12.35	-12.90	-9.61	-13.54	-10.59	-8.81
60	-13.51	-12.58	-10.01	-15.01	-10.36	-9.08
	-14.35	-12.33	-10.21	-17.70	-10.21	-9.50
	-15.50	-12.14	-10.49	-19.33	-9.97	-9.50
	-14.61	-11.87	-10.02	-22.48	-9.69	-9.47
	-13.15	-11.78	-9.40	-23.67	-9.42	-9.25
90	-11.31	-11.67	-8.48	-28.53	-9.19	-9.14
	-9.91	-11.56	-7.65	-25.32	-8.92	-8.83
	-9.14	-11.58	-7.18	-21.81	-8.71	-8.50
	-8.70	-11.52	-6.87	-19.76	-8.43	-8.12
	-8.94	-11.62	-7.07	-19.07	-8.23	-7.89
120	-9.42	-11.72	-7.41	-20.29	-7.94	-7.69
	-10.60	-11.81	-8.15	-20.75	-7.71	-7.50
	-11.57	-11.96	-8.75	-19.22	-7.46	-7.18
	-12.12	-12.14	-9.12	-17.11	-7.27	-6.84
	-11.38	-12.36	-8.83	-16.35	-7.07	-6.58
150	-10.08	-12.59	-8.15	-16.54	-6.86	-6.41
	-8.70	-12.88	-7.29	-17.68	-6.68	-6.35
	-7.59	-13.21	-6.54	-19.31	-6.53	-6.30
	-6.67	-13.56	-5.86	-20.49	-6.40	-6.24
	-6.05	-13.95	-5.40	-21.77	-6.26	-6.14
180	-5.85	-14.34	-5.27	-21.11	-6.13	-5.99
	-5.94	-14.84	-5.41	-20.43	-6.05	-5.89
	-6.48	-15.30	-5.94	-18.49	-5.96	-5.72
	-7.25	-15.79	-6.68	-17.37	-5.93	-5.63
	-8.73	-16.25	-8.03	-16.10	-5.90	-5.50
210	-10.59	-16.70	-9.64	-15.42	-5.85	-5.40
	-13.66	-17.15	-12.05	-14.84	-5.85	-5.33
	-22.08	-17.61	-16.28	-14.66	-5.91	-5.36
	-19.75	-17.97	-15.75	-14.66	-5.94	-5.39
	-16.01	-18.20	-13.96	-14.38	-6.00	-5.41
240	-13.55	-18.49	-12.34	-14.39	-6.12	-5.52
	-12.07	-18.48	-11.17	-14.18	-6.14	-5.50
	-11.28	-18.46	-10.52	-14.68	-6.31	-5.72
	-11.04	-18.37	-10.30	-15.36	-6.43	-5.91
	-11.06	-18.23	-10.30	-17.01	-6.64	-6.25
270	-11.34	-18.07	-10.51	-19.42	-6.81	-6.57
	-11.71	-17.91	-10.77	-22.52	-6.98	-6.86
	-12.44	-17.76	-11.32	-24.50	-7.17	-7.09
	-13.61	-17.65	-12.16	-21.61	-7.42	-7.26
	-15.61	-17.56	-13.46	-20.00	-7.59	-7.35
300	-18.46	-17.45	-14.92	-17.91	-7.91	-7.49
	-21.62	-17.49	-16.07	-17.13	-8.15	-7.63
	-23.61	-17.51	-16.56	-16.56	-8.35	-7.74
	-21.95	-17.62	-16.26	-17.41	-8.60	-8.07
	-20.26	-17.83	-15.87	-18.73	-8.88	-8.45
330	-18.59	-18.06	-15.30	-20.09	-9.08	-8.75
	-17.83	-18.38	-15.09	-19.39	-9.30	-8.89
	-17.79	-18.74	-15.23	-18.08	-9.52	-8.95
	-18.68	-19.16	-15.90	-18.03	-9.69	-9.10
	-20.04	-19.59	-16.80	-18.45	-9.86	-9.29
	-21.50	-20.11	-17.74	-21.37	-10.06	-9.75
	-21.58	-20.69	-18.10	-24.78	-10.19	-10.04
	-21.27	-21.13	-18.19	-28.71	-10.27	-10.21
	-21.05	-21.53	-18.28	-25.77	-10.51	-10.38
	-21.58	-21.73	-18.64	-21.79	-10.61	-10.29
	-22.76	-21.71	-19.19	-20.31	-10.65	-10.20
	-24.66	-21.36	-19.70	-18.40	-10.71	-10.03
	-27.19	-20.89	-19.98	-17.83	-10.79	-10.01
	-29.82	-20.09	-19.65	-16.46	-10.90	-9.84
	-29.08	-19.34	-18.90	-16.13	-10.92	-9.77
	-26.41	-18.42	-17.78	-15.20	-10.90	-9.53
	-23.10	-17.52	-16.46	-15.35	-10.98	-9.62

ピーク値	-5.85	-11.52	-5.27	-11.52	-5.85	-5.33
平均値	-11.81	-15.16	-10.16	-16.51	-8.17	-7.58

平均化

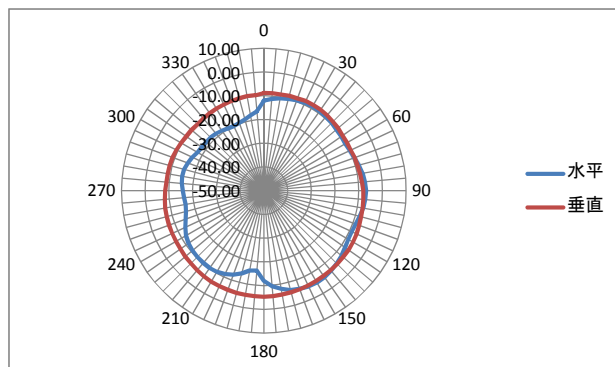


ピーク値	水平平均	垂直平均	平均化利得
-5.27	-10.16	-7.58	-7.58 dBi

サブ860MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-12.60	-13.87	-10.18	-15.42	-9.69	-8.66
	-11.81	-13.51	-9.57	-14.90	-9.59	-8.47
	-11.16	-13.19	-9.05	-15.15	-9.59	-8.52
	-10.63	-12.93	-8.62	-14.78	-9.52	-8.38
	-10.13	-12.68	-8.21	-15.07	-9.46	-8.40
30	-9.82	-12.55	-7.96	-14.81	-9.37	-8.28
	-9.61	-12.40	-7.77	-15.11	-9.28	-8.27
	-9.72	-12.27	-7.80	-14.89	-9.19	-8.15
	-10.04	-12.24	-7.99	-14.81	-9.10	-8.07
	-10.50	-12.23	-8.27	-14.55	-8.94	-7.88
60	-11.40	-12.27	-8.81	-14.67	-8.75	-7.76
	-12.33	-12.35	-9.33	-15.20	-8.63	-7.77
	-13.88	-12.50	-10.12	-16.67	-8.44	-7.83
	-14.40	-12.69	-10.45	-19.38	-8.21	-7.89
	-14.03	-12.93	-10.43	-22.84	-8.04	-7.89
90	-12.15	-13.19	-9.63	-25.31	-7.83	-7.75
	-10.17	-13.53	-8.52	-24.21	-7.57	-7.48
	-8.99	-13.88	-7.77	-24.82	-7.36	-7.28
	-8.23	-14.29	-7.27	-24.96	-7.16	-7.09
	-8.49	-14.74	-7.56	-23.65	-6.92	-6.83
120	-9.09	-15.29	-8.15	-20.22	-6.68	-6.49
	-10.51	-15.83	-9.39	-17.47	-6.47	-6.14
	-11.71	-16.48	-10.46	-15.78	-6.29	-5.83
	-12.42	-17.16	-11.16	-13.91	-6.08	-5.41
	-11.12	-17.93	-10.30	-12.84	-5.88	-5.08
150	-9.31	-18.76	-8.84	-12.23	-5.73	-4.85
	-7.52	-19.79	-7.27	-12.83	-5.57	-4.82
	-6.36	-20.76	-6.20	-14.28	-5.46	-4.92
	-5.49	-22.01	-5.40	-16.78	-5.31	-5.01
	-5.06	-23.37	-4.99	-20.15	-5.24	-5.10
180	-5.01	-25.00	-4.97	-23.56	-5.15	-5.08
	-5.26	-26.76	-5.23	-28.12	-5.05	-5.02
	-5.88	-28.78	-5.85	-29.99	-5.04	-5.03
	-6.79	-29.96	-6.77	-26.72	-5.01	-4.98
	-8.25	-30.39	-8.22	-22.84	-5.05	-4.98
210	-10.20	-29.82	-10.15	-20.72	-5.02	-4.90
	-13.25	-28.27	-13.11	-19.57	-5.06	-4.91
	-15.76	-26.73	-15.42	-16.84	-5.15	-4.86
	-14.86	-25.14	-14.47	-16.70	-5.22	-4.92
	-12.99	-23.87	-12.65	-15.44	-5.31	-4.91
240	-11.42	-22.88	-11.12	-15.07	-5.48	-5.02
	-10.28	-22.01	-9.99	-14.54	-5.60	-5.08
	-9.45	-21.30	-9.17	-15.15	-5.78	-5.30
	-9.17	-20.66	-8.87	-16.24	-5.96	-5.57
	-9.25	-20.33	-8.92	-18.64	-6.17	-5.93
270	-9.87	-20.04	-9.47	-21.18	-6.40	-6.26
	-10.81	-19.75	-10.29	-21.86	-6.60	-6.48
	-12.71	-19.64	-11.91	-20.04	-6.84	-6.63
	-15.32	-19.62	-13.94	-17.26	-7.07	-6.68
	-19.24	-19.74	-16.47	-15.00	-7.33	-6.64
300	-20.82	-19.95	-17.35	-13.69	-7.59	-6.64
	-16.81	-20.27	-15.19	-13.44	-7.89	-6.82
	-13.50	-20.73	-12.75	-14.51	-8.15	-7.24
	-11.43	-21.39	-11.02	-16.34	-8.37	-7.73
	-10.71	-22.14	-10.41	-17.78	-8.59	-8.09
330	-10.80	-23.16	-10.55	-18.34	-8.74	-8.29
	-11.64	-24.46	-11.42	-18.97	-8.96	-8.54
	-12.79	-26.08	-12.59	-21.39	-9.10	-8.85
	-13.99	-28.72	-13.84	-27.45	-9.24	-9.17
	-15.30	-31.79	-15.20	-33.96	-9.31	-9.29
	-16.75	-37.66	-16.71	-24.72	-9.48	-9.35
	-18.76	-51.39	-18.76	-22.02	-9.47	-9.24
	-21.28	-37.26	-21.17	-20.86	-9.55	-9.24
	-24.45	-31.51	-23.67	-21.03	-9.54	-9.24
	-26.69	-27.75	-24.17	-20.22	-9.61	-9.24
	-26.21	-25.23	-22.68	-18.95	-9.52	-9.05
	-24.04	-23.32	-20.65	-17.16	-9.57	-8.87
	-21.95	-21.70	-18.81	-16.01	-9.52	-8.64
	-20.57	-20.35	-17.45	-15.15	-9.54	-8.49
	-19.30	-19.39	-16.33	-14.81	-9.45	-8.34
	-18.73	-18.42	-15.56	-14.64	-9.40	-8.26
	-18.46	-17.62	-15.01	-14.74	-9.38	-8.27

ピーク値	-5.01	-12.23	-4.97	-12.23	-5.01	-4.82
平均値	-10.69	-17.10	-9.80	-16.80	-7.24	-6.79

平均化

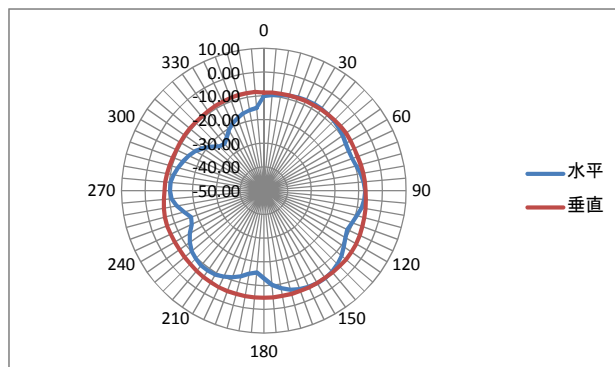


ピーク値	水平平均	垂直平均	平均化利得
-4.82	-9.80	-6.79	-6.79 dBi

サブ875MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-12.96	-11.21	-8.99	-15.20	-6.01	-5.51
	-12.46	-11.13	-8.73	-15.73	-5.93	-5.50
	-11.94	-11.03	-8.45	-16.96	-5.87	-5.55
	-11.29	-11.00	-8.13	-17.97	-5.80	-5.54
	-10.62	-11.00	-7.80	-19.25	-5.70	-5.51
30	-9.98	-11.05	-7.47	-18.80	-5.61	-5.41
	-9.28	-11.09	-7.08	-18.04	-5.53	-5.30
	-8.86	-11.24	-6.88	-16.45	-5.44	-5.11
	-8.63	-11.37	-6.78	-16.45	-5.31	-4.99
	-8.66	-11.56	-6.86	-16.63	-5.23	-4.93
60	-9.37	-11.80	-7.41	-18.28	-5.09	-4.89
	-10.17	-12.05	-8.00	-18.13	-4.94	-4.74
	-11.98	-12.36	-9.16	-16.98	-4.83	-4.57
	-13.02	-12.65	-9.82	-15.73	-4.70	-4.37
	-13.69	-13.07	-10.36	-15.86	-4.58	-4.26
90	-12.35	-13.48	-9.86	-17.26	-4.41	-4.19
	-10.30	-14.02	-8.76	-20.52	-4.29	-4.19
	-8.76	-14.52	-7.74	-24.52	-4.11	-4.07
	-7.54	-15.08	-6.84	-27.07	-3.97	-3.95
	-7.37	-15.72	-6.78	-25.03	-3.82	-3.79
120	-7.74	-16.41	-7.19	-20.04	-3.67	-3.57
	-9.17	-17.14	-8.52	-16.27	-3.58	-3.35
	-10.89	-17.92	-10.10	-14.02	-3.41	-3.05
	-11.89	-18.83	-11.09	-12.75	-3.34	-2.87
	-10.22	-19.86	-9.77	-11.78	-3.22	-2.65
150	-7.72	-21.01	-7.52	-11.18	-3.11	-2.48
	-5.33	-22.16	-5.24	-11.00	-3.00	-2.36
	-3.93	-23.61	-3.89	-11.56	-2.94	-2.38
	-3.01	-25.34	-2.98	-13.02	-2.87	-2.47
	-2.72	-27.39	-2.70	-15.43	-2.82	-2.59
180	-2.80	-29.74	-2.80	-18.73	-2.76	-2.65
	-3.37	-33.02	-3.36	-22.60	-2.72	-2.68
	-4.18	-37.98	-4.18	-24.73	-2.73	-2.70
	-5.32	-43.90	-5.32	-26.26	-2.72	-2.70
	-6.98	-40.63	-6.98	-24.58	-2.77	-2.74
210	-9.09	-35.68	-9.08	-23.33	-2.77	-2.73
	-12.25	-32.13	-12.20	-22.17	-2.83	-2.78
	-15.54	-29.77	-15.37	-20.78	-2.89	-2.82
	-13.98	-28.13	-13.82	-21.56	-2.98	-2.92
	-11.41	-26.96	-11.29	-21.18	-3.10	-3.03
240	-9.15	-25.76	-9.05	-21.12	-3.20	-3.13
	-7.46	-24.98	-7.39	-20.88	-3.34	-3.27
	-6.30	-24.61	-6.24	-22.05	-3.48	-3.42
	-5.77	-24.02	-5.71	-23.09	-3.65	-3.60
	-5.78	-23.75	-5.71	-24.66	-3.81	-3.78
270	-6.66	-23.59	-6.57	-27.34	-4.00	-3.98
	-8.22	-23.41	-8.09	-26.96	-4.20	-4.18
	-11.16	-23.36	-10.91	-21.03	-4.39	-4.30
	-15.33	-23.63	-14.73	-16.33	-4.61	-4.33
	-20.85	-23.86	-19.09	-13.47	-4.77	-4.22
300	-18.02	-24.37	-17.12	-12.22	-4.94	-4.20
	-13.43	-25.07	-13.14	-11.61	-5.17	-4.28
	-11.06	-25.79	-10.92	-11.68	-5.31	-4.41
	-9.96	-26.88	-9.87	-12.13	-5.47	-4.62
	-9.95	-27.79	-9.88	-13.58	-5.59	-4.95
330	-10.62	-28.52	-10.55	-16.46	-5.78	-5.42
	-11.80	-28.59	-11.71	-21.95	-5.84	-5.73
	-13.29	-27.82	-13.14	-30.67	-5.93	-5.92
	-15.15	-26.51	-14.85	-27.16	-6.01	-5.98
	-18.54	-24.80	-17.62	-26.02	-6.07	-6.03
	-24.00	-23.20	-20.57	-32.78	-6.10	-6.09
	-25.84	-21.78	-20.34	-30.45	-6.06	-6.04
	-20.86	-20.39	-17.61	-23.27	-6.06	-5.98
	-18.24	-19.19	-15.67	-20.03	-6.06	-5.89
	-17.32	-18.21	-14.73	-19.10	-5.99	-5.78
	-17.39	-17.29	-14.33	-19.28	-5.95	-5.75
	-17.72	-16.51	-14.06	-20.66	-5.93	-5.78
	-17.94	-15.81	-13.74	-20.97	-5.85	-5.72
	-18.20	-15.20	-13.43	-19.74	-5.83	-5.66
	-18.13	-14.66	-13.05	-18.29	-5.77	-5.54
	-18.46	-14.22	-12.84	-16.88	-5.71	-5.39
	-18.86	-13.87	-12.68	-16.34	-5.65	-5.29

ピーク値	-2.72	-11.00	-2.70	-11.00	-2.72	-2.36
平均値	-9.09	-16.36	-8.35	-16.90	-4.38	-4.15

平均化

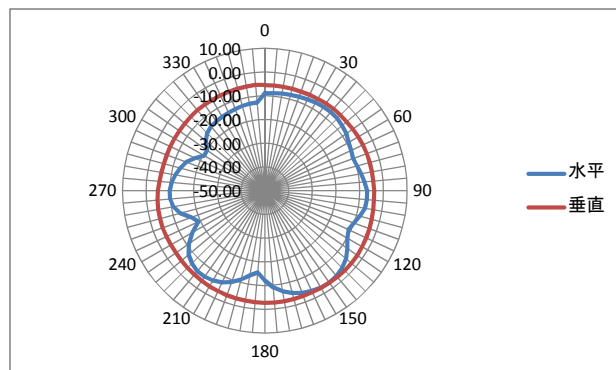


ピーク値	水平平均	垂直平均	平均化利得
-2.36	-8.35	-4.15	-4.15 dBi

サブ890MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-10.49	-13.45	-8.71	-10.08	-6.05	-4.60
	-10.10	-13.03	-8.31	-9.63	-5.93	-4.39
	-9.95	-12.56	-8.05	-9.28	-5.86	-4.23
	-9.50	-12.08	-7.59	-8.70	-5.74	-3.96
	-9.05	-11.57	-7.12	-8.46	-5.57	-3.77
30	-8.52	-11.13	-6.62	-8.47	-5.39	-3.65
	-7.96	-10.72	-6.11	-8.96	-5.28	-3.73
	-7.47	-10.33	-5.66	-10.10	-5.07	-3.88
	-7.13	-9.96	-5.31	-11.33	-4.83	-3.95
	-6.85	-9.60	-5.00	-12.95	-4.63	-4.03
60	-7.13	-9.38	-5.10	-13.88	-4.36	-3.90
	-7.36	-9.10	-5.13	-15.32	-4.13	-3.81
	-8.45	-8.87	-5.65	-16.61	-3.88	-3.65
	-8.95	-8.72	-5.82	-21.10	-3.64	-3.56
	-9.44	-8.58	-5.98	-24.19	-3.42	-3.38
90	-8.51	-8.50	-5.49	-21.51	-3.16	-3.09
	-7.17	-8.47	-4.76	-19.56	-2.94	-2.84
	-6.26	-8.46	-4.21	-17.41	-2.72	-2.58
	-5.32	-8.49	-3.61	-19.28	-2.51	-2.42
	-5.33	-8.55	-3.64	-20.47	-2.29	-2.23
120	-5.54	-8.65	-3.81	-25.99	-2.12	-2.10
	-6.84	-8.79	-4.69	-21.92	-1.92	-1.87
	-8.66	-8.95	-5.79	-18.12	-1.76	-1.66
	-9.82	-9.15	-6.46	-15.76	-1.58	-1.42
	-8.22	-9.40	-5.76	-14.98	-1.45	-1.26
150	-5.75	-9.66	-4.26	-14.87	-1.30	-1.12
	-3.52	-9.94	-2.63	-15.28	-1.19	-1.02
	-2.12	-10.25	-1.50	-16.39	-1.09	-0.96
	-1.13	-10.62	-0.67	-18.95	-0.99	-0.92
	-0.77	-11.01	-0.38	-23.82	-0.92	-0.89
180	-0.85	-11.42	-0.48	-21.39	-0.86	-0.83
	-1.39	-11.81	-1.01	-16.77	-0.83	-0.72
	-2.21	-12.19	-1.80	-13.75	-0.82	-0.60
	-3.36	-12.54	-2.87	-11.99	-0.77	-0.45
	-4.85	-12.90	-4.22	-10.98	-0.82	-0.42
210	-6.73	-13.19	-5.85	-10.42	-0.83	-0.38
	-9.29	-13.41	-7.87	-10.11	-0.88	-0.39
	-24.84	-13.51	-13.20	-12.99	-0.95	-0.68
	-16.89	-13.55	-11.90	-12.18	-1.05	-0.73
	-12.03	-13.49	-9.69	-11.08	-1.13	-0.71
240	-9.15	-13.36	-7.75	-10.54	-1.24	-0.76
	-7.24	-13.13	-6.24	-10.10	-1.37	-0.83
	-6.14	-12.87	-5.30	-10.37	-1.52	-0.98
	-5.86	-12.58	-5.02	-10.84	-1.68	-1.18
	-6.21	-12.30	-5.25	-12.42	-1.88	-1.51
270	-7.58	-12.01	-6.24	-14.77	-2.08	-1.85
	-9.65	-11.77	-7.57	-18.42	-2.25	-2.15
	-13.57	-11.50	-9.41	-19.49	-2.48	-2.39
	-20.11	-11.30	-10.77	-15.27	-2.72	-2.49
	-27.75	-11.14	-11.05	-13.09	-2.92	-2.53
300	-17.27	-11.02	-10.09	-11.93	-3.19	-2.65
	-13.09	-10.93	-8.87	-12.38	-3.45	-2.92
	-11.55	-10.91	-8.20	-14.34	-3.68	-3.32
	-10.85	-10.89	-7.86	-18.09	-3.93	-3.76
	-10.91	-10.96	-7.92	-22.98	-4.18	-4.12
330	-11.31	-11.05	-8.17	-19.62	-4.39	-4.26
	-12.67	-11.20	-8.86	-16.52	-4.59	-4.32
	-14.88	-11.38	-9.78	-15.88	-4.86	-4.53
	-16.97	-11.60	-10.49	-16.71	-5.04	-4.75
	-17.65	-11.85	-10.84	-18.26	-5.21	-5.00
	-16.45	-12.16	-10.78	-20.36	-5.37	-5.24
	-15.89	-12.44	-10.82	-23.27	-5.46	-5.39
	-15.67	-12.76	-10.97	-30.21	-5.61	-5.60
	-16.53	-13.07	-11.45	-22.48	-5.69	-5.60
	-18.29	-13.34	-12.13	-16.16	-5.76	-5.38
	-22.16	-13.55	-12.99	-13.47	-5.79	-5.10
	-29.78	-13.69	-13.59	-11.71	-5.81	-4.82
	-33.82	-13.75	-13.71	-11.29	-5.84	-4.75
	-24.78	-13.66	-13.33	-10.89	-5.85	-4.66
	-21.00	-13.45	-12.75	-11.00	-5.86	-4.70
	-19.39	-13.14	-12.21	-10.43	-5.77	-4.49
	-18.90	-12.71	-11.78	-10.25	-5.75	-4.43

ピーク値	-0.77	-8.46	-0.38	-8.46	-0.77	-0.38
平均値	-7.59	-11.02	-5.97	-13.21	-2.97	-2.58

平均化

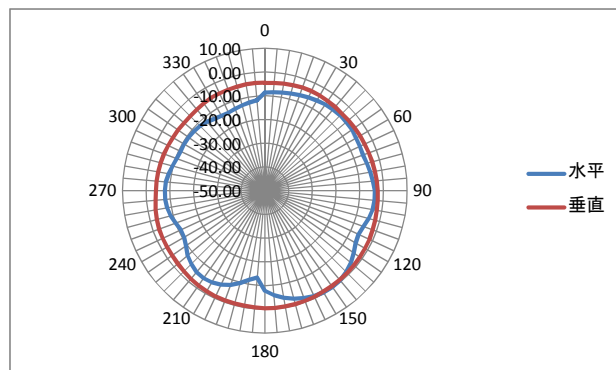


ピーク値	水平平均	垂直平均	平均化利得
-0.38	-5.97	-2.58	-2.58 dBi

サブ900MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-8.83	-15.33	-7.95	-8.91	-9.37	-6.12
	-8.94	-15.63	-8.09	-8.79	-9.26	-6.01
	-8.96	-15.74	-8.13	-8.39	-9.20	-5.77
	-8.91	-15.85	-8.11	-8.52	-8.98	-5.73
	-8.61	-15.78	-7.85	-8.75	-8.76	-5.75
30	-8.42	-15.56	-7.65	-9.84	-8.48	-6.10
	-7.99	-15.34	-7.26	-11.18	-8.24	-6.46
	-7.76	-15.03	-7.02	-13.83	-7.94	-6.95
	-7.66	-14.71	-6.88	-16.44	-7.60	-7.07
	-7.59	-14.34	-6.76	-19.44	-7.25	-6.99
60	-7.95	-13.96	-6.98	-21.23	-6.92	-6.76
	-8.10	-13.66	-7.03	-24.91	-6.55	-6.49
	-8.83	-13.40	-7.53	-31.20	-6.23	-6.22
	-9.20	-13.14	-7.73	-25.44	-5.83	-5.78
	-9.96	-12.93	-8.18	-21.02	-5.50	-5.38
90	-9.75	-12.80	-8.00	-18.76	-5.15	-4.96
	-8.75	-12.65	-7.27	-19.21	-4.81	-4.66
	-7.54	-12.63	-6.36	-20.37	-4.47	-4.36
	-6.16	-12.62	-5.27	-19.62	-4.13	-4.01
	-5.72	-12.71	-4.93	-15.93	-3.84	-3.58
120	-5.58	-12.77	-4.82	-13.27	-3.57	-3.12
	-6.51	-12.95	-5.62	-12.00	-3.26	-2.71
	-7.79	-13.19	-6.69	-12.06	-3.01	-2.50
	-9.21	-13.45	-7.82	-13.71	-2.76	-2.43
	-8.85	-13.71	-7.63	-15.84	-2.55	-2.35
150	-6.87	-14.06	-6.11	-19.51	-2.33	-2.25
	-4.69	-14.37	-4.24	-20.35	-2.14	-2.07
	-3.14	-14.76	-2.85	-17.77	-1.99	-1.88
	-2.09	-15.09	-1.88	-14.10	-1.84	-1.59
	-1.57	-15.42	-1.40	-11.37	-1.73	-1.29
180	-1.45	-15.65	-1.29	-10.07	-1.61	-1.03
	-1.74	-15.76	-1.57	-9.38	-1.55	-0.89
	-2.38	-15.72	-2.18	-9.66	-1.49	-0.87
	-3.29	-15.63	-3.04	-10.16	-1.45	-0.90
	-4.55	-15.30	-4.20	-11.22	-1.48	-1.04
210	-6.08	-14.92	-5.55	-12.28	-1.48	-1.13
	-8.07	-14.38	-7.16	-13.60	-1.51	-1.25
	-28.70	-13.85	-13.71	-12.60	-1.60	-1.27
	-23.06	-13.33	-12.89	-9.70	-1.65	-1.01
	-15.93	-12.75	-11.04	-10.57	-1.77	-1.23
240	-12.56	-12.17	-9.35	-12.01	-1.92	-1.51
	-10.45	-11.61	-7.98	-13.74	-2.06	-1.77
	-9.16	-11.12	-7.02	-16.07	-2.24	-2.06
	-8.57	-10.68	-6.49	-17.87	-2.43	-2.31
	-8.57	-10.24	-6.32	-19.07	-2.68	-2.58
270	-9.41	-9.85	-6.62	-17.30	-2.90	-2.74
	-10.95	-9.51	-7.16	-15.15	-3.16	-2.89
	-14.17	-9.18	-7.98	-13.63	-3.41	-3.01
	-18.62	-8.95	-8.50	-13.22	-3.71	-3.25
	-25.54	-8.79	-8.69	-14.20	-4.03	-3.63
300	-22.50	-8.59	-8.42	-16.62	-4.34	-4.09
	-16.81	-8.50	-7.90	-19.86	-4.69	-4.56
	-14.10	-8.41	-7.37	-23.14	-5.00	-4.93
	-12.78	-8.39	-7.04	-25.71	-5.35	-5.31
	-12.60	-8.40	-7.00	-24.10	-5.68	-5.62
330	-12.73	-8.44	-7.07	-24.72	-6.06	-6.00
	-12.54	-8.56	-7.10	-22.60	-6.40	-6.30
	-12.54	-8.68	-7.18	-26.45	-6.70	-6.65
	-12.59	-8.87	-7.33	-28.75	-7.08	-7.05
	-13.50	-9.12	-7.77	-24.30	-7.35	-7.27
	-14.84	-9.40	-8.31	-20.84	-7.64	-7.44
	-17.29	-9.70	-9.01	-16.65	-7.87	-7.33
	-20.10	-10.00	-9.59	-14.80	-8.18	-7.32
	-22.61	-10.33	-10.08	-13.20	-8.42	-7.17
	-22.53	-10.73	-10.45	-12.71	-8.63	-7.20
	-20.81	-11.19	-10.74	-12.90	-8.72	-7.31
	-18.92	-11.68	-10.93	-13.35	-8.91	-7.57
	-17.20	-12.12	-10.94	-13.68	-9.12	-7.82
	-16.09	-12.52	-10.94	-13.40	-9.13	-7.75
	-15.21	-12.93	-10.91	-12.98	-9.16	-7.65
	-14.88	-13.29	-11.00	-12.55	-9.26	-7.59
	-14.80	-13.47	-11.07	-12.63	-9.18	-7.56

ピーク値	-1.45	-8.39	-1.29	-8.39	-1.45	-0.87
平均値	-8.16	-11.74	-6.58	-13.56	-4.32	-3.83

平均化

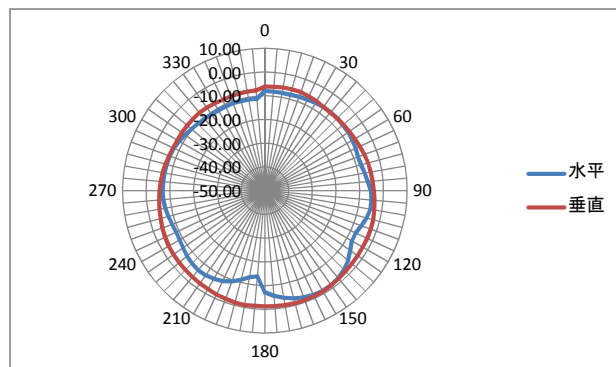


ピーク値	水平平均	垂直平均	平均化利得
-0.87	-6.58	-3.83	-3.83 dBi

サブ915MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-12.37	-14.70	-10.37	-8.72	-6.12	-4.22
	-12.76	-15.29	-10.83	-9.08	-6.11	-4.33
	-12.31	-15.80	-10.70	-9.33	-6.05	-4.38
	-11.97	-16.37	-10.63	-10.45	-5.94	-4.62
	-11.16	-16.86	-10.13	-11.43	-5.81	-4.76
30	-10.55	-17.00	-9.66	-12.94	-5.64	-4.90
	-9.79	-17.33	-9.08	-13.68	-5.44	-4.83
	-9.24	-17.60	-8.65	-15.21	-5.29	-4.87
	-8.72	-17.65	-8.20	-17.01	-5.12	-4.84
	-8.30	-17.31	-7.78	-21.38	-4.88	-4.78
60	-8.32	-17.27	-7.80	-26.42	-4.68	-4.65
	-8.20	-17.33	-7.70	-22.44	-4.43	-4.36
	-8.88	-17.17	-8.28	-19.61	-4.20	-4.08
	-9.10	-16.99	-8.45	-18.45	-3.96	-3.81
	-9.92	-16.86	-9.12	-18.69	-3.73	-3.59
90	-9.85	-16.98	-9.08	-19.19	-3.49	-3.37
	-9.30	-16.54	-8.55	-19.29	-3.25	-3.14
	-8.45	-16.83	-7.86	-19.51	-3.03	-2.93
	-7.28	-16.85	-6.82	-20.61	-2.79	-2.72
	-6.68	-16.84	-6.28	-21.31	-2.57	-2.51
120	-6.23	-16.71	-5.86	-20.04	-2.35	-2.28
	-6.65	-16.89	-6.26	-17.01	-2.18	-2.04
	-7.59	-17.05	-7.13	-15.27	-1.96	-1.77
	-8.90	-17.19	-8.30	-15.18	-1.75	-1.56
	-8.97	-17.35	-8.38	-16.91	-1.61	-1.49
150	-7.39	-17.66	-7.00	-22.04	-1.44	-1.41
	-5.09	-17.81	-4.86	-24.24	-1.31	-1.29
	-3.27	-17.81	-3.12	-20.09	-1.21	-1.15
	-1.90	-17.82	-1.79	-16.36	-1.08	-0.96
	-1.11	-17.73	-1.01	-13.51	-1.01	-0.78
180	-0.80	-17.46	-0.71	-11.82	-0.91	-0.57
	-0.88	-17.17	-0.78	-10.65	-0.87	-0.43
	-1.48	-16.83	-1.35	-10.43	-0.83	-0.38
	-2.32	-16.43	-2.16	-10.58	-0.81	-0.37
	-3.69	-15.96	-3.44	-11.57	-0.80	-0.45
210	-5.33	-15.22	-4.91	-12.70	-0.82	-0.55
	-7.60	-14.78	-6.84	-14.48	-0.84	-0.65
	-17.45	-14.45	-12.68	-10.63	-0.90	-0.46
	-13.37	-13.55	-10.45	-11.07	-1.00	-0.59
	-10.06	-13.11	-8.31	-11.85	-1.08	-0.73
240	-7.92	-12.40	-6.60	-12.88	-1.20	-0.92
	-6.61	-11.83	-5.47	-14.78	-1.31	-1.12
	-5.92	-11.42	-4.84	-17.71	-1.46	-1.36
	-5.89	-10.96	-4.71	-22.17	-1.63	-1.59
	-6.47	-10.57	-5.05	-22.00	-1.83	-1.79
270	-8.03	-10.19	-5.97	-19.79	-2.02	-1.95
	-10.48	-9.92	-7.18	-19.22	-2.19	-2.11
	-15.21	-9.62	-8.56	-20.23	-2.41	-2.34
	-24.25	-9.39	-9.25	-21.02	-2.63	-2.56
	-23.06	-9.18	-9.00	-21.44	-2.85	-2.79
300	-16.23	-8.98	-8.23	-24.14	-3.11	-3.08
	-13.24	-8.86	-7.51	-25.29	-3.37	-3.34
	-12.41	-8.79	-7.23	-21.31	-3.55	-3.48
	-12.54	-8.76	-7.24	-16.27	-3.81	-3.57
	-13.66	-8.74	-7.53	-15.36	-4.02	-3.72
330	-15.05	-8.76	-7.84	-14.91	-4.24	-3.88
	-16.53	-8.72	-8.05	-17.81	-4.43	-4.24
	-17.95	-8.82	-8.32	-21.83	-4.65	-4.57
	-19.28	-8.99	-8.60	-24.14	-4.85	-4.80
	-21.52	-9.18	-8.94	-22.11	-5.01	-4.93
	-23.22	-9.37	-9.20	-19.07	-5.11	-4.94
	-24.46	-9.53	-9.39	-18.77	-5.27	-5.08
	-24.01	-9.80	-9.64	-17.76	-5.35	-5.11
	-25.03	-10.07	-9.93	-16.17	-5.52	-5.16
	-27.80	-10.47	-10.39	-14.03	-5.62	-5.03
	-40.08	-10.71	-10.70	-12.90	-5.71	-4.95
	-32.66	-11.00	-10.97	-12.60	-5.80	-4.98
	-24.50	-11.43	-11.22	-13.11	-5.83	-5.08
	-20.73	-11.76	-11.24	-14.68	-5.88	-5.34
	-17.86	-12.11	-11.08	-16.05	-5.88	-5.48
	-16.16	-12.77	-11.13	-17.52	-5.92	-5.63
	-14.85	-13.15	-10.91	-17.52	-5.91	-5.62

ピーク値	-0.80	-8.72	-0.71	-8.72	-0.80	-0.37
平均値	-8.00	-12.45	-6.67	-14.86	-3.02	-2.75

平均化

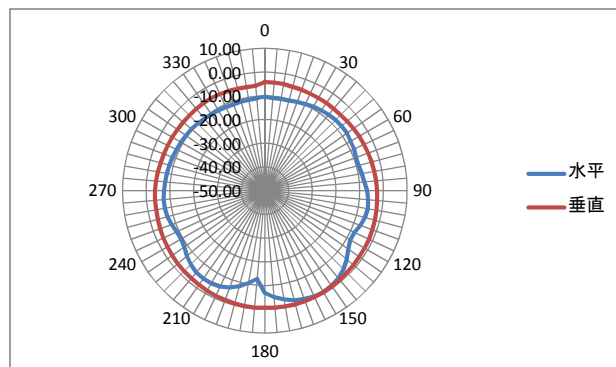


ピーク値	水平平均	垂直平均	平均化利得
-0.37	-6.67	-2.75	-2.75 dBi

サブ945MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-13.08	-15.83	-11.23	-18.09	-9.01	-8.50
	-13.29	-15.44	-11.22	-17.60	-8.98	-8.42
	-12.55	-14.92	-10.56	-17.53	-8.88	-8.32
	-11.89	-14.29	-9.91	-16.53	-8.86	-8.17
	-11.04	-13.77	-9.18	-15.79	-8.76	-7.97
30	-10.55	-13.20	-8.66	-14.67	-8.62	-7.65
	-10.13	-12.78	-8.24	-14.23	-8.42	-7.41
	-9.92	-12.30	-7.94	-14.18	-8.18	-7.21
	-9.77	-11.82	-7.67	-14.63	-7.98	-7.13
	-9.68	-11.40	-7.44	-15.33	-7.67	-6.98
60	-9.69	-11.02	-7.29	-16.03	-7.43	-6.87
	-9.57	-10.65	-7.07	-17.30	-7.12	-6.72
	-9.71	-10.36	-7.01	-19.43	-6.82	-6.59
	-9.62	-10.08	-6.83	-27.25	-6.55	-6.51
	-9.75	-9.85	-6.79	-28.15	-6.23	-6.20
90	-9.46	-9.63	-6.54	-19.45	-5.95	-5.76
	-8.91	-9.44	-6.15	-17.43	-5.66	-5.38
	-8.36	-9.30	-5.79	-16.54	-5.36	-5.04
	-7.70	-9.22	-5.38	-18.97	-5.10	-4.93
	-7.67	-9.13	-5.33	-19.72	-4.85	-4.71
120	-7.67	-9.08	-5.31	-21.24	-4.60	-4.51
	-8.26	-9.11	-5.65	-21.83	-4.33	-4.26
	-8.89	-9.16	-6.01	-23.37	-4.10	-4.05
	-9.88	-9.21	-6.52	-21.62	-3.87	-3.80
	-10.19	-9.35	-6.74	-19.74	-3.67	-3.57
150	-9.15	-9.45	-6.29	-19.67	-3.50	-3.40
	-7.27	-9.65	-5.29	-22.32	-3.33	-3.27
	-5.37	-9.90	-4.06	-27.27	-3.17	-3.15
	-4.02	-10.13	-3.07	-26.48	-3.03	-3.01
	-3.07	-10.47	-2.34	-21.39	-2.89	-2.83
180	-2.62	-10.81	-2.00	-17.14	-2.77	-2.61
	-2.47	-11.17	-1.92	-14.34	-2.69	-2.40
	-2.89	-11.60	-2.34	-11.99	-2.60	-2.13
	-3.60	-12.11	-3.03	-10.76	-2.56	-1.95
	-4.90	-12.66	-4.23	-9.71	-2.49	-1.73
210	-6.50	-13.22	-5.66	-9.48	-2.47	-1.68
	-8.69	-13.84	-7.53	-9.08	-2.48	-1.62
	-19.32	-14.46	-13.23	-13.79	-2.51	-2.20
	-14.29	-15.13	-11.68	-12.73	-2.56	-2.16
	-11.12	-15.89	-9.87	-11.77	-2.64	-2.14
240	-9.49	-16.54	-8.71	-11.08	-2.68	-2.09
	-8.59	-17.13	-8.02	-10.60	-2.79	-2.13
	-8.53	-17.71	-8.04	-10.72	-2.88	-2.22
	-8.97	-18.07	-8.47	-11.43	-3.02	-2.44
	-10.11	-18.32	-9.50	-13.45	-3.17	-2.78
270	-12.14	-18.34	-11.20	-17.13	-3.34	-3.16
	-15.69	-18.15	-13.74	-22.59	-3.52	-3.47
	-23.57	-17.90	-16.86	-24.16	-3.69	-3.66
	-29.48	-17.53	-17.26	-19.32	-3.88	-3.76
	-20.67	-17.09	-15.51	-17.04	-4.11	-3.90
300	-18.27	-16.64	-14.37	-15.28	-4.36	-4.02
	-17.74	-16.25	-13.92	-15.40	-4.60	-4.25
	-18.07	-15.84	-13.80	-17.76	-4.83	-4.62
	-18.24	-15.59	-13.71	-24.54	-5.12	-5.07
	-20.60	-15.30	-14.18	-22.00	-5.40	-5.30
330	-25.60	-15.14	-14.76	-16.15	-5.61	-5.24
	-26.13	-15.04	-14.71	-14.55	-5.87	-5.32
	-19.83	-14.97	-13.74	-14.86	-6.11	-5.56
	-16.48	-14.99	-12.67	-17.79	-6.39	-6.09
	-15.29	-15.08	-12.17	-20.99	-6.63	-6.48
	-15.05	-15.22	-12.12	-27.18	-6.85	-6.81
	-15.77	-15.45	-12.60	-33.99	-7.10	-7.09
	-16.97	-15.68	-13.26	-29.65	-7.34	-7.31
	-18.77	-16.01	-14.17	-22.48	-7.50	-7.36
	-20.55	-16.37	-14.97	-17.69	-7.68	-7.27
	-21.73	-16.75	-15.55	-15.74	-7.92	-7.26
	-21.10	-17.15	-15.68	-14.08	-8.03	-7.07
	-19.36	-17.50	-15.32	-13.23	-8.19	-7.00
	-17.39	-17.77	-14.56	-11.93	-8.30	-6.74
	-15.41	-17.91	-13.47	-11.27	-8.45	-6.62
	-13.90	-17.91	-12.45	-10.45	-8.55	-6.38
	-12.67	-17.68	-11.48	-10.37	-8.59	-6.38

ピーク値	-2.47	-9.08	-1.92	-9.08	-2.47	-1.62
平均値	-9.44	-12.71	-7.76	-15.02	-4.90	-4.49

平均化

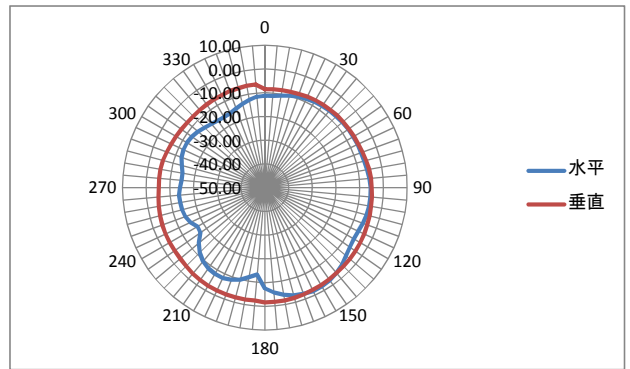


ピーク値	水平平均	垂直平均	平均化利得
-1.62	-7.76	-4.49	-4.49 dBi

サブ960MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-17.03	-14.23	-12.40	-10.62	-9.75	-7.15
	-15.77	-14.92	-12.31	-10.96	-9.76	-7.31
	-14.34	-15.64	-11.93	-11.18	-9.66	-7.34
	-13.70	-16.45	-11.85	-11.60	-9.58	-7.47
	-12.91	-17.17	-11.53	-11.82	-9.49	-7.49
	-12.57	-18.00	-11.48	-12.66	-9.34	-7.68
30	-12.07	-18.73	-11.22	-13.91	-9.09	-7.85
	-11.70	-19.37	-11.02	-16.78	-8.88	-8.23
	-11.25	-19.92	-10.70	-20.46	-8.70	-8.42
	-10.87	-20.11	-10.38	-26.08	-8.38	-8.31
	-10.62	-20.15	-10.16	-29.78	-8.16	-8.13
	-10.39	-19.96	-9.94	-33.58	-7.86	-7.85
60	-10.64	-19.66	-10.13	-26.57	-7.52	-7.47
	-10.69	-19.19	-10.11	-20.10	-7.25	-7.03
	-11.03	-18.83	-10.36	-17.79	-6.98	-6.64
	-10.77	-18.32	-10.07	-16.72	-6.67	-6.26
	-10.18	-17.86	-9.49	-17.48	-6.37	-6.05
	-9.40	-17.49	-8.77	-18.84	-6.11	-5.89
90	-8.40	-17.12	-7.85	-22.90	-5.85	-5.77
	-7.99	-16.85	-7.46	-40.91	-5.60	-5.60
	-7.72	-16.58	-7.19	-22.29	-5.35	-5.27
	-8.24	-16.38	-7.62	-15.98	-5.08	-4.74
	-8.99	-16.26	-8.24	-13.98	-4.86	-4.36
	-10.18	-16.18	-9.20	-14.15	-4.63	-4.17
120	-10.77	-16.13	-9.66	-16.01	-4.43	-4.14
	-10.17	-16.14	-9.19	-20.55	-4.25	-4.15
	-8.48	-16.22	-7.80	-24.94	-4.10	-4.06
	-6.65	-16.23	-6.19	-20.91	-3.95	-3.86
	-5.20	-16.38	-4.88	-15.84	-3.83	-3.57
	-4.14	-16.55	-3.89	-12.60	-3.68	-3.15
150	-3.54	-16.69	-3.33	-11.01	-3.58	-2.86
	-3.39	-16.84	-3.20	-10.37	-3.51	-2.69
	-3.78	-16.95	-3.57	-10.60	-3.46	-2.69
	-4.57	-17.04	-4.33	-11.36	-3.45	-2.80
	-5.91	-17.05	-5.59	-12.37	-3.40	-2.88
	-7.66	-16.98	-7.18	-13.74	-3.39	-3.01
180	-10.06	-16.82	-9.23	-14.95	-3.41	-3.11
	-18.51	-16.62	-14.45	-11.33	-3.44	-2.78
	-15.37	-16.30	-12.80	-12.17	-3.52	-2.97
	-12.30	-15.93	-10.74	-13.42	-3.59	-3.16
	-10.55	-15.48	-9.34	-14.78	-3.68	-3.35
	-9.63	-15.05	-8.53	-16.58	-3.79	-3.56
210	-9.37	-14.58	-8.23	-18.89	-3.92	-3.79
	-9.79	-14.09	-8.42	-23.20	-4.07	-4.02
	-10.70	-13.65	-8.92	-27.71	-4.19	-4.17
	-12.47	-13.20	-9.81	-23.19	-4.39	-4.33
	-15.40	-12.75	-10.87	-19.64	-4.61	-4.47
	-21.04	-12.39	-11.84	-19.23	-4.82	-4.66
240	-35.65	-12.02	-12.00	-19.98	-5.04	-4.91
	-26.33	-11.67	-11.52	-21.39	-5.27	-5.16
	-20.29	-11.38	-10.85	-22.49	-5.51	-5.42
	-17.68	-11.12	-10.25	-27.74	-5.72	-5.69
	-17.01	-10.90	-9.95	-28.44	-6.00	-5.97
	-17.55	-10.72	-9.90	-18.71	-6.30	-6.05
270	-19.48	-10.56	-10.04	-16.19	-6.54	-6.09
	-21.35	-10.46	-10.12	-15.55	-6.77	-6.23
	-22.17	-10.37	-10.09	-18.70	-7.10	-6.81
	-21.76	-10.37	-10.07	-24.33	-7.35	-7.26
	-21.55	-10.37	-10.05	-36.23	-7.55	-7.55
	-22.00	-10.44	-10.15	-24.96	-7.84	-7.75
300	-22.37	-10.53	-10.25	-19.86	-8.05	-7.77
	-23.50	-10.66	-10.44	-17.45	-8.28	-7.78
	-25.21	-10.84	-10.69	-15.58	-8.50	-7.72
	-27.46	-11.06	-10.96	-15.06	-8.73	-7.82
	-27.40	-11.34	-11.23	-15.31	-8.88	-7.99
	-23.91	-11.62	-11.37	-15.90	-9.06	-8.24
330	-21.15	-11.96	-11.47	-16.85	-9.17	-8.48
	-18.81	-12.40	-11.51	-17.49	-9.35	-8.73
	-17.33	-12.87	-11.54	-18.64	-9.42	-8.93
	-16.05	-13.43	-11.54	-19.66	-9.56	-9.15
	-15.05	-13.94	-11.45	-21.33	-9.57	-9.29
	-14.06	-14.63	-11.32	-22.96	-9.63	-9.43

ピーク値	-3.39	-10.37	-3.20	-10.37	-3.39	-2.69
平均値	-10.46	-13.97	-8.86	-15.78	-5.83	-5.41

平均化

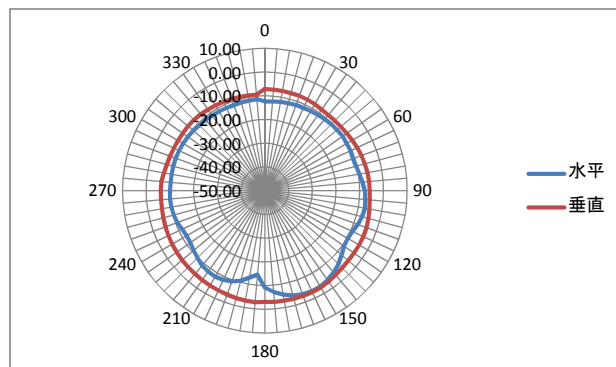


ピーク値	水平平均	垂直平均	平均化利得
-2.69	-8.86	-5.41	-5.41 dBi

サブ1447.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-17.59	-25.44	-16.93	-17.16	-15.35	-13.15
	-17.15	-23.15	-16.17	-16.63	-15.34	-12.93
	-16.80	-21.37	-15.50	-16.91	-15.36	-13.06
	-16.46	-19.84	-14.82	-17.54	-15.39	-13.32
	-16.25	-18.58	-14.25	-18.31	-15.50	-13.67
30	-16.17	-17.62	-13.82	-18.96	-15.53	-13.90
	-16.48	-16.72	-13.59	-19.80	-15.71	-14.28
	-16.76	-16.00	-13.35	-20.26	-15.92	-14.56
	-16.86	-15.43	-13.08	-20.91	-16.10	-14.86
	-16.89	-14.85	-12.74	-19.66	-16.30	-14.65
60	-16.76	-14.51	-12.48	-18.16	-16.48	-14.23
	-17.19	-14.15	-12.40	-16.08	-16.62	-13.33
	-17.89	-13.91	-12.45	-15.17	-16.75	-12.88
	-19.53	-13.72	-12.71	-14.83	-16.79	-12.69
	-21.53	-13.62	-12.97	-15.29	-16.72	-12.93
90	-23.13	-13.53	-13.07	-15.44	-16.55	-12.95
	-23.30	-13.53	-13.09	-15.46	-16.15	-12.78
	-22.52	-13.58	-13.06	-14.54	-15.86	-12.14
	-22.28	-13.72	-13.16	-13.96	-15.45	-11.63
	-25.00	-13.86	-13.53	-13.73	-15.07	-11.34
120	-36.14	-14.11	-14.08	-14.80	-14.55	-11.66
	-30.64	-14.30	-14.20	-16.24	-14.08	-12.02
	-21.77	-14.70	-13.92	-16.58	-13.63	-11.85
	-18.10	-15.07	-13.31	-14.39	-13.13	-10.71
	-16.73	-15.57	-13.10	-12.91	-12.68	-9.78
150	-17.20	-16.07	-13.59	-12.80	-12.35	-9.56
	-18.25	-16.75	-14.43	-13.76	-11.96	-9.76
	-17.40	-17.37	-14.37	-15.62	-11.62	-10.17
	-14.86	-18.25	-13.22	-17.02	-11.33	-10.30
	-12.45	-19.10	-11.60	-17.12	-11.11	-10.14
180	-11.17	-20.11	-10.65	-16.71	-10.89	-9.88
	-10.46	-21.09	-10.10	-16.25	-10.74	-9.67
	-10.42	-22.07	-10.13	-16.31	-10.58	-9.55
	-10.61	-22.55	-10.34	-16.05	-10.49	-9.43
	-11.08	-22.83	-10.80	-16.08	-10.44	-9.39
210	-11.51	-22.39	-11.17	-16.08	-10.42	-9.38
	-11.99	-21.62	-11.54	-16.51	-10.46	-9.49
	-15.77	-20.58	-14.53	-13.81	-10.53	-8.86
	-15.75	-19.52	-14.23	-13.79	-10.63	-8.92
	-16.28	-18.62	-14.28	-13.90	-10.79	-9.06
240	-17.35	-17.64	-14.48	-14.36	-10.96	-9.32
	-19.54	-16.69	-14.88	-15.27	-11.21	-9.77
	-22.04	-15.96	-15.00	-17.21	-11.42	-10.41
	-23.08	-15.29	-14.62	-19.43	-11.79	-11.10
	-20.19	-14.77	-13.67	-20.72	-12.08	-11.52
270	-17.42	-14.26	-12.55	-17.86	-12.46	-11.36
	-16.08	-13.81	-11.79	-14.85	-12.85	-10.73
	-15.77	-13.49	-11.47	-13.53	-13.39	-10.45
	-16.76	-13.31	-11.69	-13.48	-13.92	-10.69
	-19.27	-13.01	-12.09	-14.40	-14.49	-11.43
300	-23.52	-12.88	-12.52	-15.85	-15.13	-12.46
	-24.19	-12.80	-12.49	-15.52	-15.80	-12.64
	-21.29	-12.80	-12.23	-14.18	-16.53	-12.19
	-19.31	-12.80	-11.92	-13.40	-17.31	-11.92
	-18.86	-12.85	-11.88	-13.93	-18.15	-12.53
330	-19.92	-12.99	-12.19	-14.94	-19.03	-13.51
	-22.06	-13.20	-12.67	-16.10	-19.82	-14.57
	-24.33	-13.40	-13.07	-16.05	-20.66	-14.76
	-26.18	-13.85	-13.60	-15.43	-21.27	-14.42
	-26.65	-14.22	-13.98	-14.96	-21.75	-14.14
	-26.19	-14.65	-14.35	-15.51	-21.94	-14.62
	-25.30	-15.22	-14.81	-16.18	-21.76	-15.12
	-25.96	-15.88	-15.47	-17.28	-21.43	-15.87
	-26.98	-16.72	-16.33	-17.72	-20.92	-16.02
	-27.35	-17.63	-17.19	-17.53	-20.32	-15.70
	-26.74	-18.74	-18.10	-16.86	-19.76	-15.06
	-24.71	-20.08	-18.80	-15.94	-19.25	-14.28
	-22.54	-21.97	-19.24	-15.21	-18.73	-13.62
	-20.05	-24.17	-18.63	-15.22	-18.26	-13.47
	-18.46	-26.86	-17.87	-15.43	-17.95	-13.50
	-16.96	-30.84	-16.79	-15.90	-17.61	-13.66
	-16.36	-35.91	-16.31	-15.98	-17.35	-13.60

ピーク値	-10.42	-12.80	-10.10	-12.80	-10.42	-8.86
平均値	-17.00	-15.74	-13.31	-15.65	-14.05	-11.77

平均化

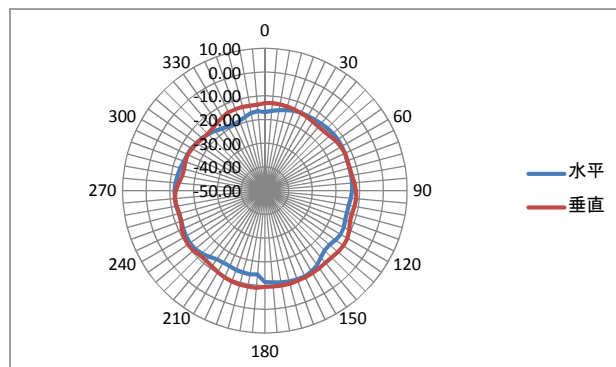


ピーク値	水平平均	垂直平均	平均化利得
-8.86	-13.31	-11.77	-11.77 dBi

サブ1462.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-16.68	-25.75	-16.17	-16.24	-17.48	-13.81
	-16.56	-24.17	-15.86	-15.77	-17.35	-13.48
	-16.68	-22.46	-15.66	-15.74	-17.23	-13.41
	-16.71	-20.90	-15.31	-15.80	-17.16	-13.42
	-16.97	-19.40	-15.01	-16.23	-17.10	-13.63
	-17.44	-18.35	-14.86	-16.51	-17.15	-13.81
30	-18.09	-17.38	-14.71	-16.87	-17.10	-13.97
	-18.53	-16.51	-14.39	-17.13	-17.10	-14.11
	-18.68	-15.83	-14.01	-17.39	-17.26	-14.32
	-18.29	-15.22	-13.48	-17.22	-17.36	-14.28
	-17.63	-14.73	-12.93	-16.65	-17.35	-13.97
	-17.65	-14.20	-12.58	-15.70	-17.35	-13.44
60	-18.16	-13.84	-12.47	-14.92	-17.31	-12.95
	-19.79	-13.54	-12.62	-14.48	-17.34	-12.67
	-22.44	-13.32	-12.82	-14.84	-17.00	-12.77
	-25.63	-13.06	-12.83	-15.35	-16.85	-13.03
	-27.31	-12.88	-12.72	-15.43	-16.51	-12.93
	-27.43	-12.81	-12.66	-14.31	-16.15	-12.12
90	-25.73	-12.72	-12.51	-13.32	-15.70	-11.34
	-26.70	-12.78	-12.60	-12.72	-15.30	-10.81
	-34.13	-12.78	-12.75	-13.46	-14.90	-11.11
	-33.46	-12.93	-12.89	-14.83	-14.43	-11.62
	-23.39	-13.06	-12.68	-15.23	-14.00	-11.56
	-19.75	-13.30	-12.41	-14.33	-13.58	-10.93
120	-18.22	-13.55	-12.28	-13.39	-13.22	-10.30
	-18.33	-13.93	-12.58	-13.44	-12.85	-10.13
	-19.25	-14.38	-13.15	-14.70	-12.57	-10.50
	-18.78	-15.01	-13.49	-17.16	-12.31	-11.08
	-16.27	-15.69	-12.96	-18.98	-12.06	-11.25
	-13.76	-16.55	-11.92	-17.72	-11.82	-10.82
150	-12.24	-17.46	-11.10	-15.92	-11.62	-10.25
	-11.32	-18.81	-10.61	-14.14	-11.48	-9.60
	-11.20	-20.31	-10.70	-13.37	-11.33	-9.22
	-11.42	-22.40	-11.08	-12.97	-11.28	-9.03
	-11.93	-25.07	-11.73	-12.87	-11.23	-8.96
	-12.42	-29.31	-12.33	-12.91	-11.20	-8.96
180	-12.95	-34.24	-12.92	-12.99	-11.26	-9.03
	-18.06	-34.69	-17.97	-14.79	-11.32	-9.71
	-18.36	-29.12	-18.01	-14.71	-11.41	-9.74
	-18.95	-25.39	-18.06	-14.63	-11.56	-9.82
	-19.68	-22.56	-17.87	-14.44	-11.73	-9.87
	-21.44	-20.51	-17.94	-14.45	-11.94	-10.00
210	-23.89	-19.07	-17.84	-15.13	-12.20	-10.41
	-23.95	-17.99	-17.01	-16.18	-12.57	-11.00
	-20.65	-16.92	-15.38	-17.00	-12.85	-11.44
	-17.85	-16.07	-13.86	-16.04	-13.21	-11.39
	-16.49	-15.38	-12.89	-13.99	-13.63	-10.80
	-16.26	-14.69	-12.39	-13.03	-14.14	-10.54
240	-17.51	-14.28	-12.59	-13.16	-14.64	-10.83
	-20.48	-13.93	-13.06	-14.57	-15.35	-11.94
	-23.23	-13.67	-13.21	-16.11	-15.92	-13.00
	-22.07	-13.42	-12.87	-15.55	-16.64	-13.05
	-19.94	-13.28	-12.43	-13.78	-17.40	-12.22
	-19.15	-13.19	-12.21	-13.16	-18.24	-11.98
270	-20.16	-13.16	-12.37	-13.44	-19.16	-12.41
	-22.44	-13.20	-12.71	-13.88	-20.15	-12.96
	-24.87	-13.31	-13.01	-14.30	-21.09	-13.47
	-27.51	-13.44	-13.27	-14.14	-22.19	-13.51
	-30.61	-13.67	-13.59	-14.00	-23.31	-13.52
	-34.60	-13.92	-13.89	-13.95	-24.30	-13.56
300	-34.21	-14.35	-14.31	-14.19	-24.82	-13.83
	-29.76	-14.82	-14.68	-14.57	-25.22	-14.21
	-27.71	-15.34	-15.09	-15.54	-24.95	-15.06
	-26.73	-16.05	-15.69	-16.19	-24.70	-15.61
	-25.59	-17.09	-16.52	-17.23	-24.07	-16.41
	-24.39	-17.99	-17.09	-17.57	-23.51	-16.58
330	-22.26	-19.30	-17.52	-17.45	-22.54	-16.28
	-20.45	-20.48	-17.45	-16.40	-21.89	-15.32
	-18.63	-22.34	-17.09	-15.53	-21.13	-14.47
	-17.49	-24.20	-16.65	-15.12	-20.61	-14.04
	-16.55	-26.35	-16.12	-14.98	-20.18	-13.83
	-16.01	-28.09	-15.75	-14.98	-19.68	-13.71

ピーク値	-11.20	-12.72	-10.61	-12.72	-11.20	-8.96
平均値	-17.87	-15.69	-13.64	-14.85	-14.92	-11.88

平均化

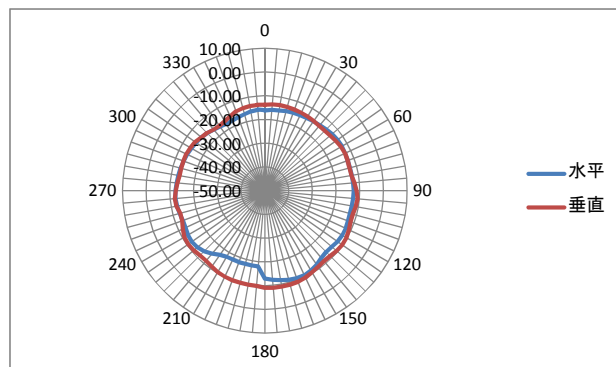


ピーク値	水平平均	垂直平均	平均化利得
-8.96	-13.64	-11.88	-11.88 dBi

サブ1495.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-14.16	-29.44	-14.03	-14.42	-17.01	-12.51
	-14.02	-26.83	-13.80	-14.17	-16.83	-12.29
	-13.85	-24.01	-13.45	-14.19	-16.62	-12.22
	-13.96	-21.71	-13.29	-14.30	-16.47	-12.24
	-14.11	-20.01	-13.12	-14.56	-16.42	-12.38
30	-14.56	-18.50	-13.09	-15.09	-16.38	-12.67
	-15.17	-17.44	-13.15	-15.48	-16.38	-12.90
	-15.47	-16.21	-12.81	-15.86	-16.45	-13.14
	-15.46	-15.29	-12.36	-15.75	-16.44	-13.07
	-14.84	-14.49	-11.65	-15.29	-16.54	-12.86
60	-14.29	-13.85	-11.05	-14.45	-16.59	-12.37
	-14.02	-13.22	-10.59	-13.46	-16.63	-11.75
	-14.23	-12.70	-10.39	-12.78	-16.66	-11.29
	-15.05	-12.33	-10.47	-12.60	-16.59	-11.14
	-16.07	-12.00	-10.57	-12.87	-16.42	-11.28
90	-17.09	-11.70	-10.59	-13.39	-16.16	-11.55
	-18.25	-11.52	-10.69	-13.56	-15.86	-11.55
	-19.86	-11.36	-10.78	-12.88	-15.51	-10.99
	-20.46	-11.29	-10.79	-12.20	-15.05	-10.39
	-20.67	-11.29	-10.82	-11.38	-14.62	-9.70
120	-20.72	-11.36	-10.88	-11.55	-14.12	-9.64
	-22.79	-11.39	-11.09	-12.33	-13.64	-9.93
	-26.81	-11.52	-11.40	-12.98	-13.14	-10.05
	-21.54	-11.80	-11.36	-12.66	-12.69	-9.66
	-17.99	-12.10	-11.10	-11.87	-12.29	-9.07
150	-17.02	-12.44	-11.14	-11.56	-11.96	-8.75
	-17.19	-12.86	-11.50	-12.44	-11.56	-8.96
	-17.66	-13.38	-12.00	-14.73	-11.25	-9.64
	-16.37	-13.91	-11.96	-17.18	-10.95	-10.02
	-13.69	-14.75	-11.18	-17.22	-10.75	-9.87
180	-11.85	-15.58	-10.32	-15.04	-10.54	-9.22
	-10.56	-16.45	-9.56	-12.91	-10.38	-8.45
	-10.16	-17.65	-9.45	-11.89	-10.27	-7.99
	-10.24	-18.98	-9.69	-11.40	-10.18	-7.73
	-10.72	-20.38	-10.28	-11.29	-10.17	-7.68
210	-11.20	-22.23	-10.87	-11.32	-10.16	-7.69
	-11.71	-24.11	-11.47	-11.43	-10.20	-7.76
	-16.98	-25.75	-16.44	-13.28	-10.29	-8.52
	-17.69	-26.37	-17.14	-12.89	-10.44	-8.49
	-18.50	-25.56	-17.72	-12.50	-10.59	-8.43
240	-19.43	-23.71	-18.05	-12.43	-10.81	-8.54
	-21.18	-21.88	-18.50	-12.74	-11.05	-8.80
	-22.07	-20.26	-18.06	-13.83	-11.35	-9.41
	-20.26	-18.82	-16.47	-15.16	-11.67	-10.06
	-17.50	-17.61	-14.54	-15.43	-12.04	-10.40
270	-15.48	-16.70	-13.04	-13.90	-12.43	-10.09
	-14.85	-15.83	-12.30	-12.07	-12.91	-9.46
	-15.61	-15.16	-12.37	-11.63	-13.45	-9.44
	-17.33	-14.57	-12.72	-12.14	-14.05	-9.98
	-18.61	-14.06	-12.76	-13.64	-14.74	-11.14
300	-18.58	-13.66	-12.45	-14.49	-15.48	-11.94
	-18.06	-13.42	-12.14	-13.56	-16.24	-11.69
	-18.29	-13.09	-11.95	-12.50	-17.04	-11.19
	-19.96	-12.97	-12.18	-12.32	-18.03	-11.29
	-22.17	-12.89	-12.41	-12.56	-19.12	-11.69
330	-24.79	-12.88	-12.61	-12.71	-20.43	-12.03
	-26.62	-12.90	-12.72	-12.65	-21.58	-12.13
	-30.20	-13.00	-12.92	-12.82	-23.24	-12.44
	-37.25	-13.22	-13.20	-13.27	-24.80	-12.98
	-35.76	-13.57	-13.54	-13.69	-26.39	-13.46
	-27.84	-13.86	-13.69	-13.68	-27.97	-13.52
	-24.87	-14.32	-13.95	-13.50	-28.95	-13.38
	-23.14	-14.85	-14.25	-13.55	-28.51	-13.41
	-22.75	-15.51	-14.75	-13.76	-27.18	-13.57
	-21.92	-16.26	-15.21	-14.36	-25.66	-14.05
	-20.61	-17.17	-15.55	-14.77	-24.51	-14.33
	-18.88	-18.38	-15.61	-14.29	-23.24	-13.77
	-17.28	-19.61	-15.28	-13.43	-22.18	-12.88
	-15.70	-21.56	-14.70	-12.78	-21.26	-12.20
	-14.63	-23.41	-14.09	-12.43	-20.52	-11.80
	-13.84	-26.15	-13.59	-12.28	-20.02	-11.60
	-13.30	-29.22	-13.19	-12.05	-19.43	-11.32

ピーク値	-10.16	-11.29	-9.45	-11.29	-10.16	-7.68
平均値	-15.97	-14.85	-12.36	-13.16	-14.10	-10.60

平均化

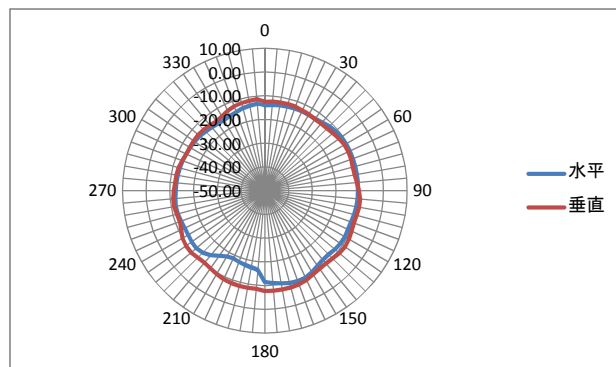


ピーク値	水平平均	垂直平均	平均化利得
-7.68	-12.36	-10.60	-10.60 dBi

サブ1510.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-14.55	-20.74	-13.61	-11.28	-16.16	-10.05
	-14.03	-22.46	-13.45	-11.20	-16.06	-9.97
	-13.73	-23.92	-13.33	-11.08	-16.12	-9.89
	-13.54	-24.33	-13.19	-11.61	-16.14	-10.30
	-13.53	-23.77	-13.14	-12.33	-16.27	-10.86
	-13.69	-22.42	-13.14	-13.38	-16.49	-11.65
30	-13.90	-21.02	-13.12	-13.93	-16.84	-12.14
	-14.01	-19.54	-12.94	-14.30	-17.20	-12.50
	-13.85	-18.13	-12.47	-14.02	-17.56	-12.43
	-13.23	-17.06	-11.73	-13.63	-18.01	-12.28
	-12.79	-16.11	-11.13	-13.31	-18.40	-12.14
	-12.64	-15.30	-10.76	-13.11	-18.84	-12.08
60	-12.94	-14.59	-10.68	-13.42	-19.23	-12.41
	-13.77	-14.02	-10.88	-13.70	-19.41	-12.67
	-14.53	-13.55	-11.00	-13.75	-19.54	-12.73
	-15.22	-13.21	-11.09	-13.87	-19.27	-12.77
	-15.91	-12.88	-11.12	-14.18	-19.01	-12.95
	-17.21	-12.69	-11.38	-14.51	-18.37	-13.02
90	-18.47	-12.60	-11.60	-14.26	-17.67	-12.63
	-20.20	-12.55	-11.86	-13.88	-16.99	-12.15
	-21.05	-12.55	-11.97	-14.11	-16.17	-12.00
	-22.35	-12.71	-12.26	-15.46	-15.44	-12.44
	-26.09	-12.89	-12.68	-17.08	-14.79	-12.78
	-25.33	-13.15	-12.89	-16.02	-14.06	-11.92
120	-20.03	-13.56	-12.68	-13.92	-13.46	-10.67
	-17.78	-14.00	-12.48	-13.38	-12.85	-10.10
	-16.96	-14.52	-12.56	-14.22	-12.38	-10.19
	-17.31	-15.16	-13.09	-16.98	-11.86	-10.70
	-16.40	-16.01	-13.19	-19.19	-11.46	-10.78
	-14.08	-16.99	-12.29	-17.92	-11.10	-10.28
150	-12.08	-18.23	-11.14	-15.42	-10.78	-9.50
	-10.63	-19.68	-10.12	-13.96	-10.47	-8.87
	-10.04	-21.44	-9.74	-13.45	-10.32	-8.60
	-9.94	-23.99	-9.77	-13.43	-10.12	-8.46
	-10.25	-27.37	-10.16	-13.50	-10.01	-8.40
	-10.69	-33.32	-10.67	-13.75	-9.95	-8.44
180	-11.09	-41.29	-11.08	-13.76	-9.94	-8.43
	-14.36	-32.58	-14.30	-12.55	-9.97	-8.06
	-15.35	-27.38	-15.09	-11.91	-10.01	-7.84
	-16.16	-23.98	-15.49	-11.77	-10.18	-7.89
	-17.11	-21.60	-15.79	-11.82	-10.39	-8.03
	-18.19	-19.69	-15.86	-12.25	-10.59	-8.33
210	-19.16	-18.15	-15.61	-13.26	-10.89	-8.91
	-18.75	-17.06	-14.81	-15.16	-11.23	-9.75
	-17.55	-16.07	-13.74	-16.95	-11.59	-10.48
	-16.21	-15.09	-12.61	-17.11	-12.11	-10.92
	-15.78	-14.34	-11.99	-15.27	-12.59	-10.72
	-15.64	-13.69	-11.55	-13.58	-13.16	-10.36
240	-15.18	-13.16	-11.05	-13.10	-13.82	-10.43
	-14.56	-12.72	-10.53	-13.30	-14.50	-10.85
	-14.25	-12.29	-10.15	-13.90	-15.34	-11.55
	-15.32	-11.96	-10.31	-13.79	-16.30	-11.85
	-17.44	-11.70	-10.67	-13.14	-17.33	-11.74
	-19.86	-11.42	-10.83	-12.38	-18.61	-11.45
270	-20.22	-11.26	-10.74	-11.87	-20.02	-11.25
	-19.65	-11.14	-10.56	-12.18	-21.50	-11.70
	-19.97	-11.14	-10.60	-12.85	-23.64	-12.50
	-21.67	-11.08	-10.71	-13.53	-26.10	-13.29
	-25.73	-11.13	-10.98	-13.67	-28.73	-13.53
	-32.49	-11.25	-11.22	-12.82	-32.31	-12.77
300	-51.87	-11.38	-11.38	-12.13	-33.55	-12.10
	-32.89	-11.62	-11.58	-11.91	-30.88	-11.86
	-27.88	-11.91	-11.80	-12.37	-27.99	-12.25
	-26.49	-12.23	-12.07	-13.35	-25.76	-13.11
	-25.15	-12.71	-12.46	-14.41	-24.16	-13.97
	-22.33	-13.18	-12.68	-14.94	-22.56	-14.25
330	-19.57	-13.80	-12.78	-14.75	-21.25	-13.87
	-17.26	-14.51	-12.66	-13.99	-20.48	-13.11
	-15.60	-15.35	-12.46	-13.35	-19.76	-12.45
	-14.28	-16.24	-12.14	-12.99	-19.13	-12.05
	-13.16	-17.45	-11.79	-12.89	-18.71	-11.88
	-12.37	-18.77	-11.47	-12.71	-18.31	-11.65

ピーク値	-9.94	-11.08	-9.74	-11.08	-9.94	-7.84
平均値	-15.22	-14.57	-11.87	-13.48	-14.34	-10.88

平均化

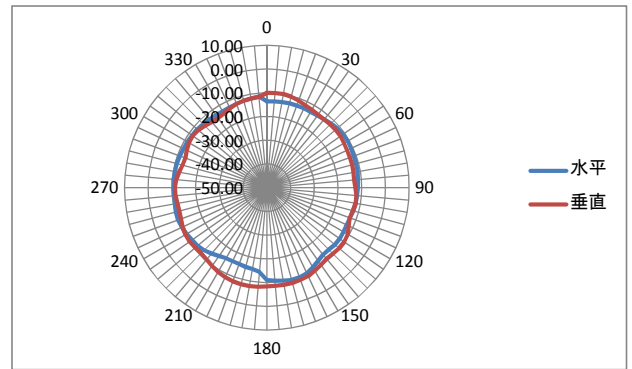


ピーク値	水平平均	垂直平均	平均化利得
-7.84	-11.87	-10.88	-10.88 dBi

サブ1575.42MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-19.62	-24.12	-18.30	-17.83	-17.70	-14.75
	-18.34	-23.67	-17.23	-18.15	-17.62	-14.87
	-17.24	-23.28	-16.28	-18.05	-17.53	-14.77
	-16.37	-22.77	-15.48	-18.43	-17.48	-14.92
	-15.66	-22.23	-14.80	-19.04	-17.35	-15.10
30	-15.13	-21.62	-14.25	-20.09	-17.30	-15.46
	-14.84	-21.18	-13.93	-20.83	-17.13	-15.58
	-14.41	-20.66	-13.49	-20.72	-17.00	-15.47
	-13.82	-20.24	-12.92	-19.91	-16.85	-15.11
	-13.22	-19.99	-12.39	-19.34	-16.56	-14.72
60	-12.71	-19.75	-11.93	-19.79	-16.27	-14.67
	-12.54	-19.69	-11.77	-20.96	-16.12	-14.89
	-12.77	-19.42	-11.92	-22.62	-15.75	-14.94
	-13.05	-19.39	-12.14	-23.41	-15.53	-14.88
	-13.23	-19.18	-12.25	-22.78	-15.28	-14.57
90	-13.29	-19.38	-12.34	-22.56	-14.97	-14.27
	-13.25	-19.36	-12.30	-23.94	-14.69	-14.20
	-13.51	-19.56	-12.55	-26.53	-14.48	-14.22
	-13.93	-19.81	-12.93	-28.28	-14.26	-14.09
	-14.67	-19.94	-13.54	-28.42	-14.03	-13.87
120	-15.31	-20.26	-14.11	-28.54	-13.86	-13.72
	-15.77	-20.55	-14.52	-31.03	-13.65	-13.57
	-16.18	-20.92	-14.92	-35.57	-13.49	-13.46
	-16.97	-21.50	-15.66	-36.01	-13.39	-13.37
	-17.75	-22.21	-16.42	-29.89	-13.25	-13.15
150	-18.43	-22.88	-17.10	-26.56	-13.14	-12.95
	-18.53	-23.56	-17.35	-25.63	-12.99	-12.76
	-18.51	-24.54	-17.54	-26.50	-12.85	-12.67
	-18.53	-25.47	-17.73	-28.38	-12.79	-12.67
	-18.86	-26.62	-18.18	-29.80	-12.76	-12.67
180	-19.52	-27.66	-18.90	-27.27	-12.69	-12.54
	-20.40	-28.59	-19.79	-24.28	-12.63	-12.34
	-21.16	-29.18	-20.52	-22.55	-12.60	-12.18
	-21.55	-29.14	-20.85	-21.38	-12.62	-12.08
	-21.36	-28.58	-20.61	-21.02	-12.54	-11.96
210	-21.13	-27.44	-20.22	-20.69	-12.55	-11.93
	-20.52	-26.34	-19.51	-20.73	-12.59	-11.97
	-19.63	-25.11	-18.55	-18.64	-12.70	-11.71
	-19.40	-24.48	-18.23	-18.52	-12.69	-11.68
	-19.26	-23.34	-17.82	-18.54	-12.82	-11.79
240	-19.16	-22.33	-17.45	-18.85	-12.93	-11.94
	-19.09	-21.48	-17.11	-19.42	-13.03	-12.13
	-18.98	-20.89	-16.82	-20.39	-13.13	-12.38
	-18.72	-20.25	-16.41	-21.58	-13.26	-12.66
	-18.00	-19.67	-15.74	-22.09	-13.40	-12.85
270	-16.70	-19.21	-14.77	-21.14	-13.62	-12.91
	-15.24	-18.99	-13.71	-19.59	-13.72	-12.72
	-14.22	-18.66	-12.88	-18.65	-13.96	-12.69
	-13.70	-18.38	-12.42	-18.80	-14.21	-12.91
	-13.85	-18.13	-12.47	-19.54	-14.39	-13.23
300	-14.22	-17.97	-12.69	-20.57	-14.57	-13.60
	-14.71	-17.91	-13.01	-20.31	-14.76	-13.70
	-14.37	-17.85	-12.76	-19.37	-15.04	-13.67
	-13.54	-17.83	-12.16	-18.90	-15.34	-13.76
	-13.16	-18.06	-11.94	-19.12	-15.52	-13.95
330	-13.46	-18.17	-12.19	-19.44	-15.73	-14.19
	-14.32	-18.30	-12.86	-19.86	-15.92	-14.44
	-15.25	-18.56	-13.58	-19.90	-16.09	-14.58
	-15.75	-18.84	-14.01	-19.65	-16.30	-14.65
	-16.00	-19.19	-14.29	-19.38	-16.53	-14.71
	-16.57	-19.67	-14.84	-19.57	-16.78	-14.94
	-17.76	-20.07	-15.75	-20.15	-16.89	-15.21
	-19.20	-20.68	-16.87	-20.99	-17.12	-15.63
	-20.67	-21.40	-18.01	-21.97	-17.23	-15.98
	-21.92	-21.96	-18.93	-22.41	-17.42	-16.23
	-23.03	-22.69	-19.84	-22.52	-17.55	-16.35
	-24.60	-23.53	-21.02	-21.67	-17.60	-16.17
	-26.37	-24.13	-22.10	-20.93	-17.69	-16.00
	-27.15	-24.81	-22.82	-20.07	-17.71	-15.72
	-25.15	-25.19	-22.16	-19.61	-17.79	-15.60
	-22.68	-25.69	-20.92	-19.36	-17.76	-15.48
	-20.39	-25.45	-19.21	-19.36	-17.65	-15.41

ピーク値	-12.54	-17.83	-11.77	-17.83	-12.54	-11.68
平均値	-16.18	-20.90	-14.92	-20.88	-14.66	-13.73

平均化

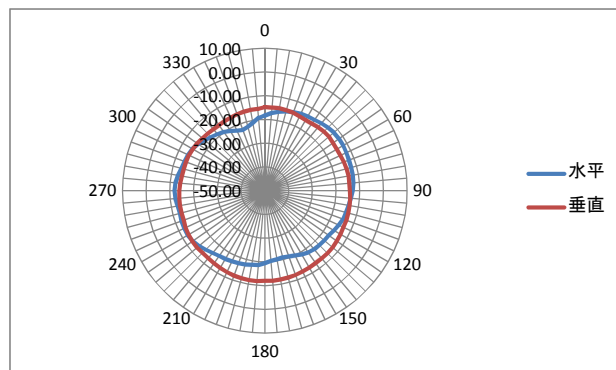


ピーク値	水平平均	垂直平均	平均化利得
-11.68	-14.92	-13.73	-13.73 dBi

サブ1744.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-9.69	-25.71	-9.59	-10.77	-14.91	-9.35
	-9.95	-35.08	-9.93	-10.90	-14.51	-9.33
	-9.88	-36.49	-9.87	-11.14	-14.01	-9.33
	-9.94	-26.04	-9.83	-11.26	-13.56	-9.25
	-9.92	-21.06	-9.60	-11.49	-13.24	-9.27
30	-10.37	-18.10	-9.69	-12.17	-12.75	-9.44
	-10.84	-15.61	-9.59	-13.02	-12.30	-9.63
	-11.41	-13.96	-9.49	-13.36	-11.82	-9.51
	-11.32	-12.57	-8.89	-12.23	-11.40	-8.79
	-10.83	-11.33	-8.07	-11.23	-10.93	-8.07
60	-10.15	-10.30	-7.21	-10.25	-10.50	-7.36
	-9.89	-9.36	-6.61	-9.53	-10.10	-6.80
	-10.18	-8.68	-6.35	-8.91	-9.76	-6.30
	-10.48	-7.96	-6.03	-8.94	-9.46	-6.18
	-10.88	-7.39	-5.78	-8.92	-9.21	-6.05
90	-10.41	-6.89	-5.29	-9.38	-8.88	-6.11
	-10.07	-6.46	-4.89	-8.83	-8.64	-5.72
	-9.76	-6.13	-4.56	-7.59	-8.32	-4.93
	-10.39	-5.79	-4.50	-6.68	-8.08	-4.31
	-10.81	-5.55	-4.42	-6.49	-7.82	-4.09
120	-11.06	-5.37	-4.33	-6.54	-7.62	-4.04
	-11.15	-5.24	-4.25	-6.38	-7.31	-3.81
	-10.92	-5.16	-4.14	-6.54	-7.10	-3.80
	-8.64	-5.12	-3.52	-7.55	-6.82	-4.16
	-6.43	-5.09	-2.70	-8.52	-6.54	-4.41
150	-5.77	-5.17	-2.45	-9.11	-6.24	-4.43
	-6.42	-5.30	-2.81	-8.40	-5.99	-4.02
	-8.38	-5.46	-3.67	-7.90	-5.78	-3.70
	-9.32	-5.67	-4.11	-8.02	-5.51	-3.58
	-7.52	-5.97	-3.66	-7.92	-5.33	-3.42
180	-5.67	-6.31	-2.97	-7.27	-5.09	-3.03
	-4.55	-6.71	-2.49	-6.33	-4.96	-2.58
	-4.64	-7.29	-2.76	-5.68	-4.79	-2.20
	-5.20	-7.78	-3.29	-5.31	-4.70	-1.98
	-6.32	-8.57	-4.29	-5.17	-4.60	-1.87
210	-7.43	-9.24	-5.23	-5.09	-4.57	-1.81
	-8.45	-10.22	-6.23	-5.34	-4.55	-1.92
	-9.72	-11.11	-7.35	-10.09	-4.56	-3.49
	-11.26	-12.35	-8.76	-9.69	-4.62	-3.44
	-13.00	-13.64	-10.30	-9.63	-4.73	-3.52
240	-13.83	-15.05	-11.38	-10.19	-4.84	-3.73
	-14.91	-16.42	-12.59	-11.31	-4.97	-4.07
	-16.88	-18.07	-14.43	-12.78	-5.13	-4.44
	-22.53	-19.42	-17.69	-12.30	-5.34	-4.54
	-27.26	-19.75	-19.04	-9.60	-5.58	-4.13
270	-18.66	-19.31	-15.96	-8.04	-5.80	-3.77
	-14.34	-17.96	-12.77	-7.97	-6.10	-3.92
	-12.94	-16.67	-11.41	-9.65	-6.35	-4.68
	-12.42	-15.36	-10.63	-13.01	-6.70	-5.79
	-11.12	-14.16	-9.37	-11.97	-7.03	-5.82
300	-9.28	-13.35	-7.85	-8.61	-7.48	-5.00
	-8.50	-12.50	-7.05	-7.82	-7.82	-4.81
	-9.27	-11.82	-7.35	-8.47	-8.28	-5.36
	-10.39	-11.25	-7.78	-9.21	-8.79	-5.98
	-9.87	-10.90	-7.34	-8.84	-9.35	-6.08
330	-8.69	-10.54	-6.51	-8.65	-9.84	-6.19
	-8.18	-10.28	-6.09	-8.74	-10.58	-6.56
	-8.48	-10.08	-6.20	-9.38	-11.11	-7.15
	-9.17	-9.95	-6.53	-9.51	-11.86	-7.52
	-10.00	-10.01	-6.99	-9.36	-12.63	-7.68
	-10.76	-10.09	-7.40	-8.50	-13.43	-7.29
	-11.22	-10.19	-7.67	-7.97	-14.14	-7.03
	-11.20	-10.36	-7.75	-8.10	-15.06	-7.30
	-11.45	-10.61	-8.00	-9.19	-16.04	-8.37
	-12.17	-11.02	-8.55	-11.13	-17.13	-10.15
	-13.18	-11.50	-9.25	-12.67	-18.34	-11.63
	-14.16	-12.07	-9.98	-13.52	-19.67	-12.58
	-14.42	-12.87	-10.57	-13.23	-21.21	-12.58
	-13.48	-13.80	-10.63	-12.44	-22.46	-12.03
	-11.86	-15.05	-10.16	-11.47	-24.15	-11.25
	-10.48	-16.32	-9.47	-10.95	-24.86	-10.78
	-9.69	-18.03	-9.09	-10.81	-25.43	-10.66

ピーク値	-4.55	-5.09	-2.45	-5.09	-4.55	-1.81
平均値	-9.65	-9.46	-6.55	-8.84	-7.97	-5.37

平均化

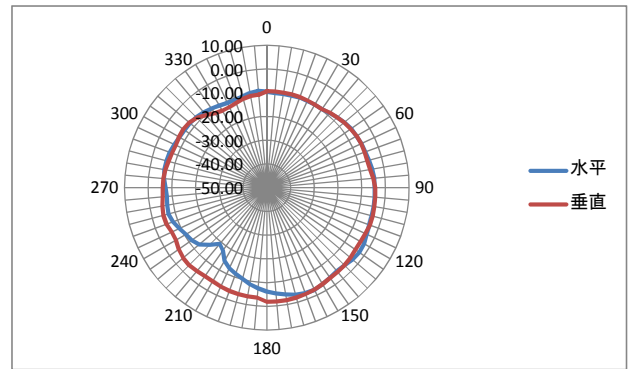


ピーク値	水平平均	垂直平均	平均化利得
-1.81	-6.55	-5.37	-5.37 dBi

サブ1784.9MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-10.41	-13.66	-8.73	-9.31	-13.89	-8.01
	-10.75	-14.95	-9.35	-9.27	-14.37	-8.10
	-11.14	-17.48	-10.23	-9.60	-14.84	-8.46
	-11.51	-20.89	-11.03	-9.77	-15.07	-8.65
	-12.22	-23.65	-11.92	-10.31	-15.11	-9.07
	-13.14	-24.90	-12.86	-11.09	-15.22	-9.67
30	-14.12	-22.63	-13.54	-12.20	-15.25	-10.45
	-14.56	-19.76	-13.42	-12.53	-15.18	-10.64
	-13.75	-17.13	-12.11	-12.05	-15.18	-10.33
	-11.78	-14.88	-10.05	-11.52	-14.92	-9.89
	-10.48	-13.21	-8.62	-10.99	-14.81	-9.48
	-9.79	-11.79	-7.67	-10.80	-14.70	-9.31
60	-10.67	-10.67	-7.66	-10.16	-14.67	-8.84
	-11.83	-9.57	-7.54	-9.63	-14.60	-8.43
	-12.49	-8.80	-7.25	-8.56	-14.57	-7.59
	-11.94	-8.04	-6.55	-8.65	-14.62	-7.67
	-10.90	-7.40	-5.80	-8.84	-14.57	-7.81
	-9.70	-6.82	-5.01	-8.60	-14.52	-7.61
90	-8.90	-6.33	-4.42	-7.15	-14.50	-6.42
	-8.50	-5.98	-4.05	-6.38	-14.36	-5.74
	-8.07	-5.58	-3.63	-5.92	-14.18	-5.32
	-8.06	-5.35	-3.48	-6.07	-13.91	-5.41
	-7.90	-5.17	-3.31	-6.24	-13.52	-5.50
	-7.00	-5.02	-2.89	-7.07	-12.92	-6.07
120	-4.96	-4.97	-1.95	-8.06	-12.37	-6.69
	-3.22	-4.92	-0.98	-9.05	-11.64	-7.14
	-2.58	-4.96	-0.60	-8.10	-11.00	-6.30
	-3.54	-5.02	-1.21	-7.29	-10.08	-5.45
	-6.00	-5.18	-2.56	-6.89	-9.22	-4.89
	-7.77	-5.44	-3.44	-6.59	-8.28	-4.34
150	-6.40	-5.68	-3.01	-6.31	-7.48	-3.84
	-4.32	-6.00	-2.07	-5.94	-6.68	-3.28
	-3.48	-6.41	-1.69	-5.61	-6.03	-2.80
	-3.29	-6.90	-1.72	-5.25	-5.40	-2.32
	-3.81	-7.51	-2.26	-5.01	-4.89	-1.94
	-4.57	-8.17	-3.00	-4.95	-4.36	-1.63
180	-5.62	-9.00	-3.98	-4.92	-3.93	-1.39
	-6.44	-9.87	-4.82	-7.44	-3.57	-2.08
	-7.42	-10.89	-5.81	-7.33	-3.24	-1.81
	-8.78	-12.11	-7.12	-7.58	-3.03	-1.73
	-9.88	-13.37	-8.27	-8.57	-2.79	-1.77
	-11.94	-14.73	-10.10	-10.14	-2.68	-1.96
210	-13.53	-16.22	-11.66	-12.50	-2.64	-2.22
	-18.46	-17.37	-14.87	-11.98	-2.59	-2.11
	-22.86	-17.84	-16.65	-8.68	-2.58	-1.62
	-21.97	-17.16	-15.92	-7.11	-2.62	-1.30
	-15.18	-15.94	-12.53	-7.31	-2.73	-1.43
	-12.47	-14.69	-10.43	-9.59	-2.86	-2.02
240	-10.78	-13.49	-8.92	-13.51	-3.01	-2.64
	-9.99	-12.36	-8.00	-12.04	-3.23	-2.69
	-9.04	-11.33	-7.03	-8.76	-3.45	-2.33
	-9.14	-10.46	-6.74	-7.95	-3.66	-2.28
	-10.00	-9.82	-6.90	-8.47	-3.93	-2.62
	-10.52	-9.14	-6.76	-9.25	-4.17	-2.99
270	-9.45	-8.66	-6.02	-8.78	-4.48	-3.11
	-8.91	-8.25	-5.56	-8.56	-4.78	-3.26
	-9.25	-7.94	-5.54	-8.55	-5.11	-3.49
	-9.78	-7.69	-5.60	-8.82	-5.45	-3.81
	-10.46	-7.52	-5.74	-8.28	-5.79	-3.85
	-11.56	-7.44	-6.02	-8.38	-6.16	-4.12
300	-12.26	-7.49	-6.24	-7.74	-6.53	-4.08
	-12.12	-7.50	-6.21	-7.23	-6.87	-4.04
	-11.12	-7.68	-6.06	-7.30	-7.30	-4.29
	-10.55	-7.84	-5.97	-8.67	-7.71	-5.15
	-10.96	-8.07	-6.27	-10.59	-8.17	-6.20
	-11.99	-8.44	-6.85	-12.64	-8.58	-7.14
330	-12.33	-8.81	-7.21	-13.05	-9.00	-7.56
	-11.67	-9.39	-7.37	-12.50	-9.38	-7.66
	-10.43	-10.03	-7.22	-10.59	-9.76	-7.14
	-9.39	-10.77	-7.01	-9.60	-10.09	-6.83
	-8.52	-11.64	-6.79	-8.61	-10.49	-6.44
	-7.99	-12.88	-6.77	-8.56	-10.82	-6.54

ピーク値	-2.58	-4.92	-0.60	-4.92	-2.58	-1.30
平均値	-8.51	-8.76	-5.62	-8.31	-6.73	-4.44

平均化

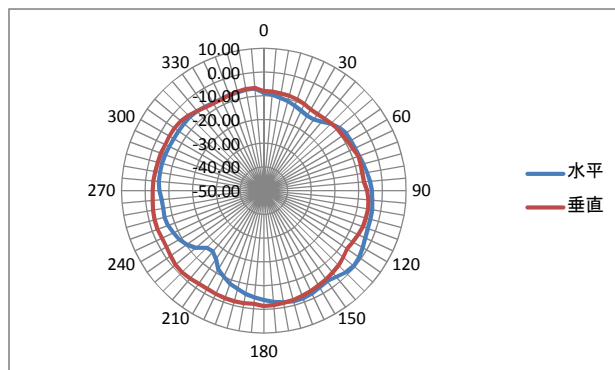


ピーク値	水平平均	垂直平均	平均化利得
-0.60	-5.62	-4.44	-4.44 dBi

サブ1920MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-6.49	-26.65	-6.45	-7.41	-14.57	-6.65
	-6.79	-30.17	-6.77	-7.42	-14.16	-6.58
	-7.41	-26.76	-7.36	-7.77	-13.88	-6.82
	-8.02	-22.13	-7.86	-8.45	-13.42	-7.25
	-8.80	-19.28	-8.43	-9.54	-13.40	-8.05
30	-9.85	-17.42	-9.15	-9.57	-13.41	-8.06
	-10.65	-15.58	-9.44	-8.70	-13.40	-7.44
	-10.60	-14.55	-9.13	-6.96	-13.59	-6.11
	-9.94	-13.62	-8.39	-5.71	-13.89	-5.09
	-10.04	-12.84	-8.21	-5.54	-14.47	-5.02
60	-10.62	-12.18	-8.32	-6.32	-15.22	-5.79
	-12.15	-11.69	-8.90	-7.30	-16.20	-6.77
	-14.02	-11.28	-9.42	-7.05	-17.51	-6.68
	-15.01	-10.89	-9.47	-5.79	-18.92	-5.58
	-15.11	-10.60	-9.29	-4.75	-21.18	-4.66
90	-15.21	-10.40	-9.16	-4.55	-24.12	-4.51
	-15.66	-10.11	-9.04	-4.96	-28.35	-4.94
	-16.74	-10.06	-9.22	-5.47	-35.13	-5.46
	-17.00	-9.96	-9.17	-5.47	-28.41	-5.45
	-17.81	-9.97	-9.31	-5.22	-23.44	-5.16
120	-18.24	-10.02	-9.41	-5.53	-20.04	-5.38
	-16.13	-10.10	-9.13	-6.21	-17.38	-5.89
	-13.38	-10.26	-8.54	-6.55	-15.53	-6.03
	-12.26	-10.42	-8.23	-7.31	-14.01	-6.47
	-10.79	-10.68	-7.72	-8.89	-12.76	-7.40
150	-8.54	-10.93	-6.56	-9.86	-11.64	-7.65
	-6.65	-11.49	-5.42	-8.38	-10.64	-6.36
	-6.73	-11.91	-5.58	-7.04	-9.80	-5.19
	-7.98	-12.65	-6.71	-7.57	-8.99	-5.21
	-9.65	-13.41	-8.13	-9.92	-8.32	-6.04
180	-8.94	-14.53	-7.88	-13.17	-7.63	-6.56
	-7.03	-15.94	-6.50	-12.91	-7.15	-6.13
	-5.67	-17.81	-5.41	-10.96	-6.74	-5.35
	-5.18	-19.95	-5.03	-9.19	-6.29	-4.49
	-5.36	-24.05	-5.30	-8.74	-5.99	-4.14
210	-6.15	-29.19	-6.12	-8.36	-5.74	-3.84
	-7.44	-27.96	-7.41	-8.56	-5.54	-3.78
	-7.85	-21.98	-7.68	-5.30	-5.37	-2.33
	-10.17	-17.99	-9.51	-5.72	-5.28	-2.49
	-13.42	-15.73	-11.41	-6.54	-5.18	-2.79
240	-18.41	-13.60	-12.36	-7.58	-5.20	-3.22
	-25.03	-11.82	-11.61	-8.24	-5.24	-3.47
	-32.85	-10.62	-10.60	-8.54	-5.34	-3.64
	-21.50	-9.41	-9.15	-8.01	-5.46	-3.54
	-17.36	-8.43	-7.91	-7.40	-5.65	-3.43
270	-15.60	-7.61	-6.97	-6.83	-5.94	-3.36
	-14.48	-6.96	-6.25	-6.26	-6.19	-3.22
	-14.17	-6.37	-5.71	-5.83	-6.59	-3.18
	-13.80	-5.87	-5.22	-5.90	-6.93	-3.38
	-13.85	-5.52	-4.92	-6.85	-7.39	-4.10
300	-16.07	-5.17	-4.83	-7.49	-7.86	-4.66
	-18.43	-4.94	-4.75	-6.73	-8.34	-4.45
	-17.24	-4.67	-4.44	-6.30	-8.96	-4.42
	-14.53	-4.64	-4.21	-7.58	-9.67	-5.49
	-14.45	-4.55	-4.13	-9.55	-10.34	-6.92
330	-16.13	-4.57	-4.27	-10.47	-11.04	-7.74
	-17.91	-4.63	-4.43	-9.44	-11.97	-7.52
	-15.17	-4.79	-4.41	-9.96	-13.02	-8.21
	-12.90	-5.00	-4.34	-11.97	-13.99	-9.85
	-13.30	-5.31	-4.67	-13.14	-15.14	-11.02
	-15.91	-5.66	-5.27	-11.12	-16.45	-10.00
	-16.25	-6.08	-5.68	-9.28	-17.61	-8.68
	-13.40	-6.66	-5.82	-9.17	-19.50	-8.79
	-11.27	-7.17	-5.75	-11.04	-21.41	-10.65
	-10.83	-7.87	-6.09	-14.06	-23.10	-13.55
	-11.69	-8.82	-7.01	-15.68	-25.14	-15.22
	-12.08	-9.85	-7.81	-14.23	-25.66	-13.93
	-10.62	-10.92	-7.75	-11.20	-24.59	-11.00
	-8.77	-12.50	-7.24	-8.67	-22.56	-8.50
	-7.34	-14.13	-6.52	-7.45	-20.97	-7.26
	-6.50	-16.51	-6.09	-6.77	-19.42	-6.54
	-6.13	-19.03	-5.91	-6.46	-17.98	-6.17

ピーク値	-5.18	-4.55	-4.13	-4.55	-5.18	-2.33
平均値	-10.44	-9.32	-6.83	-7.63	-9.96	-5.63

平均化

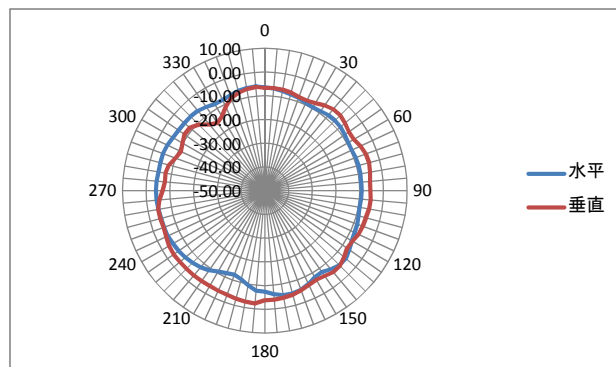


ピーク値	水平平均	垂直平均	平均化利得
-2.33	-6.83	-5.63	-5.63 dBi

サブ1940MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-8.49	-18.69	-8.09	-7.15	-10.80	-5.59
	-8.29	-19.88	-8.00	-7.66	-10.44	-5.82
	-8.40	-20.47	-8.14	-8.51	-10.15	-6.24
	-8.72	-20.13	-8.42	-9.35	-10.08	-6.69
	-9.70	-18.65	-9.18	-10.64	-10.06	-7.33
	-10.51	-17.18	-9.66	-11.31	-10.12	-7.66
30	-10.67	-15.58	-9.46	-10.51	-10.08	-7.28
	-9.85	-14.22	-8.50	-8.47	-10.20	-6.24
	-9.02	-12.97	-7.55	-7.04	-10.40	-5.39
	-9.26	-11.78	-7.33	-6.79	-10.83	-5.35
	-9.88	-10.81	-7.31	-7.51	-11.37	-6.01
	-11.22	-10.14	-7.64	-8.08	-11.91	-6.58
60	-11.83	-9.34	-7.40	-7.61	-12.57	-6.41
	-11.85	-8.75	-7.02	-6.43	-13.44	-5.64
	-11.91	-8.24	-6.69	-5.47	-14.47	-4.96
	-12.71	-7.77	-6.56	-5.25	-15.84	-4.89
	-13.76	-7.41	-6.50	-5.36	-17.52	-5.10
	-15.66	-7.14	-6.57	-5.60	-19.62	-5.43
90	-15.93	-6.98	-6.46	-5.52	-23.06	-5.44
	-15.43	-6.79	-6.23	-5.18	-28.02	-5.15
	-15.45	-6.72	-6.18	-5.03	-35.76	-5.02
	-18.33	-6.67	-6.38	-5.38	-28.11	-5.35
	-17.51	-6.77	-6.42	-5.99	-23.05	-5.90
	-15.18	-6.89	-6.29	-6.55	-19.40	-6.33
120	-12.90	-7.19	-6.16	-7.75	-16.86	-7.24
	-10.17	-7.38	-5.55	-8.83	-14.89	-7.87
	-8.00	-7.78	-4.88	-8.03	-13.20	-6.88
	-7.47	-8.21	-4.81	-6.93	-11.97	-5.75
	-8.30	-8.85	-5.56	-7.25	-10.89	-5.69
	-10.04	-9.62	-6.82	-9.34	-9.73	-6.52
150	-9.96	-10.52	-7.22	-12.23	-8.93	-7.26
	-8.11	-11.68	-6.53	-13.28	-8.35	-7.14
	-6.57	-13.18	-5.71	-11.37	-7.71	-6.15
	-5.57	-14.79	-5.08	-9.11	-7.19	-5.03
	-5.36	-16.54	-5.04	-8.39	-6.65	-4.42
	-5.92	-18.91	-5.71	-8.19	-6.40	-4.19
180	-6.94	-20.67	-6.76	-8.29	-6.07	-4.03
	-7.70	-20.32	-7.47	-7.37	-5.80	-3.51
	-10.12	-18.65	-9.55	-8.05	-5.62	-3.65
	-12.98	-16.09	-11.25	-8.64	-5.49	-3.77
	-18.13	-14.30	-12.79	-9.47	-5.39	-3.96
	-26.25	-12.60	-12.42	-10.38	-5.36	-4.17
210	-23.43	-11.00	-10.75	-11.40	-5.45	-4.46
	-18.12	-10.01	-9.38	-11.30	-5.55	-4.52
	-15.25	-8.99	-8.07	-10.96	-5.72	-4.58
	-13.67	-8.21	-7.12	-9.77	-5.86	-4.38
	-13.60	-7.50	-6.55	-8.44	-6.10	-4.11
	-14.56	-6.93	-6.23	-7.80	-6.53	-4.11
240	-15.52	-6.52	-6.00	-7.81	-6.76	-4.25
	-15.97	-6.10	-5.68	-8.62	-7.21	-4.85
	-18.81	-5.76	-5.55	-8.75	-7.85	-5.27
	-18.67	-5.42	-5.22	-7.48	-8.29	-4.85
	-16.97	-5.24	-4.95	-6.79	-9.04	-4.76
	-15.21	-5.11	-4.70	-7.90	-9.85	-5.76
270	-16.00	-5.06	-4.72	-9.23	-10.74	-6.91
	-17.86	-5.03	-4.81	-9.55	-11.58	-7.44
	-18.92	-5.11	-4.93	-8.75	-12.68	-7.28
	-16.90	-5.24	-4.95	-9.45	-14.03	-8.15
	-16.00	-5.49	-5.12	-11.13	-15.25	-9.71
	-17.53	-5.81	-5.53	-11.90	-16.61	-10.64
300	-23.61	-6.18	-6.11	-10.12	-18.59	-9.54
	-24.58	-6.61	-6.54	-8.78	-19.83	-8.45
	-18.54	-7.22	-6.91	-8.98	-20.01	-8.65
	-15.20	-7.75	-7.03	-10.45	-19.93	-9.99
	-15.62	-8.32	-7.58	-12.47	-19.41	-11.67
	-16.39	-9.24	-8.48	-13.60	-17.70	-12.17
330	-15.19	-10.08	-8.91	-12.39	-16.68	-11.02
	-12.40	-11.02	-8.65	-10.13	-15.29	-8.97
	-10.27	-12.21	-8.12	-8.47	-14.37	-7.48
	-8.88	-13.31	-7.54	-7.39	-13.55	-6.45
	-8.16	-14.44	-7.24	-6.56	-12.68	-5.61
	-7.57	-15.84	-6.96	-6.27	-12.14	-5.27

ピーク値	-5.36	-5.03	-4.70	-5.03	-5.36	-3.51
平均値	-11.12	-8.72	-6.75	-8.13	-9.83	-5.89

平均化

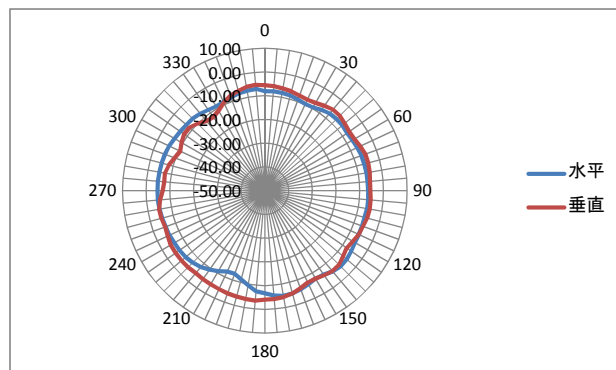


ピーク値	水平平均	垂直平均	平均化利得
-3.51	-6.75	-5.89	-5.89 dBi

サブ1960MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-5.80	-20.27	-5.64	-6.38	-5.80	-3.07
	-6.52	-23.75	-6.44	-6.44	-5.83	-3.11
	-7.22	-28.04	-7.18	-6.91	-5.82	-3.32
	-8.55	-39.43	-8.55	-7.79	-5.89	-3.73
	-10.39	-31.29	-10.35	-8.78	-6.17	-4.27
30	-12.74	-26.03	-12.54	-9.25	-6.30	-4.52
	-13.59	-22.77	-13.09	-8.66	-6.67	-4.54
	-12.15	-19.62	-11.43	-7.01	-6.92	-3.95
	-10.98	-18.23	-10.23	-5.98	-7.40	-3.62
	-11.88	-16.88	-10.69	-5.58	-7.83	-3.55
60	-14.59	-15.86	-12.17	-6.23	-8.48	-4.20
	-17.49	-14.82	-12.94	-7.08	-9.16	-4.99
	-15.60	-14.17	-11.82	-7.08	-9.90	-5.25
	-13.32	-13.60	-10.45	-6.31	-10.85	-5.00
	-13.02	-13.03	-10.01	-5.66	-11.63	-4.68
90	-13.70	-12.66	-10.14	-5.35	-12.81	-4.64
	-14.04	-12.24	-10.03	-5.51	-13.76	-4.91
	-13.44	-12.02	-9.66	-5.77	-14.68	-5.24
	-12.37	-11.80	-9.06	-6.24	-14.97	-5.69
	-11.32	-11.65	-8.47	-6.49	-15.55	-5.98
120	-11.15	-11.74	-8.43	-6.54	-14.87	-5.94
	-11.12	-11.75	-8.41	-6.65	-14.46	-5.99
	-11.85	-11.94	-8.88	-7.29	-13.60	-6.37
	-11.73	-12.01	-8.86	-8.41	-12.70	-7.04
	-11.48	-12.24	-8.83	-10.40	-11.73	-8.00
150	-11.01	-12.66	-8.74	-11.18	-11.02	-8.09
	-11.35	-13.09	-9.12	-10.13	-10.23	-7.17
	-12.35	-13.82	-10.01	-9.23	-9.57	-6.39
	-14.39	-14.67	-11.52	-9.85	-9.04	-6.41
	-17.63	-15.46	-13.40	-12.37	-8.51	-7.02
180	-20.71	-16.70	-15.25	-16.08	-8.10	-7.45
	-19.86	-18.39	-16.06	-15.55	-7.72	-7.06
	-17.11	-19.67	-15.19	-12.45	-7.55	-6.33
	-14.44	-21.60	-13.68	-10.24	-7.22	-5.47
	-12.71	-21.80	-12.20	-9.52	-7.12	-5.14
210	-11.38	-21.20	-10.95	-9.17	-7.04	-4.96
	-9.84	-19.58	-9.40	-9.10	-6.96	-4.89
	-9.28	-17.40	-8.66	-9.00	-6.95	-4.85
	-8.62	-15.45	-7.80	-9.47	-7.10	-5.11
	-8.43	-14.03	-7.37	-9.83	-7.21	-5.32
240	-8.84	-12.65	-7.33	-10.89	-7.38	-5.78
	-10.06	-11.47	-7.70	-11.93	-7.71	-6.32
	-12.12	-10.63	-8.30	-12.75	-8.04	-6.78
	-14.25	-9.73	-8.41	-12.42	-8.46	-6.99
	-14.33	-8.89	-7.80	-11.46	-9.00	-7.05
270	-13.85	-8.29	-7.23	-10.03	-9.52	-6.76
	-13.55	-7.72	-6.71	-8.86	-10.16	-6.45
	-15.63	-7.14	-6.56	-8.53	-10.82	-6.52
	-18.71	-6.68	-6.42	-9.04	-11.60	-7.12
	-25.55	-6.34	-6.29	-9.56	-12.57	-7.79
300	-34.91	-6.00	-5.99	-9.49	-13.41	-8.01
	-21.86	-5.77	-5.66	-8.72	-14.19	-7.63
	-17.12	-5.55	-5.26	-8.72	-14.98	-7.80
	-16.31	-5.41	-5.07	-10.00	-15.68	-8.96
	-15.88	-5.40	-5.03	-11.62	-15.58	-10.16
330	-14.48	-5.35	-4.85	-11.82	-15.56	-10.29
	-12.64	-5.47	-4.71	-10.99	-14.74	-9.46
	-10.98	-5.51	-4.43	-11.65	-13.80	-9.58
	-10.44	-5.70	-4.45	-13.65	-12.66	-10.12
	-10.33	-5.91	-4.57	-14.82	-11.98	-10.16
	-10.17	-6.24	-4.76	-12.43	-11.08	-8.69
	-9.20	-6.64	-4.72	-10.61	-10.08	-7.33
	-8.23	-7.06	-4.59	-10.44	-9.36	-6.86
	-7.79	-7.59	-4.68	-11.87	-8.70	-6.99
	-7.65	-8.16	-4.89	-14.38	-8.09	-7.17
	-8.19	-9.06	-5.59	-15.68	-7.48	-6.87
	-8.55	-9.78	-6.11	-13.88	-7.11	-6.28
	-8.50	-10.65	-6.43	-11.59	-6.67	-5.46
	-7.76	-11.95	-6.35	-9.49	-6.36	-4.64
	-7.06	-13.33	-6.14	-8.35	-6.12	-4.08
	-6.75	-14.99	-6.14	-7.64	-5.92	-3.69
	-6.94	-16.76	-6.51	-7.43	-5.85	-3.56

ピーク値	-5.80	-5.35	-4.43	-5.35	-5.80	-3.07
平均値	-10.93	-10.20	-7.54	-8.82	-8.85	-5.82

平均化

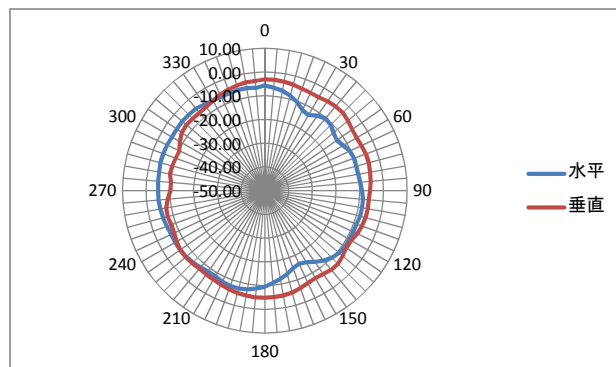


ピーク値	水平平均	垂直平均	平均化利得
-3.07	-7.54	-5.82	-5.82 dBi

サブ1980MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-11.48	-20.18	-10.93	-7.51	-10.29	-5.67
	-12.82	-22.10	-12.33	-8.10	-10.52	-6.13
	-13.69	-25.53	-13.41	-8.85	-11.08	-6.82
	-16.49	-29.91	-16.30	-9.81	-11.61	-7.61
	-17.87	-41.10	-17.85	-10.78	-12.10	-8.38
30	-15.76	-34.58	-15.70	-10.92	-12.37	-8.57
	-13.52	-29.66	-13.42	-9.60	-12.80	-7.90
	-12.38	-25.56	-12.17	-7.92	-13.22	-6.80
	-12.67	-23.51	-12.32	-6.91	-13.62	-6.07
	-13.46	-21.18	-12.78	-7.32	-13.68	-6.41
60	-13.75	-19.82	-12.79	-8.21	-13.73	-7.14
	-12.43	-18.33	-11.43	-8.67	-13.56	-7.45
	-11.24	-17.74	-10.36	-7.72	-13.85	-6.77
	-10.44	-16.62	-9.50	-6.47	-13.84	-5.74
	-9.75	-15.92	-8.81	-5.89	-13.64	-5.22
90	-8.64	-15.57	-7.84	-5.87	-14.24	-5.28
	-7.48	-14.74	-6.73	-5.73	-13.94	-5.12
	-6.86	-14.58	-6.18	-5.41	-14.28	-4.88
	-7.30	-14.42	-6.53	-5.46	-14.20	-4.92
	-7.52	-14.10	-6.65	-6.06	-14.30	-5.45
120	-6.61	-14.09	-5.89	-6.01	-14.16	-5.40
	-5.74	-14.28	-5.17	-5.82	-14.23	-5.23
	-6.17	-14.52	-5.57	-6.04	-14.15	-5.42
	-7.52	-14.84	-6.78	-7.17	-14.26	-6.40
	-8.86	-15.41	-7.99	-8.79	-14.24	-7.70
150	-8.10	-15.96	-7.44	-9.05	-14.36	-7.93
	-7.22	-16.67	-6.75	-7.99	-14.55	-7.12
	-7.57	-17.66	-7.16	-7.27	-14.54	-6.53
	-9.01	-18.95	-8.59	-8.11	-14.68	-7.24
	-11.58	-20.18	-11.01	-10.48	-14.97	-9.16
180	-15.03	-22.00	-14.24	-13.75	-15.16	-11.39
	-15.88	-24.10	-15.27	-13.38	-15.05	-11.12
	-15.47	-25.95	-15.09	-11.77	-15.34	-10.19
	-15.09	-26.97	-14.81	-10.31	-15.01	-9.04
	-16.10	-25.03	-15.57	-9.90	-15.18	-8.77
210	-17.23	-24.25	-16.44	-9.99	-14.73	-8.73
	-20.36	-22.20	-18.17	-10.51	-14.76	-9.12
	-36.78	-19.22	-19.14	-10.46	-14.30	-8.96
	-24.98	-17.33	-16.64	-11.44	-14.03	-9.53
	-20.93	-15.31	-14.26	-12.92	-13.51	-10.19
240	-17.11	-14.13	-12.36	-14.48	-12.91	-10.61
	-17.16	-13.01	-11.60	-15.21	-12.57	-10.68
	-17.02	-11.77	-10.63	-15.28	-11.93	-10.28
	-20.54	-10.69	-10.26	-13.98	-11.57	-9.60
	-29.23	-9.79	-9.74	-13.03	-10.96	-8.86
270	-28.87	-9.01	-8.97	-12.17	-10.46	-8.22
	-21.28	-8.30	-8.09	-11.82	-9.87	-7.73
	-18.71	-7.73	-7.39	-12.27	-9.42	-7.61
	-19.52	-7.24	-6.99	-12.80	-8.93	-7.43
	-20.42	-6.63	-6.45	-12.73	-8.36	-7.01
300	-18.41	-6.45	-6.18	-12.02	-8.02	-6.57
	-14.24	-6.02	-5.41	-11.55	-7.55	-6.09
	-11.59	-5.75	-4.75	-11.62	-7.16	-5.83
	-11.45	-5.59	-4.58	-13.05	-6.77	-5.85
	-11.95	-5.50	-4.61	-13.97	-6.53	-5.81
330	-10.85	-5.41	-4.32	-14.10	-6.27	-5.61
	-9.97	-5.55	-4.21	-13.06	-5.99	-5.21
	-9.71	-5.63	-4.20	-13.28	-5.99	-5.25
	-10.12	-5.79	-4.43	-14.53	-5.85	-5.30
	-10.11	-6.08	-4.63	-15.41	-5.77	-5.33
	-9.93	-6.47	-4.85	-13.41	-5.74	-5.06
	-9.67	-6.81	-5.00	-11.81	-5.78	-4.81
	-10.56	-7.27	-5.60	-11.79	-6.02	-5.00
	-11.70	-7.73	-6.27	-13.15	-5.92	-5.17
	-12.72	-8.44	-7.06	-15.29	-6.16	-5.66
	-12.31	-9.33	-7.56	-16.02	-6.36	-5.92
	-11.77	-10.07	-7.83	-13.71	-6.59	-5.82
	-11.16	-11.01	-8.07	-11.29	-6.76	-5.45
	-10.92	-11.81	-8.33	-9.85	-7.08	-5.24
	-11.63	-13.13	-9.31	-8.91	-7.42	-5.09
	-11.87	-14.52	-9.98	-8.32	-7.87	-5.08
	-12.23	-15.96	-10.69	-7.92	-8.14	-5.02

ピーク値	-5.74	-5.41	-4.20	-5.41	-5.74	-4.81
平均値	-11.28	-10.87	-8.06	-9.47	-9.82	-6.63

平均化

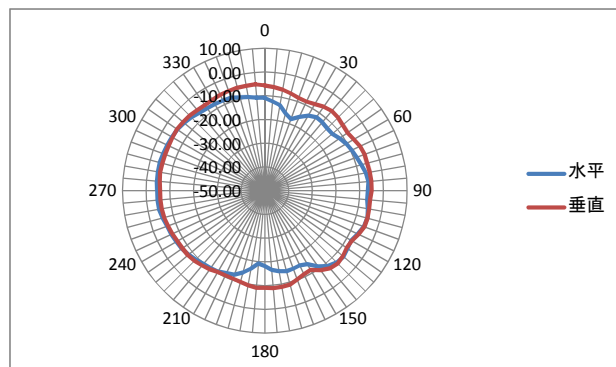


ピーク値 水平平均 垂直平均 平均化利得
 -4.20 -8.06 -6.63 -6.63 dBi

サブ2130MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-10.25	-15.42	-9.10	-7.02	-26.00	-6.97
	-9.68	-16.16	-8.80	-6.98	-25.81	-6.92
	-9.81	-16.67	-9.00	-7.30	-25.84	-7.24
	-9.86	-16.24	-8.96	-8.49	-26.15	-8.41
	-10.40	-16.13	-9.37	-10.10	-27.95	-10.03
30	-11.09	-15.56	-9.76	-10.25	-29.43	-10.20
	-12.27	-14.34	-10.17	-9.32	-34.67	-9.31
	-12.50	-13.64	-10.02	-9.21	-44.86	-9.21
	-11.64	-12.99	-9.25	-10.27	-31.79	-10.24
	-11.82	-12.31	-9.05	-12.24	-26.95	-12.09
60	-12.37	-11.52	-8.91	-13.09	-23.07	-12.67
	-14.60	-10.93	-9.38	-11.13	-20.28	-10.63
	-16.66	-10.25	-9.36	-8.76	-17.66	-8.23
	-15.08	-9.84	-8.70	-7.76	-15.95	-7.15
	-12.73	-9.36	-7.71	-7.66	-14.04	-6.76
90	-13.24	-9.05	-7.65	-7.21	-12.72	-6.14
	-14.91	-8.75	-7.81	-6.56	-11.70	-5.40
	-12.67	-8.49	-7.08	-6.71	-10.53	-5.20
	-10.39	-8.41	-6.28	-6.62	-9.52	-4.82
	-10.81	-8.56	-6.53	-5.47	-8.65	-3.76
120	-11.76	-8.74	-6.98	-4.86	-7.89	-3.10
	-10.57	-9.03	-6.72	-5.73	-7.16	-3.38
	-8.89	-9.39	-6.12	-6.51	-6.57	-3.53
	-9.08	-9.87	-6.44	-6.14	-6.01	-3.06
	-8.82	-10.49	-6.56	-6.19	-5.47	-2.80
150	-6.07	-11.26	-4.92	-8.53	-5.05	-3.44
	-4.03	-12.05	-3.39	-9.37	-4.68	-3.41
	-4.16	-13.10	-3.64	-6.71	-4.38	-2.38
	-5.84	-14.28	-5.26	-5.05	-4.14	-1.56
	-9.30	-15.90	-8.44	-6.02	-3.88	-1.81
180	-9.13	-17.96	-8.60	-8.92	-3.67	-2.54
	-5.90	-20.73	-5.76	-13.07	-3.52	-3.06
	-3.99	-24.55	-3.95	-12.06	-3.48	-2.92
	-3.40	-30.75	-3.39	-9.52	-3.43	-2.48
	-4.25	-34.21	-4.25	-9.10	-3.40	-2.36
210	-5.89	-26.70	-5.85	-8.76	-3.43	-2.31
	-8.86	-22.47	-8.68	-9.35	-3.46	-2.46
	-11.67	-18.84	-10.91	-11.00	-3.63	-2.90
	-17.97	-16.75	-14.31	-11.30	-3.73	-3.03
	-21.06	-14.49	-13.62	-11.70	-3.92	-3.25
240	-18.47	-13.10	-11.99	-11.62	-4.19	-3.47
	-18.72	-11.75	-10.96	-12.00	-4.39	-3.69
	-24.46	-10.47	-10.30	-13.10	-4.67	-4.09
	-21.60	-9.61	-9.35	-13.04	-4.99	-4.36
	-13.56	-8.68	-7.46	-11.08	-5.27	-4.26
270	-10.47	-7.84	-5.95	-10.63	-5.68	-4.47
	-10.91	-7.17	-5.64	-12.63	-6.01	-5.16
	-15.01	-6.66	-6.07	-15.27	-6.49	-5.95
	-16.42	-6.16	-5.77	-16.32	-6.92	-6.45
	-11.12	-5.80	-4.68	-13.29	-7.42	-6.42
300	-9.24	-5.43	-3.92	-11.03	-7.93	-6.20
	-10.76	-5.25	-4.17	-10.77	-8.55	-6.51
	-10.79	-5.02	-4.00	-11.81	-9.03	-7.19
	-8.19	-4.89	-3.22	-12.14	-9.62	-7.69
	-7.46	-4.86	-2.96	-11.17	-10.32	-7.71
330	-9.56	-4.86	-3.59	-10.15	-10.98	-7.53
	-11.91	-4.91	-4.12	-8.56	-11.67	-6.83
	-10.61	-4.99	-3.94	-8.00	-12.41	-6.65
	-8.98	-5.20	-3.68	-8.03	-13.23	-6.88
	-9.08	-5.45	-3.88	-8.06	-14.15	-7.10
	-10.32	-5.71	-4.42	-7.62	-15.06	-6.90
	-10.19	-6.11	-4.68	-7.31	-15.82	-6.74
	-9.42	-6.48	-4.70	-8.18	-16.99	-7.64
	-9.44	-7.00	-5.04	-9.79	-17.53	-9.12
	-11.34	-7.51	-6.01	-9.84	-18.23	-9.25
	-14.83	-8.11	-7.27	-8.89	-19.11	-8.49
	-17.59	-8.93	-8.37	-8.40	-19.75	-8.09
	-17.65	-9.77	-9.12	-9.49	-20.08	-9.12
	-16.13	-10.87	-9.74	-10.36	-20.80	-9.98
	-12.22	-12.20	-9.20	-10.52	-20.93	-10.15
	-10.42	-13.72	-8.76	-9.22	-21.06	-8.94
	-9.82	-15.35	-8.75	-8.06	-21.18	-7.85

ピーク値	-3.40	-4.86	-2.96	-4.86	-3.40	-1.56
平均値	-9.70	-9.15	-6.40	-8.80	-7.85	-5.29

平均化

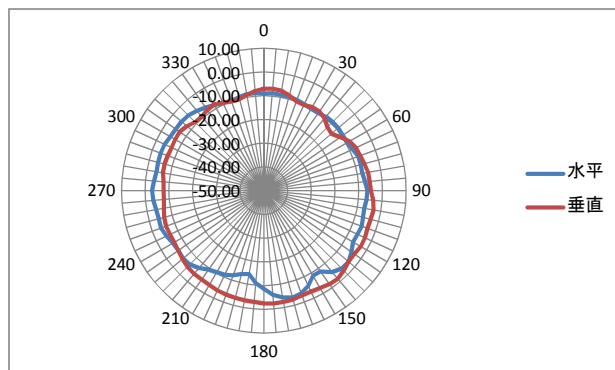


ピーク値	水平平均	垂直平均	平均化利得
-1.56	-6.40	-5.29	-5.29 dBi

サブ2130MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-8.87	-14.40	-7.79	-7.12	-24.62	-7.05
	-8.88	-13.28	-7.53	-7.43	-26.34	-7.37
	-9.27	-12.31	-7.52	-8.09	-27.75	-8.04
	-9.48	-11.44	-7.34	-8.76	-29.59	-8.72
	-10.09	-10.51	-7.28	-9.35	-30.17	-9.32
30	-10.79	-9.84	-7.28	-9.19	-28.87	-9.14
	-12.11	-9.32	-7.48	-7.52	-27.62	-7.48
	-12.27	-8.96	-7.29	-6.39	-24.98	-6.33
	-11.75	-8.61	-6.89	-6.95	-22.03	-6.82
	-11.98	-8.34	-6.78	-9.04	-19.99	-8.70
60	-14.06	-8.08	-7.10	-11.57	-18.04	-10.68
	-19.78	-7.97	-7.69	-11.34	-16.20	-10.11
	-27.98	-7.95	-7.91	-9.83	-14.88	-8.65
	-24.50	-7.96	-7.87	-8.11	-13.58	-7.02
	-18.39	-7.89	-7.52	-7.36	-12.33	-6.16
90	-17.49	-8.03	-7.56	-6.55	-11.33	-5.30
	-21.61	-8.19	-7.99	-6.13	-10.43	-4.76
	-16.98	-8.50	-7.92	-6.68	-9.66	-4.91
	-13.46	-8.76	-7.49	-7.33	-8.76	-4.98
	-12.77	-9.23	-7.64	-6.16	-8.20	-4.05
120	-13.99	-9.78	-8.38	-5.05	-7.59	-3.13
	-13.34	-10.41	-8.62	-5.10	-6.93	-2.91
	-11.56	-11.08	-8.30	-5.87	-6.67	-3.24
	-10.83	-12.08	-8.40	-5.53	-6.08	-2.79
	-9.51	-12.95	-7.89	-5.93	-5.74	-2.82
150	-6.74	-14.13	-6.01	-8.16	-5.34	-3.51
	-5.27	-15.57	-4.88	-8.50	-5.18	-3.52
	-6.01	-17.57	-5.71	-5.46	-4.84	-2.12
	-7.94	-20.15	-7.68	-4.08	-4.72	-1.38
	-11.42	-22.94	-11.12	-5.24	-4.49	-1.84
180	-9.56	-26.80	-9.47	-8.37	-4.30	-2.86
	-6.11	-26.96	-6.07	-13.37	-4.19	-3.70
	-4.45	-22.00	-4.38	-12.35	-4.16	-3.54
	-4.08	-18.35	-3.92	-9.64	-4.08	-3.01
	-4.92	-15.89	-4.58	-8.80	-4.08	-2.82
210	-6.55	-13.80	-5.80	-8.46	-4.18	-2.80
	-9.76	-12.18	-7.79	-9.53	-4.29	-3.15
	-7.15	-10.84	-5.61	-9.72	-4.37	-3.26
	-7.96	-9.35	-5.59	-11.09	-4.54	-3.67
	-9.70	-8.33	-5.95	-11.43	-4.68	-3.85
240	-12.19	-7.58	-6.29	-10.23	-4.89	-3.77
	-14.82	-6.76	-6.13	-8.32	-5.13	-3.43
	-15.53	-6.19	-5.72	-7.05	-5.38	-3.13
	-14.45	-5.65	-5.11	-6.97	-5.73	-3.29
	-12.33	-5.18	-4.42	-8.03	-6.02	-3.90
270	-11.49	-4.85	-4.00	-8.53	-6.54	-4.41
	-11.69	-4.57	-3.80	-7.75	-6.90	-4.29
	-11.69	-4.38	-3.64	-7.68	-7.41	-4.53
	-11.10	-4.25	-3.43	-8.53	-7.87	-5.18
	-10.48	-4.10	-3.20	-8.52	-8.46	-5.48
300	-10.04	-4.12	-3.13	-8.08	-8.81	-5.42
	-10.62	-4.08	-3.21	-8.27	-9.39	-5.78
	-12.16	-4.09	-3.46	-9.82	-10.03	-6.91
	-11.18	-4.15	-3.36	-11.26	-10.67	-7.94
	-8.28	-4.29	-2.83	-10.88	-11.39	-8.11
330	-7.71	-4.45	-2.77	-11.00	-12.01	-8.46
	-9.47	-4.60	-3.38	-11.52	-12.90	-9.14
	-11.03	-4.93	-3.97	-10.28	-13.69	-8.65
	-10.90	-5.19	-4.16	-10.09	-14.63	-8.78
	-12.27	-5.45	-4.63	-12.30	-15.42	-10.57
	-17.81	-5.87	-5.60	-15.97	-16.42	-13.18
	-16.69	-6.26	-5.88	-13.08	-17.45	-11.73
	-12.19	-6.86	-5.75	-8.95	-18.58	-8.50
	-10.68	-7.36	-5.70	-7.55	-19.47	-7.28
	-12.12	-7.99	-6.57	-8.83	-20.78	-8.56
	-16.88	-8.62	-8.02	-12.11	-22.01	-11.69
	-26.18	-9.38	-9.29	-13.66	-22.93	-13.17
	-21.74	-10.25	-9.95	-13.23	-23.64	-12.85
	-20.30	-11.02	-10.53	-12.82	-24.67	-12.54
	-23.97	-11.79	-11.53	-11.67	-23.97	-11.42
	-24.64	-12.18	-11.94	-10.36	-25.15	-10.22
	-14.65	-12.52	-10.45	-9.35	-24.53	-9.22

ピーク値 -4.08 -4.08 **-2.77** -4.08 -4.08 **-1.38**
 平均値 -10.39 -7.92 **-5.97** -8.35 -8.40 **-5.37**

平均化

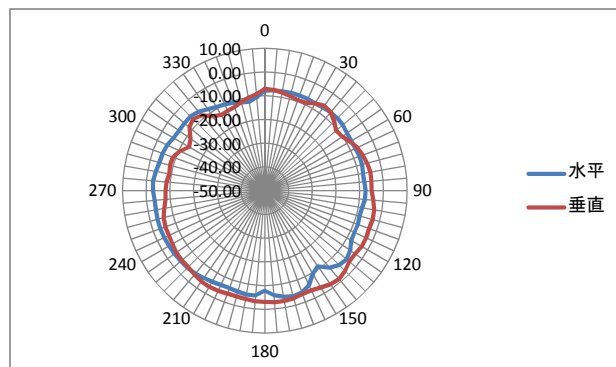


ピーク値 水平平均 垂直平均 平均化利得
 -1.38 -5.97 -5.37 -5.37 dBi

サブ2170MHz詳細

角度	h-h			v-v		
	順	クロス	水平	順	クロス	垂直
0	-10.48	-15.33	-9.25	-6.63	-16.74	-6.22
	-11.21	-14.56	-9.55	-6.81	-16.29	-6.34
	-11.60	-13.59	-9.47	-7.83	-15.99	-7.21
	-11.48	-12.89	-9.12	-9.13	-15.47	-8.22
	-11.15	-12.18	-8.62	-10.13	-14.93	-8.89
30	-12.33	-11.63	-8.96	-10.55	-14.39	-9.04
	-13.89	-11.16	-9.30	-8.90	-13.60	-7.63
	-13.82	-10.86	-9.08	-7.01	-13.22	-6.08
	-12.48	-10.39	-8.30	-6.76	-12.52	-5.74
	-12.24	-10.03	-7.99	-8.69	-11.98	-7.02
60	-14.21	-9.72	-8.40	-10.90	-11.28	-8.07
	-19.29	-9.54	-9.10	-11.37	-10.79	-8.06
	-26.47	-9.51	-9.42	-10.73	-10.20	-7.45
	-34.22	-9.36	-9.34	-9.55	-9.59	-6.56
	-42.77	-9.40	-9.39	-9.13	-9.02	-6.06
90	-40.86	-9.57	-9.57	-8.22	-8.44	-5.32
	-25.78	-9.71	-9.60	-6.92	-8.05	-4.44
	-17.88	-9.96	-9.31	-6.84	-7.50	-4.15
	-15.65	-10.37	-9.24	-7.50	-7.04	-4.25
	-14.98	-10.79	-9.39	-7.36	-6.62	-3.97
120	-13.47	-11.42	-9.32	-6.30	-6.28	-3.28
	-11.98	-12.19	-9.07	-5.81	-5.87	-2.83
	-11.73	-13.07	-9.34	-6.57	-5.57	-3.03
	-10.88	-14.13	-9.20	-6.81	-5.28	-2.96
	-8.86	-15.69	-8.04	-7.28	-5.05	-3.01
150	-6.85	-16.88	-6.44	-9.05	-4.84	-3.44
	-6.19	-18.84	-5.96	-10.21	-4.68	-3.61
	-8.26	-20.67	-8.02	-7.25	-4.54	-2.68
	-11.71	-23.30	-11.42	-5.27	-4.46	-1.84
	-11.82	-25.68	-11.64	-5.64	-4.42	-1.98
180	-8.14	-25.36	-8.06	-8.53	-4.43	-3.00
	-5.41	-22.36	-5.32	-14.79	-4.51	-4.12
	-4.42	-19.42	-4.29	-15.12	-4.63	-4.26
	-4.74	-16.99	-4.49	-11.23	-4.71	-3.84
	-6.10	-15.15	-5.59	-10.01	-4.95	-3.77
210	-8.68	-13.31	-7.39	-9.74	-5.15	-3.85
	-12.55	-12.19	-9.35	-10.78	-5.44	-4.33
	-18.06	-10.93	-10.16	-12.81	-5.75	-4.97
	-26.16	-9.78	-9.68	-15.13	-6.12	-5.61
	-22.08	-8.89	-8.69	-14.67	-6.57	-5.94
240	-21.74	-8.11	-7.92	-11.96	-7.05	-5.83
	-27.75	-7.40	-7.36	-9.69	-7.43	-5.41
	-25.05	-6.95	-6.88	-8.70	-7.96	-5.30
	-15.95	-6.54	-6.07	-8.49	-8.49	-5.48
	-12.07	-6.08	-5.10	-9.57	-9.14	-6.34
270	-10.63	-5.87	-4.62	-10.61	-9.62	-7.08
	-12.21	-5.59	-4.74	-9.84	-10.19	-7.00
	-16.48	-5.45	-5.12	-9.17	-10.97	-6.97
	-15.55	-5.32	-4.93	-9.83	-11.40	-7.53
	-12.75	-5.27	-4.56	-9.55	-12.37	-7.73
300	-11.69	-5.31	-4.41	-9.02	-12.99	-7.56
	-10.19	-5.27	-4.06	-9.24	-13.84	-7.95
	-8.63	-5.32	-3.66	-11.13	-14.47	-9.47
	-9.36	-5.47	-3.98	-11.22	-15.04	-9.71
	-11.48	-5.59	-4.60	-10.09	-16.04	-9.10
330	-11.33	-5.70	-4.65	-10.65	-16.82	-9.71
	-9.31	-6.04	-4.36	-11.73	-17.30	-10.66
	-9.65	-6.30	-4.65	-10.46	-18.28	-9.80
	-10.79	-6.54	-5.15	-10.09	-18.85	-9.54
	-11.42	-6.92	-5.60	-11.91	-19.51	-11.21
	-11.65	-7.34	-5.97	-14.20	-20.15	-13.21
	-12.86	-7.76	-6.59	-10.72	-20.59	-10.29
	-13.78	-8.30	-7.21	-7.42	-21.25	-7.24
	-13.52	-8.84	-7.56	-7.05	-21.38	-6.89
	-12.47	-9.30	-7.59	-9.45	-21.74	-9.20
	-11.96	-9.97	-7.84	-13.31	-21.74	-12.73
	-12.69	-10.49	-8.44	-15.47	-21.49	-14.50
	-12.46	-11.15	-8.74	-14.66	-21.70	-13.88
	-11.18	-11.76	-8.45	-12.74	-21.19	-12.16
	-9.28	-12.12	-7.46	-10.52	-21.55	-10.19
	-7.73	-12.49	-6.47	-9.26	-20.51	-8.95
	-7.04	-12.73	-6.00	-8.72	-19.88	-8.40

ピーク値	-4.42	-5.27	-3.66	-5.27	-4.42	-1.84
平均値	-10.96	-9.14	-6.94	-9.10	-8.80	-5.94

平均化

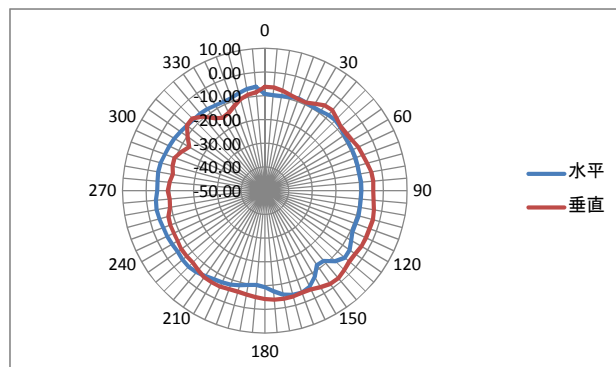

ピーク値	水平平均	垂直平均	平均化利得
-1.84	-6.94	-5.94	-5.94 dBi